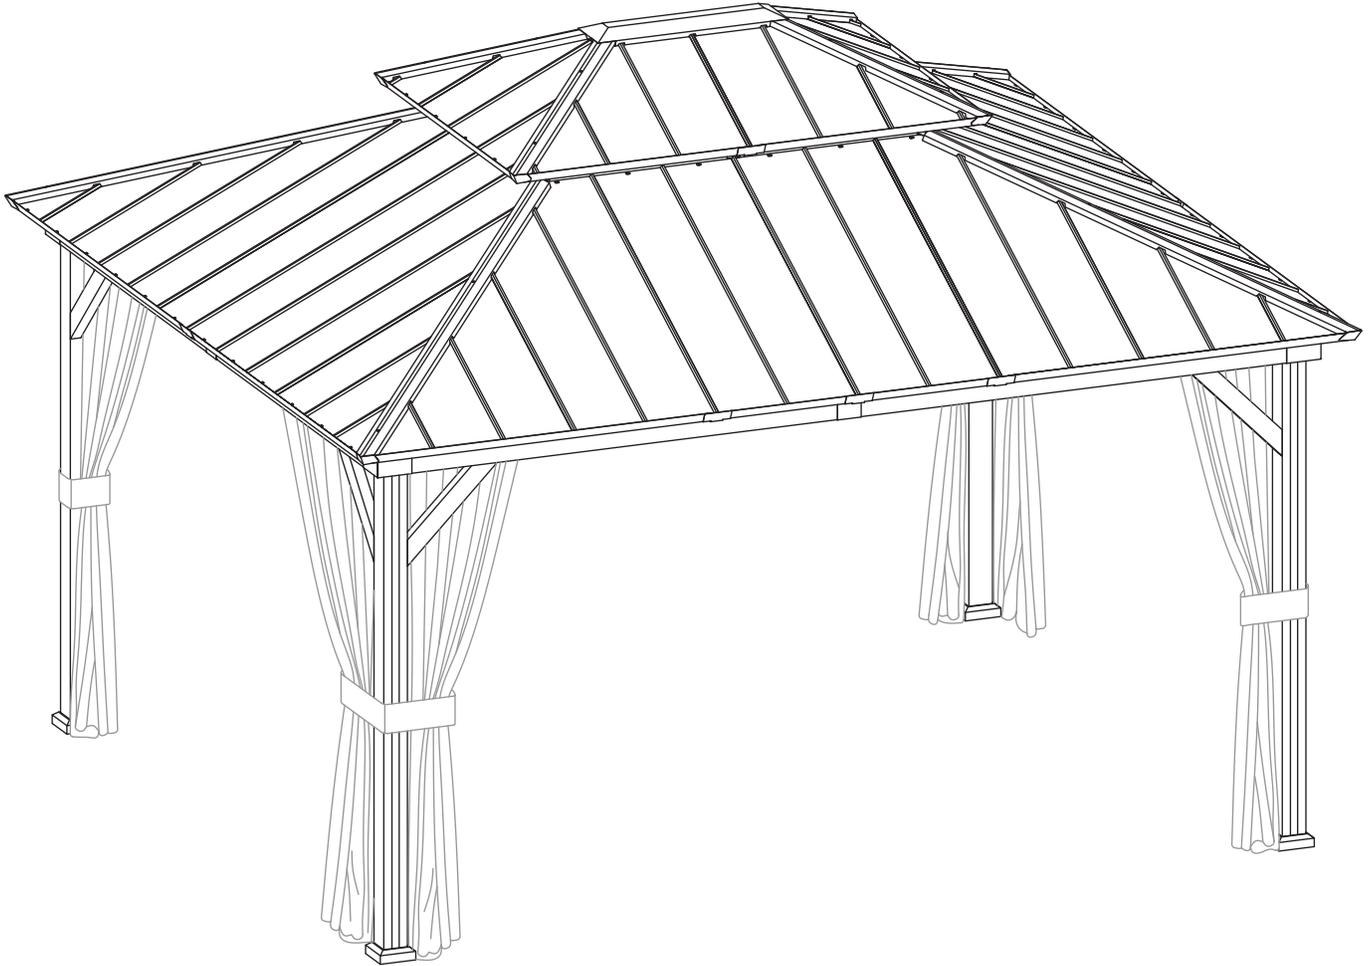


**MODEL: IG10600042-1214S**



OWNER'S MANUAL

## 12' X 14' Four Seasons Hard Top Gazebo with LED Lighting

### TABLE OF CONTENTS

ASSEMBLY GUIDE.....	02
USING YOUR PRODUCT.....	05

May 5, 2024

### QUESTIONS?



E-mail: [support@modernshade.org](mailto:support@modernshade.org)



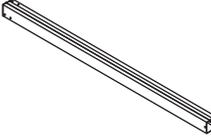
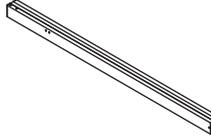
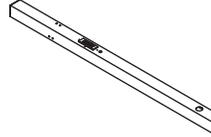
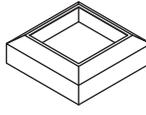
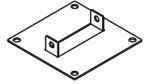
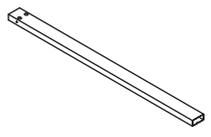
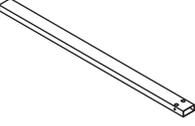
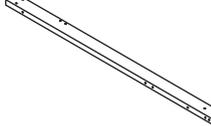
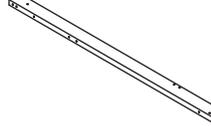
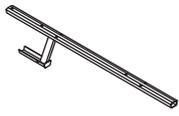
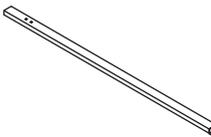
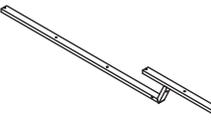
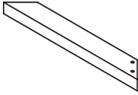
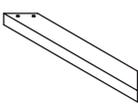
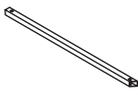
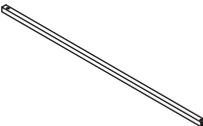
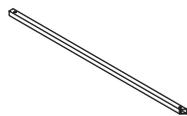
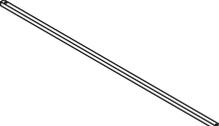
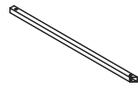
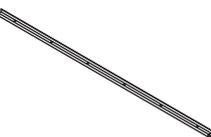
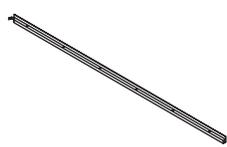
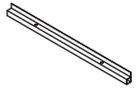
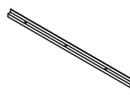
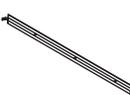
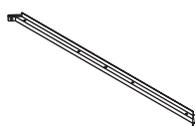
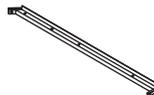
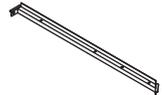
Toll Free: 1-888-666-3070



























Mon-Fri: 9:00 ---17:00 PST.











# ASSEMBLY GUIDE

## PARTS LIST

<b>A1</b> Post 1 (2 pieces) 	<b>A2</b> Post 2 (1 piece) 	<b>A3</b> Post 3 (1 piece) 	<b>B</b> Foot Cover (4 pieces) 	<b>C</b> Foot Base (4 pieces) 	<b>D1</b> Cross Beam 1 (2 pieces) 
P0008008526	P0008008527	P0008008648	P0008008932	P0008008933	P0008008946
<b>D2</b> Cross Beam 2 (2 pieces) 	<b>D3</b> Cross Beam 3 (2 pieces) 	<b>D4</b> Cross Beam 4 (2 pieces) 	<b>E1</b> Roof Rib 1 (4 pieces) 	<b>E2</b> Roof Rib 2 (4 pieces) 	<b>E3</b> Roof Rib 3 (4 pieces) 
P0008008947	P0008008952	P0008008953	P0008008651	P0008008652	P0008008684
<b>F1</b> Middle Cross Beam 1 (6 pieces) 	<b>F2</b> Middle Cross Beam 2 (2 pieces) 	<b>G1</b> Support Bracket 1 (4 pieces) 	<b>G2</b> Support Bracket 2 (4 pieces) 	<b>H1</b> Mosquito Net Rod 1 (4 pieces) 	<b>H2</b> Mosquito Net Rod 2 (4 pieces) 
P0008008654	P0008008685	P0008008542	P0008008543	P0008008544	P0008008686
<b>J1</b> Top Beam 1 (4 pieces) 	<b>J2</b> Top Beam 2 (4 pieces) 	<b>J3</b> Top Beam 3 (4 pieces) 	<b>J4</b> Top Beam 4 (4 pieces) 	<b>J5</b> Top Beam 5 (8 pieces) 	<b>J6</b> Top Beam 6 (4 pieces) 
P0008008656	P0008008657	P0008008658	P0008008659	P0008008687	P0008008688
<b>J7</b> Top Beam 7 (2 pieces) 	<b>K1</b> Roof Lower Border 1 (2 pieces) 	<b>K2</b> Roof Lower Border 2 (2 pieces) 	<b>K3</b> Roof Lower Border 3 (2 pieces) 	<b>K4</b> Roof Lower Border 4 (2 pieces) 	<b>K5</b> Roof Lower Border 5 (4 pieces) 
P0008008689	P0008008550	P0008008551	P0008008660	P0008008661	P0008008690
<b>L1</b> Roof Top Border 1 (2 pieces) 	<b>L2</b> Roof Top Border 2 (2 pieces) 	<b>L3</b> Roof Top Border 3 (2 pieces) 	<b>M1</b> Roof Upper Border 1 (2 pieces) 	<b>M2</b> Roof Upper Border 2 (2 pieces) 	<b>M3</b> Roof Upper Border 3 (2 pieces) 
P0008008662	P0008008691	P0008008692	P0008008664	P0008008693	P0008008694
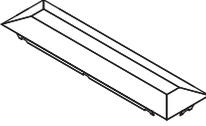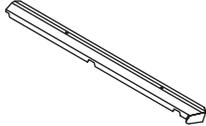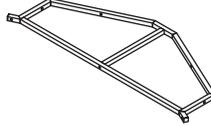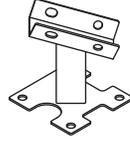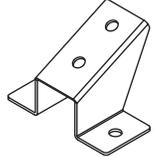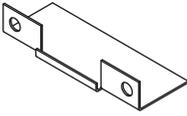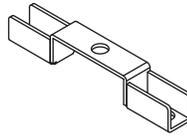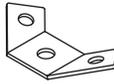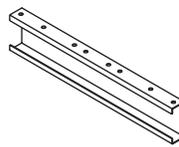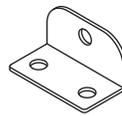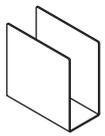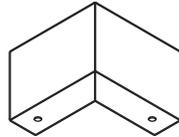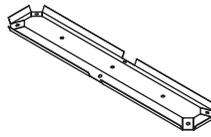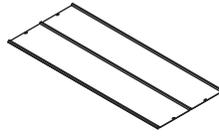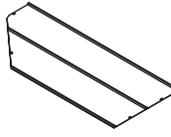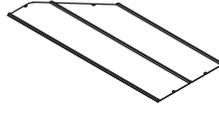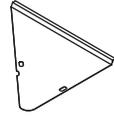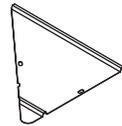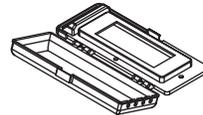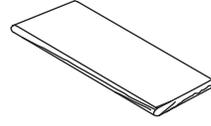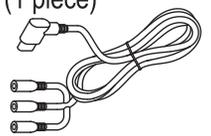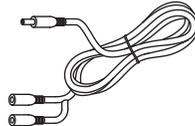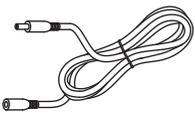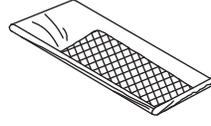
<p><b>N1</b> Roof Cover 1 (1 piece)</p> 	<p><b>N2</b> Roof Cover 2 (4 pieces)</p> 	<p><b>N3</b> Roof Cover 3 (4 pieces)</p> 	<p><b>P</b> Roof Top Support Frame (1 piece)</p> 	<p><b>Q1</b> Connector 1 (4 pieces)</p> 	<p><b>Q2</b> Connector 2 (8 pieces)</p> 
P0008008943	P0008008695	P0008008668	P0008008696	P0008008570	P0008008571
<p><b>Q3</b> Connector 3 (10 pieces)</p> 	<p><b>Q4</b> Connector 4 (28 pieces)</p> 	<p><b>Q5</b> Connector 5 (12 pieces)</p> 	<p><b>Q6</b> Connector 6 (4 pieces)</p> 	<p><b>Q7</b> Connector 7 (8 pieces)</p> 	<p><b>Q8</b> Connector 8 (4 pieces)</p> 
P0008008573	P0008008575	P0008008577	P0008008956	P0008008579	P0008008950
<p><b>Q9</b> Connector 9 (4 pieces)</p> 	<p><b>Q10</b> Connector 10 (1 piece)</p> 	<p><b>R1</b> Roof Plate 1 (6 pieces)</p> 	<p><b>R2</b> Roof Plate 2 (4 pieces)</p> 	<p><b>R3</b> Roof Plate 3 (4 pieces)</p> 	<p><b>R4</b> Roof Plate 4 (4 pieces)</p> 
P0008008951	P0008008669	P0008008670	P0008008671	P0008008672	P0008008673
<p><b>R5</b> Roof Plate 5 (4 pieces)</p> 	<p><b>R6</b> Roof Plate 6 (4 pieces)</p> 	<p><b>R7</b> Roof Plate 7 (4 pieces)</p> 	<p><b>S1</b> Roof Top Plate 1 (4 pieces)</p> 	<p><b>S2</b> Roof Top Plate 2 (4 pieces)</p> 	<p><b>S3</b> Roof Top Plate 3 (2 pieces)</p> 
P0008008674	P0008008675	P0008008676	P0008008677	P0008008678	P0008008697
<p><b>S4</b> Roof Top Plate 4 (2 pieces)</p> 	<p><b>S5</b> Roof Top Plate 5 (2 pieces)</p> 	<p><b>T</b> Hook (1 piece)</p> 	<p><b>U</b> Electrical Power Cover (1 piece)</p> 	<p><b>V</b> Privacy Curtain (1 piece)</p> 	<p><b>X1</b> Wire 1 (Pre-Installed) (1 piece)</p> 
P0008008698	P0008008699	P0008008594	P0008008595	P0008008596	P0008008598
<p><b>X4</b> Wire 2 (1 piece)</p> 	<p><b>X6</b> Wire 3 (2 pieces)</p> 	<p><b>Y</b> Mosquito Netting (1 piece)</p> 			
P0008008601	P0008008700	P0008008603			

## HARDWARE
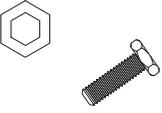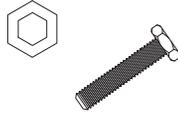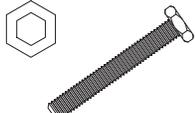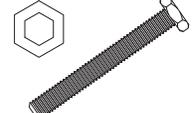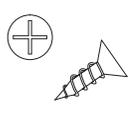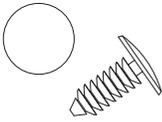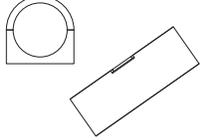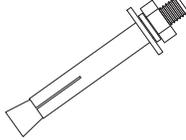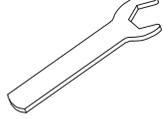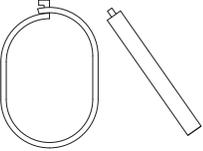
<b>AA</b> Bolt M6*20 (422+21 pieces) 	<b>BB</b> Bolt M6*35 (4+1 pieces) 	<b>CC</b> Bolt M6*45 (16+1 pieces) 	<b>DD</b> Bolt M6*60 (16+1 pieces) 	<b>EE</b> Bolt M3*9 (4+1 pieces) 	<b>FF</b> M6 Flat washer (458+23 pieces) 
H0008008036	H0008008116	H0008008016	H0008008091	H0008008092	H0008008057
<b>GG</b> M6 Sealant Washer (16+1 pieces) 	<b>HH</b> Plastic Clip (20+3 pieces) 	<b>JJ</b> Wire Mountng (28+6 pieces) 	<b>KK</b> Concrete Anchor M6*60 (8 pieces) 	<b>LL</b> Wrench M6 (2 pieces) 	<b>MM</b> M6 Allen Key with Screw Driver (1 piece) 
H0008008060	H0008008093	H0008008094	H0008008095	H0008008011	H0008008132
<b>NN</b> M6 Allen Key (1 piece) 	<b>QQ</b> Hook (104+8 pieces) 				
H0008008133	H0008008113				

### IMPORTANT:

This instruction manual contains important information necessary for the proper assembly and safe use of the product.

Read and follow all warnings and instructions before assembling and using the product.

Follow all warnings and instructions when using the product.

Keep this manual for future reference.

Installer/Assembler: leave these instructions with the consumer.

### SAFETY ALERT KEY

#### DANGER

Indicates a hazardous situation that, if not avoided, will result in death or serious injury.

#### WARNING

Indicates a hazardous situation that, if not avoided, could result in death or serious injury.

#### CAUTION

Indicates a hazardous situation that, if not avoided, could result in minor or moderate injury.

#### NOTICE

Indicates information considered important, but not hazard-related (e.g.messages related to property damage).

# ASSEMBLY INSTRUCTIONS

•Please carefully unpack each of the components and hardware. check the components against the parts list and make sure there are no missing parts. lay pieces on cardboard or a soft mat to help protect the pieces from scratches.

**⚠ CAUTION**

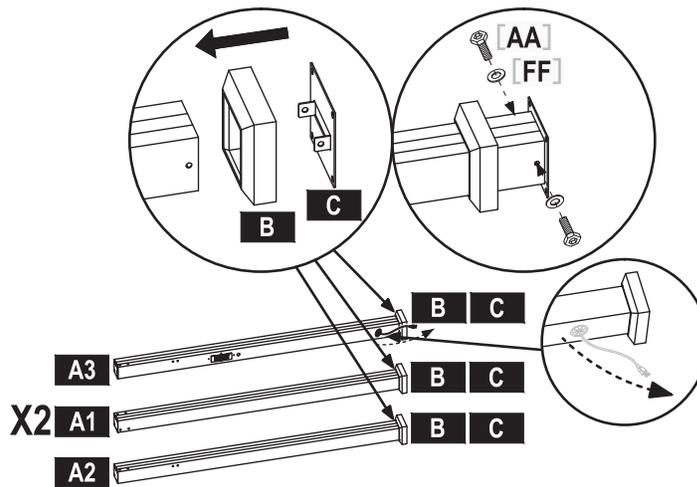
Watch for sharp edges when handling the pieces, wear gloves to avoid injury.

- For ease of assembly, it is recommended to have 3 or more people and allow enough time to completely finish the assembly. assembly can take 6-8 hours. a step-ladder is required for assembly (not included).
- Follow step by step instructions, and follow all safety warnings provided with your tools.
- DO NOT tighten screws until all the screws and washers are properly installed. tighten screws securely, do not over tighten.
- Gazebo should not be used in inclement weather and high winds.

**STEP 01** Pull the electric cord out through the plug on post **A3**.

Slide Foot Cover **B** onto the bottom of Post 1 **A1**. Attach Foot Base **C** to **A1** with one (1) M6 Flat Washer **[FF]** and one (1) M6x20 Bolt **[AA]** on two sides. Slide the Foot Cover **B** down to cover the Foot Base **C**. Repeat this process for the other Post 1 **A1**, Post 2 **A2**, and Post 3 **A3**.

**[AA]** x 8  
**[FF]** x 8




**STEP 02** Slide Cross Beam 3 **D3** and Cross Beam 4 **D4** onto opposite ends of Connector 6 **Q6**. Bring Cross Beam 3 **D3** and Cross Beam 4 **D4** together in the middle of Connector 6 **Q6**, then slide Connector 8 **Q8** over the point where they meet.

Attach pieces together with three (3) M6 Flat Washers **[FF]** and M6x20 Bolts **[AA]** on the side. On the top, skip the first two (2) holes on each side and add one (1) M6 Flat Washer **[FF]** and one (1) M6x20 Bolts **[AA]** to the third hole on top of Cross Beam 3 **D3** and Cross Beam 4 **D4**.

Repeat this process to make another Cross Beam Assembly 1.

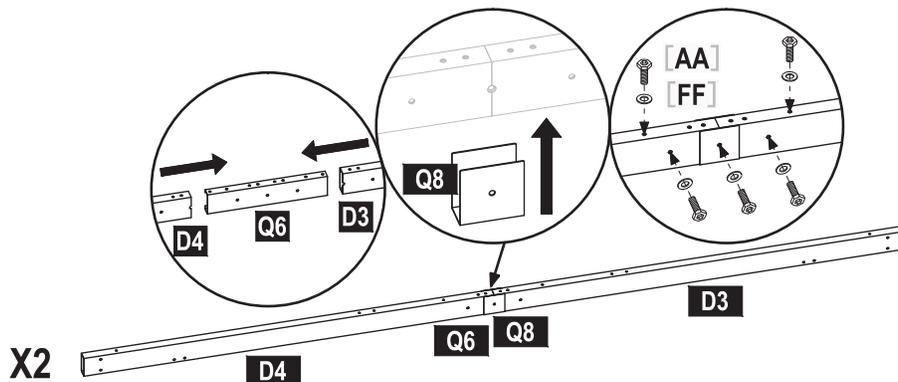
**[AA]** x 10  
**[FF]** x 10



**STEP 03** Slide Cross Beam 2 **D2** and Cross Beam 1 **D1** onto opposite ends of Connector 6 **Q6**. Bring Cross Beam 2 **D2** and Cross Beam 1 **D1** together in the middle of Connector 6 **Q6**, then slide Connector 8 **Q8** over the point where they meet. Attach pieces together with three (3) M6 Flat Washers **FF** and M6x20 Bolts **AA** on the side. On the top, skip the first two (2) holes on each side and add one (1) M6 Flat Washer **FF** and one (1) M6x20 Bolts **AA** to the third hole on top of Cross Beam 2 **D2** and Cross Beam 1 **D1**. Repeat this process to make another Cross Beam Assembly 2.

**AA** x 10

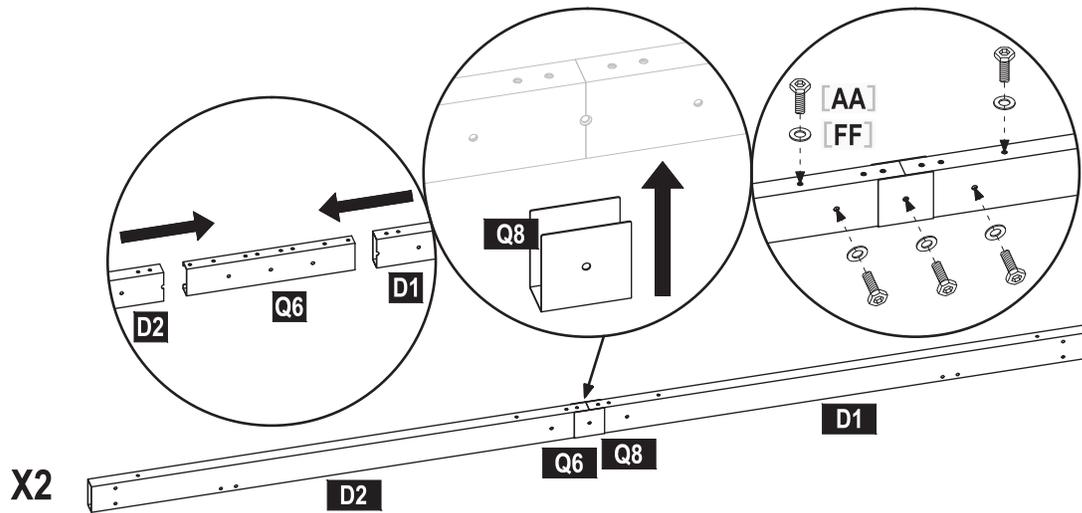**FF** x 10




**STEP 04** Lay one (1) Post 1 **A1** and one (1) Post 2 **A2** down with their tops pointing in the same direction. Lay the Cross Beam Assembly from step 2 on the top end of the posts with **D3** on top of **A1**. Attach with two (2) M6 Flat Washers **FF** and two (2) M6x20 Bolts **AA**.

Lay the other Post 1 **A1** and Post 3 **A3** with the tops pointing in the other direction. Lay the other Cross Beam Assembly from step 2 on top of each post with **D3** on top of **A1**. Attach with two (2) M6 Flat Washers **FF** and two (2) M6x20 Bolts **AA**.


**AA** x 8

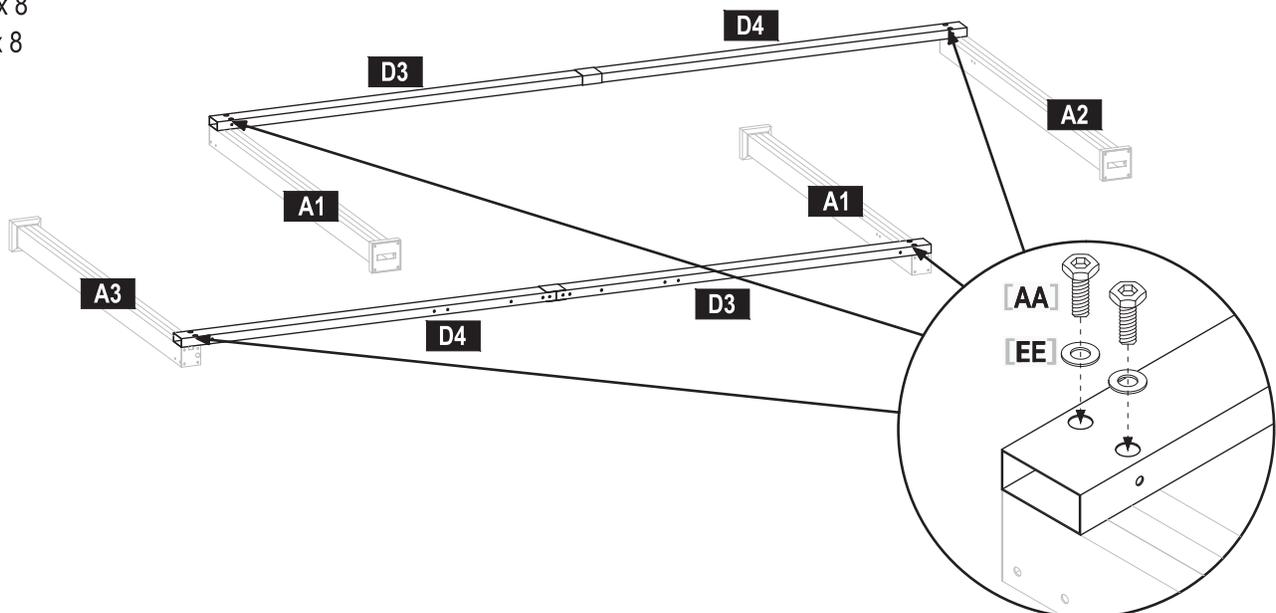**FF** x 8




**STEP 05** Stand up both sets of posts from step 4 so that they are across from each other with the Cross Beam Assemblies on the outside. Attach Post 1 [A1] to Post 3 [A3] using one (1) of the Cross Beam Assemblies from step 3, and two (2) M6 Flat Washers [FF] and two (2) M6x20 Bolts [AA] on each end. Repeat on the other side between the other Post 1 [A1] and Post 2 [A2].

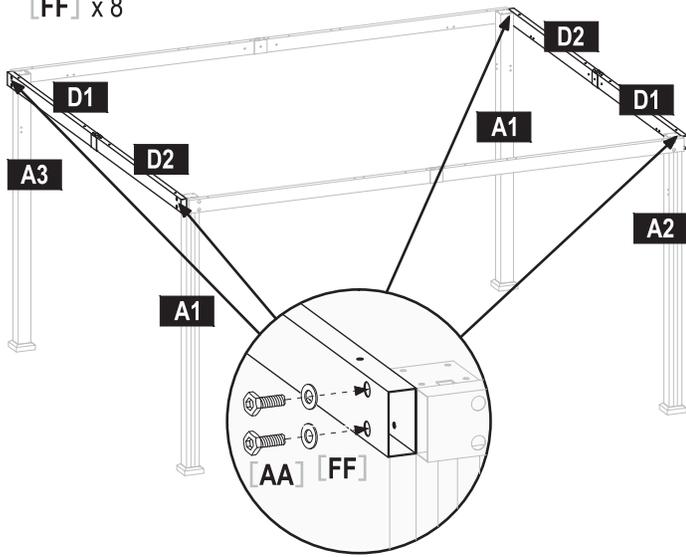- [AA] x 8
- [FF] x 8




**STEP 06** Attach one (1) Connector 9 [Q9] to the four (4) corners using two (2) M6 Flat Washers [FF] and two (2) M6x20 Bolts [AA] through the bottom of Connector 9 [Q9]. Attach one (1) Connector 1 [Q1] to each of the corners with the top pointing toward the center of the gazebo. Used four (4) M6 Flat Washers [FF] and four (4) M6x20 Bolts [AA] for each connector.

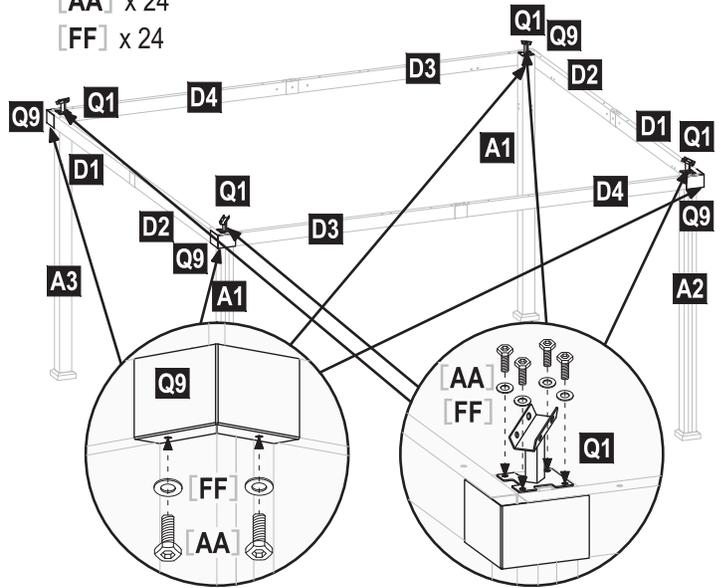- [AA] x 24
- [FF] x 24




**STEP 07** Attach two (2) Connector 7 [Q7] to the sides of the posts [A1], [A2], and [A3] that face into the gazebo using four (4) M6 Flat Washers [FF] and four (4) M6x20 Bolts [AA]. Standing in front of the outside corner of the post, attach a Support Bracket 1 [G1] to the Connector 7 [Q7] on the right using one (1) M6 Flat Washer [FF] and one (1) M6x20 Bolt [AA]. Attach a Support Bracket 2 [G2] to the Connector 7 [Q7] on the left using one (1) M6 Flat Washer [FF] and one (1) M6x20 Bolt [AA]. Attach both Support Brackets to the Cross Beams above them using two (2) M6 Flat Washers [FF] and two (2) M6x60 Bolts [DD] each. Repeat this process in all four (4) corners of the gazebo.

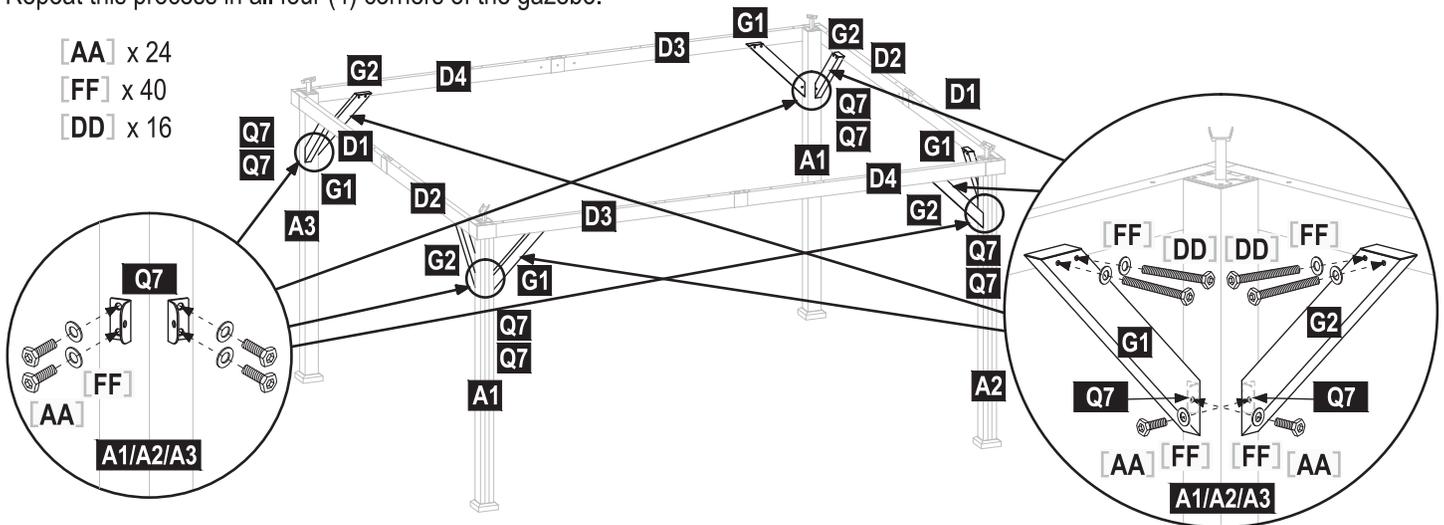
- [AA] x 24
- [FF] x 40
- [DD] x 16



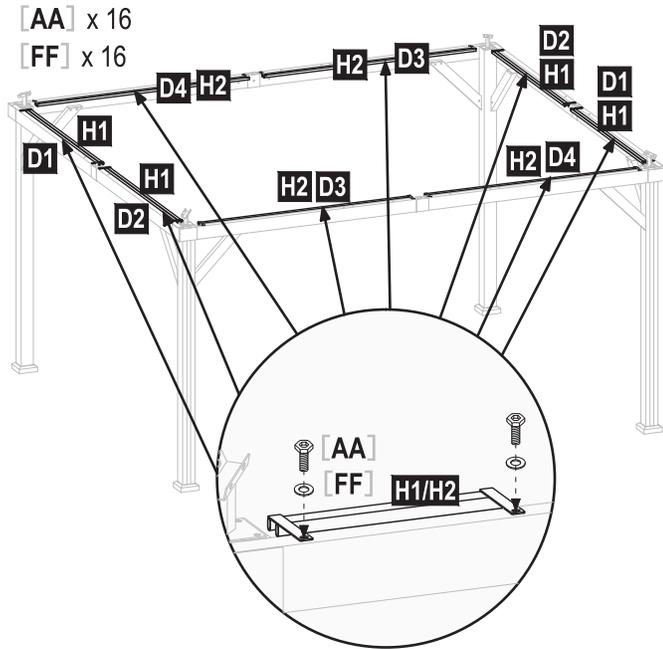
**STEP 08** Attach Mosquito Net Rod 1 [H1] to Cross Beam 1 [D1] and Cross Beam 2 [D2] (the short side of the gazebo) using two (2) M6 Flat Washers [FF] and two (2) M6x20 Bolts [AA]. Attach Mosquito Net Rod 2 [H2] to Cross Beam 3 [D3] and Cross Beam 4 [D4] (the long side of the gazebo) using two (2) M6 Flat Washers [FF] and two (2) M6x20 Bolts [AA].




**STEP 09** Slide the raised end of Roof Rib 3 [E3] into the open end of Roof Rib 1 [E1]. Attach Connector 5 [Q5] to the holes on top of Roof Rib 1 [E1] (two (2) holes) and Roof Rib 3 [E3] (1 hole) using one (1) M6 Flat Washer [FF] and one (1) M6x20 Bolt [AA] each. Make sure all Connector 5s [Q5] are attached with the wings pointing toward Roof Rib 3 [E3]. Repeat this process until you have four (4) Roof Rib Assemblies.

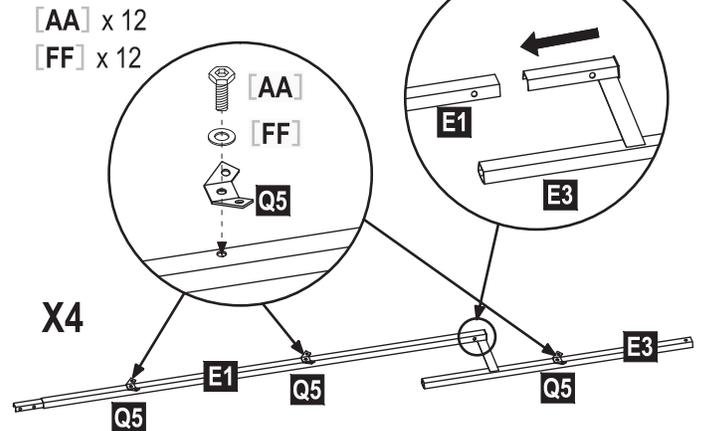

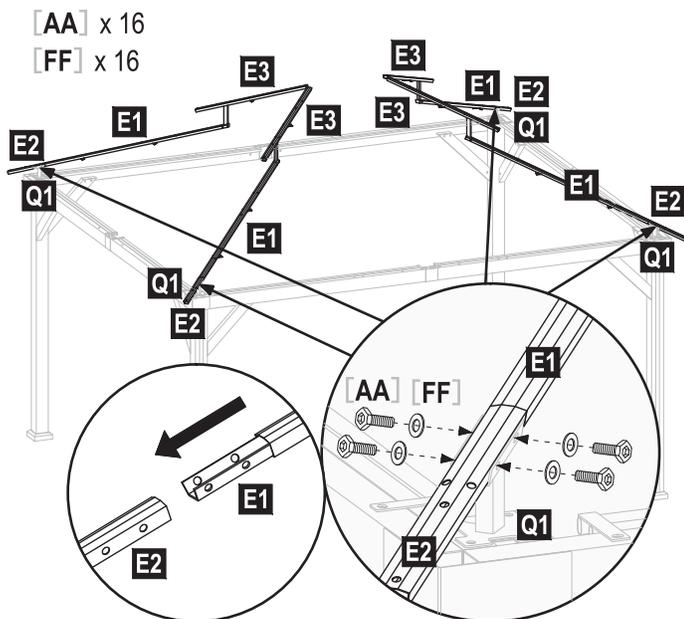
**STEP 10** Slide the other end of Roof Rib 1 [E1] into Roof Rib 2 [E2]. Place Roof Rib [E2 + E1] into Connector 1 [Q1] and secure together using two (2) M6 Flat Washers [FF] and two (2) M6x20 Bolts [AA] on each side. Repeat this process on all four (4) corners.



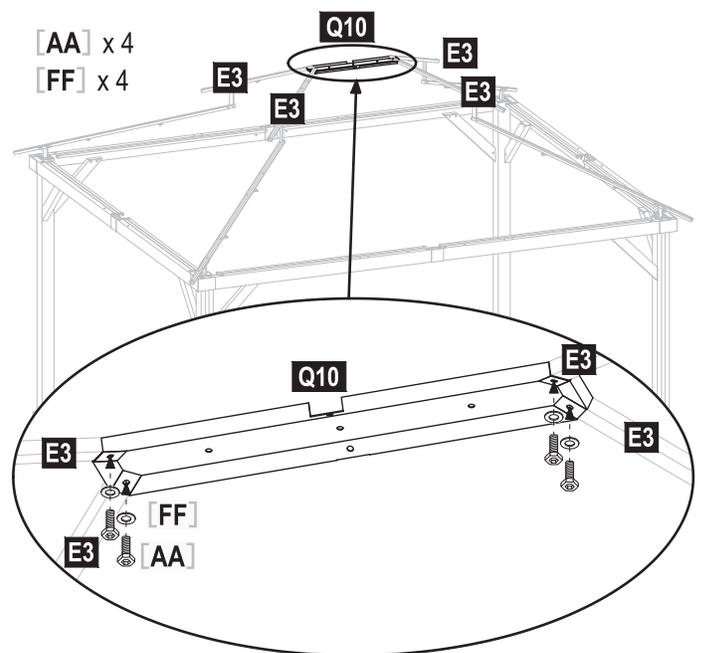
**STEP 11** Attach the tops of Roof Rib 3s [E3] together using Connector 10 [Q10] using one (1) M6 Flat Washer [FF] and one (1) M6x20 Bolt [AA] at each corner.



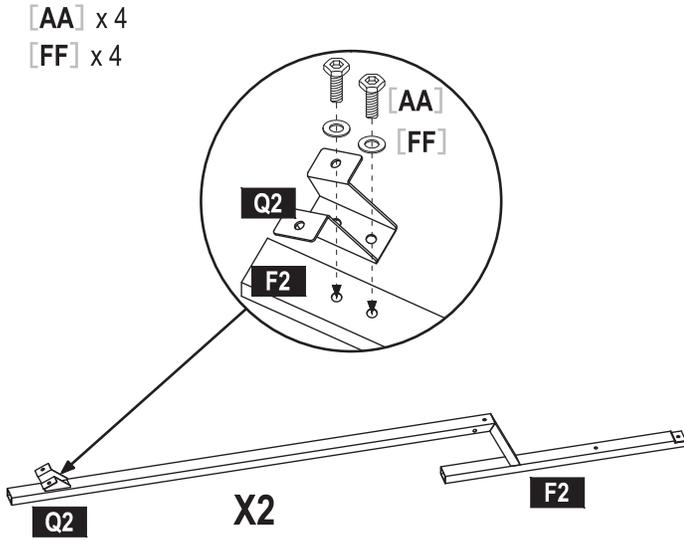**STEP 12** On the bottom of Middle Cross Beam 2 **F2**, attach one (1) Connector 2 **Q2** with the wings pointing toward the end of Middle Cross Beam 2 **F2** using two (2) M6 Flat Washers **FF** and two (2) M6x20 Bolts **AA**. Repeat this process for the other Middle Cross Beam 2 **F2**.




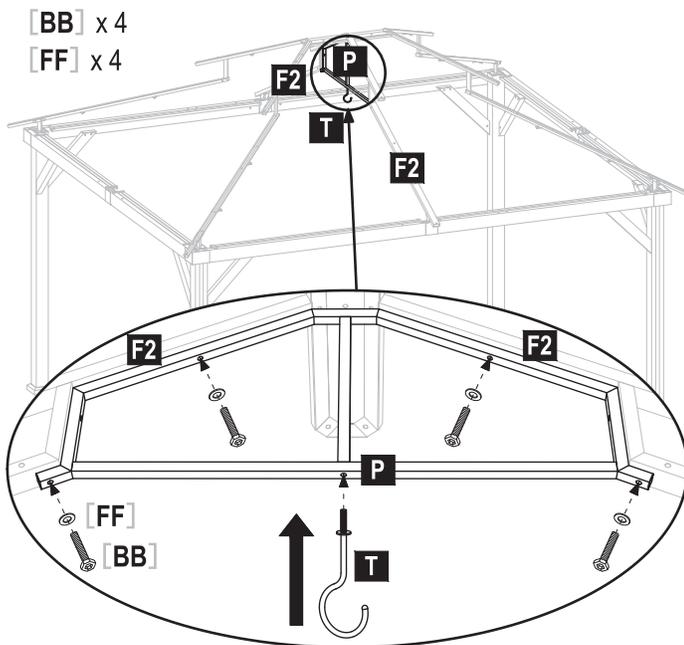**STEP 14** Attach Roof Top Support Frame **P** between Middle Cross Beams **F2** using four (4) M6 Flat Washers **FF** and four (4) M6x20 Bolts **BB**. Attach the Hook **T** to the center of the Roof Top Support Frame **P**.




**STEP 13** Attach Middle Cross Beam 2 **F2** to the gazebo using Connector 2 **Q2** on top of the Cross Beams on the long side using two (2) M6 Flat Washers **FF** and two (2) M6x20 Bolts **AA**.

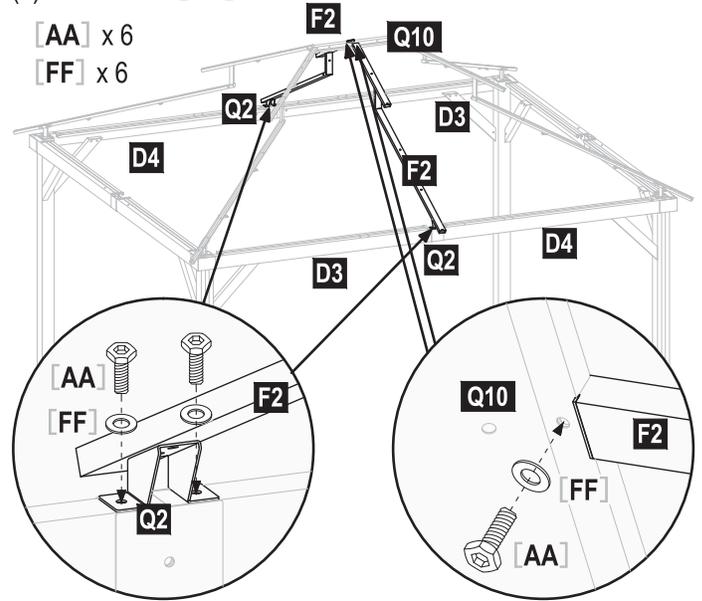Attach the top arm of each Middle Cross Beam 2 **F2** to Connector 10 **Q10** using one (1) M6 Flat Washer **FF** and one (1) M6x20 Bolt **AA**.




**STEP 15** Facing the long side of the gazebo, attach Roof Upper Border 2 **M2** to the left between Roof Rib 1 **E1** and Middle Cross Beam 2 **F2**. Then, attach Roof Upper Border 3 **M3** on the right between the Middle Cross Beam **F2** and Roof Rib 1 **E1**. use one (1) M6 Flat Washer **FF** and one (1) M6x20 Bolt **AA** per hole.

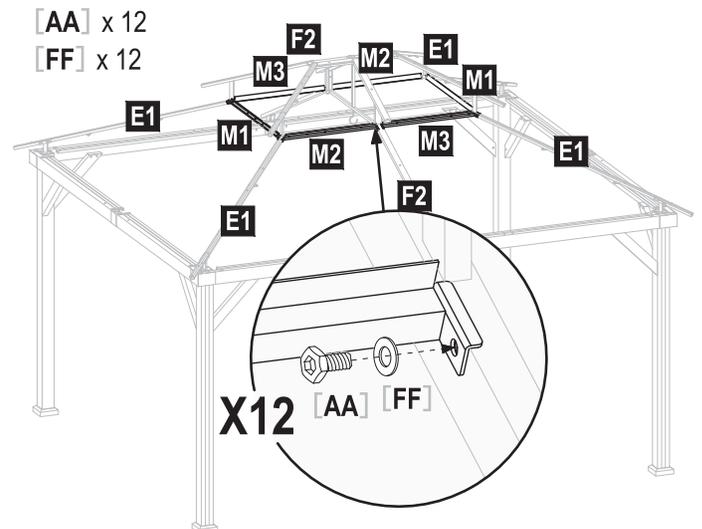
Then, facing the short side of the gazebo, attach Roof Upper Border 1 **M1** between the Roof ribs **E1** using one (1) M6 Flat Washer **FF** and one (1) M6x20 Bolt **AA** per hole.



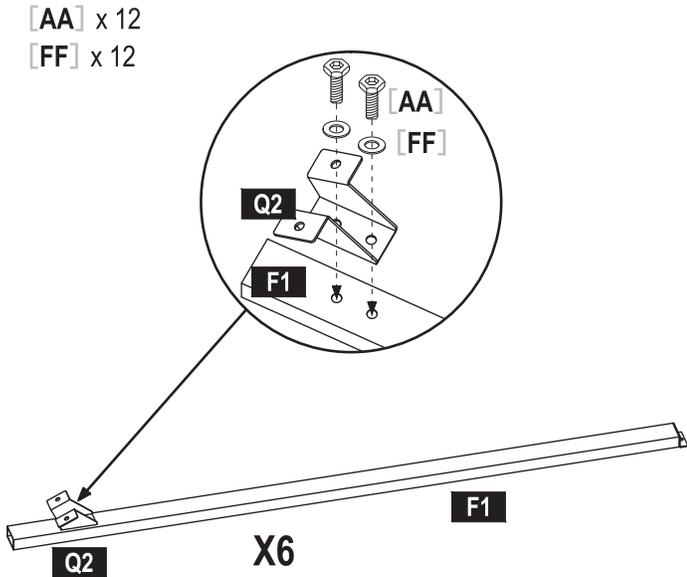
**STEP 16** Locate Middle Cross Beam 1 **F1** and place it flat on the ground with the tab at one (1) end flat on the floor. On the other end, attach Connector 2 **Q2** with the ends pointing toward the short side of the bar two (2) M6 Flat Washers **FF** and using two (2) M6x20 Bolts **AA**. Repeat this step for all six Middle Cross Beam 1s **F1**.



**STEP 17** Attach Middle Cross Beam 1s **F1** to Roof Upper Borders **M1**, **M2**, and **M3** using one (1) M6 Flat Washer **FF** and one (1) M6x20 Bolt **AA** per hole. On the other end of each Middle Cross Beam 1 **F1**, connect the Connector 2 **Q2** to the Cross Beams **D1** - **D4**. There should be two (2) Middle Cross Beam 1s on each long side of the gazebo, and one (1) on each short side of the gazebo.

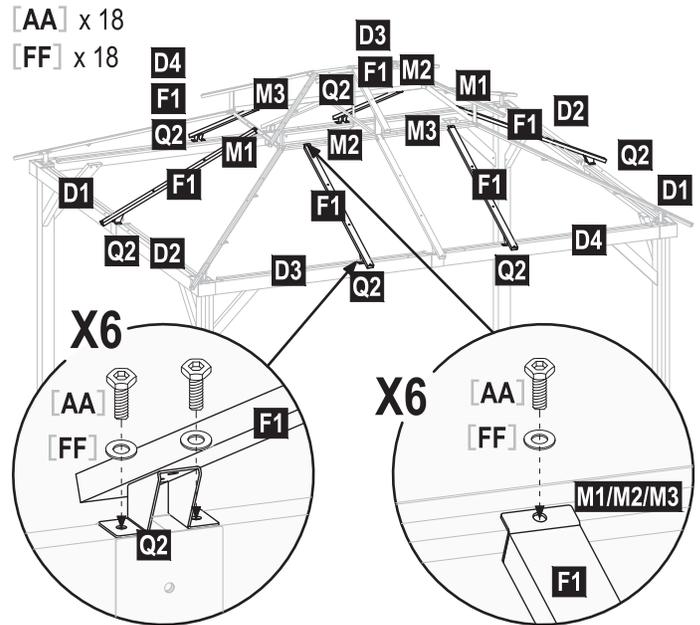

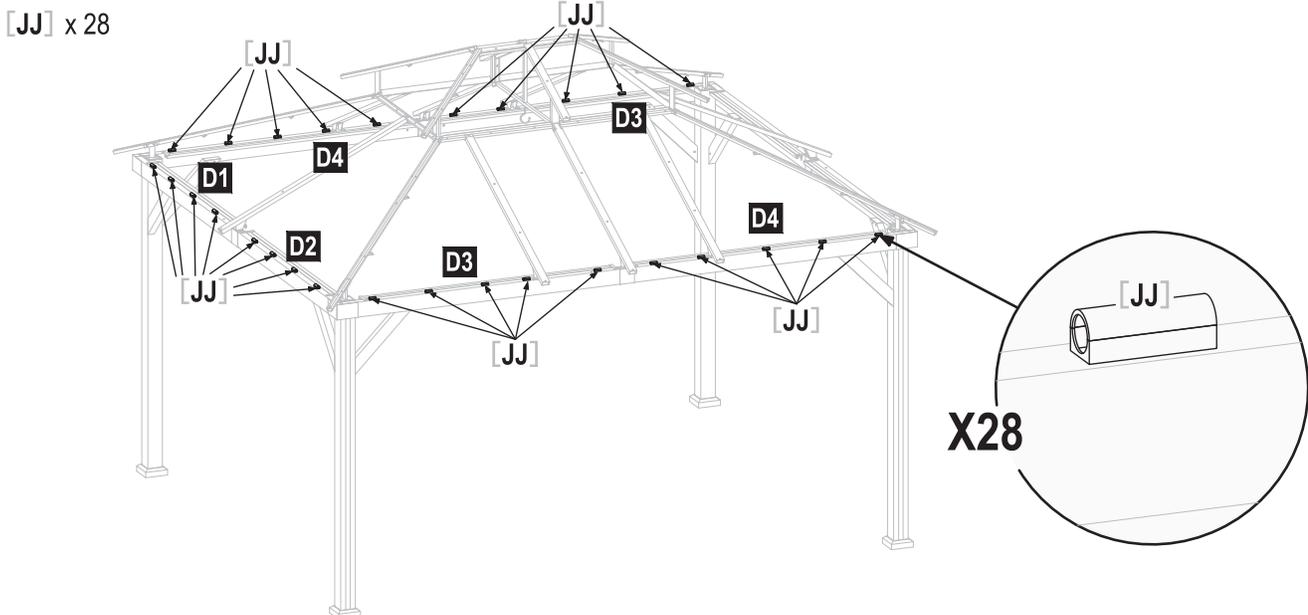**STEP 18** Stick all 28 of the Wire Mountings **JJ** along the top of the Cross Beams **D1** - **D4** spaced evenly around. Cross Beams 3 and 4 **D3**, **D4**, along the long side should have 5 Wire Mountings **JJ** each, while Cross Beams 1 and 2 **D1**, **D2** along the short side should have 4 Wire Mountings **JJ** each.




**STEP 19** Install the wires according to the route map as shown.

Insert Wire 2 **X4** into Wire Mountings **[JJ]** along the short side of the gazebo from Post 3 **A3** to Post 1 **A1**. Connect the end to the connector in Wire 1 **X1**, which is pre-installed in Post 3 **A3**. Attach the other end of **X4** to the light in post **A1**.

Install Wire 3s **X6** into Wire Mountings **[JJ]** along the long sides of the gazebo starting from the side where Wire 2 **X4** is installed. Connect the Wire 3s **X6** to the connectors at the ends of Wire 2 **X4** and Wire 1 **X1**.

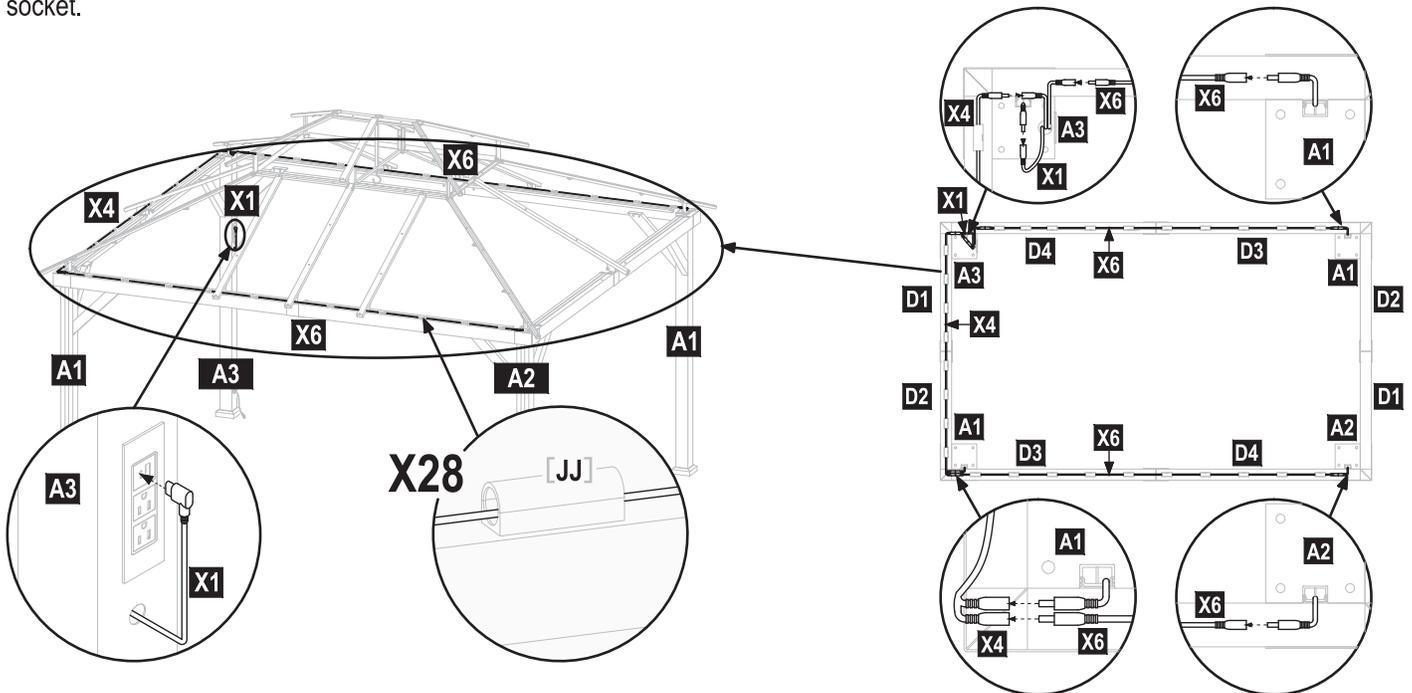When finished all wires should be connected to Wire 1 **X1**. Near the electric socket installed in the post, connect Wire 1 **X1** to the socket.




**STEP 20** Attach Roof Top Border 1s **L1** above the light strips on the short side of the gazebo using one (1) M6 Flat Washer **[FF]** and one (1) M6x20 Bolt **[AA]** per hole.

Slide the ends of Roof Top Border 2 **L2** onto Connector 4 **Q4**, then slide Roof Top Border 3 **L3** onto the other end of connector 4 **Q4**.


On the long side, attach the Roof Top Borders using one (1) M6 Flat Washer **[FF]** and one (1) M6x20 Bolt **[AA]** per hole, including the hole through Connector 4 **Q4** in the middle.

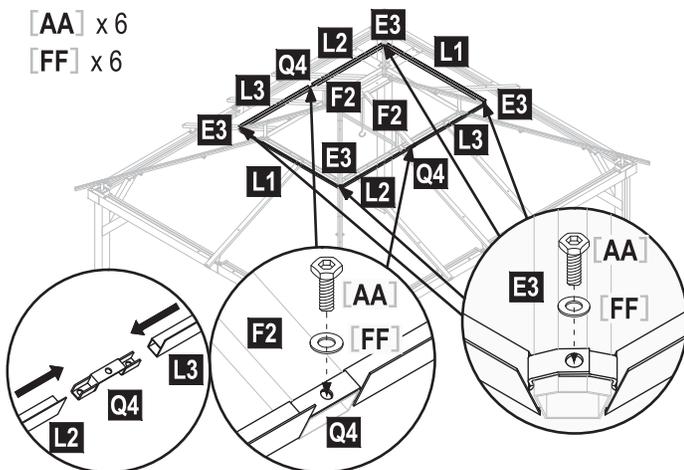- [AA]** x 6
- [FF]** x 6



**STEP 21** Place a Connector 3 **Q3** over Connector 4 **Q4** from the last step and attach using two (2) M6 Flat Washers **[FF]** and two (2) M6x20 Bolts **[AA]**.

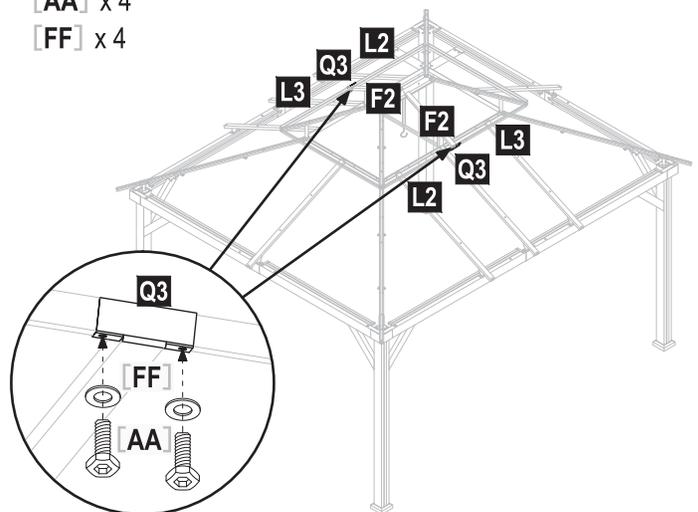
- [AA]** x 4
- [FF]** x 4



**STEP 22** Slide two (2) Top Beam 6s **J6** onto the ends of a Connector 4 **Q4**. Then, attach the assembly to the long side of the gazebo using one (1) M6 Flat Washer **FF** and one (1) M6x20 Bolt **AA** per hole. Under Middle Cross Beam 2 **F2**, use two (2) M6 Flat Washers **FF** and two (2) M6x20 Bolts **AA** to secure Connector 4 **Q4**. On the short side of the gazebo, attach a Top Beam 7 **J7** using one (1) M6 Flat Washer **FF** and one (1) M6x20 Bolt **AA** per hole.

**[AA]** x 14

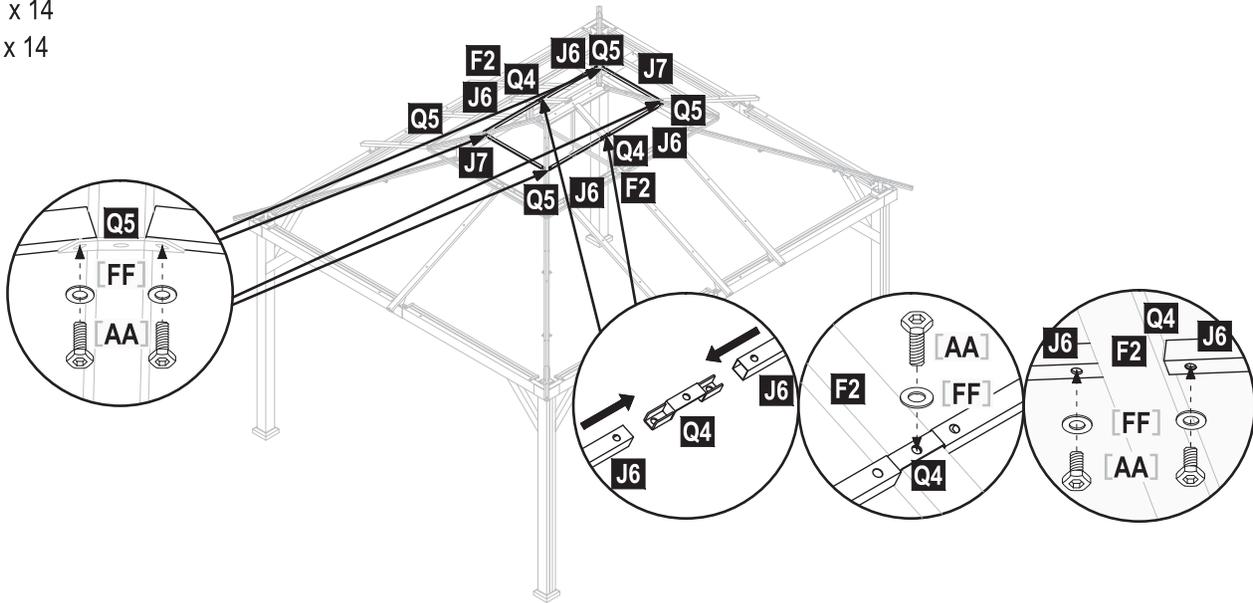**[FF]** x 14




**STEP 23** Assemble the roof. On the short side of the gazebo, attach these pieces between the upper parts of the Roof Rib 3s **E3** and along the Roof Top Borders **L1** from left to right: Roof Top Plate 1 **S1**, Roof Top Plate 5 **S5**, and Roof Top Plate 2 **S2**. Use one (1) M6 Flat Washer **FF** and one (1) M6x20 Bolt **AA** per hole.

On the long side of the gazebo, attach these pieces between the upper parts of the Roof Rib 3s **E3** and along the Roof Top Borders **L2** - **L3** from left to right: Roof Top Plate 1 **S1**, Roof Top Plate 3 **S3**, Roof Top Plate 4 **S4**, and Roof Top Plate 2 **S2**. Use one (1) M6 Flat Washer **FF** and one (1) M6x20 Bolt **AA** per hole.


**[AA]** x 36

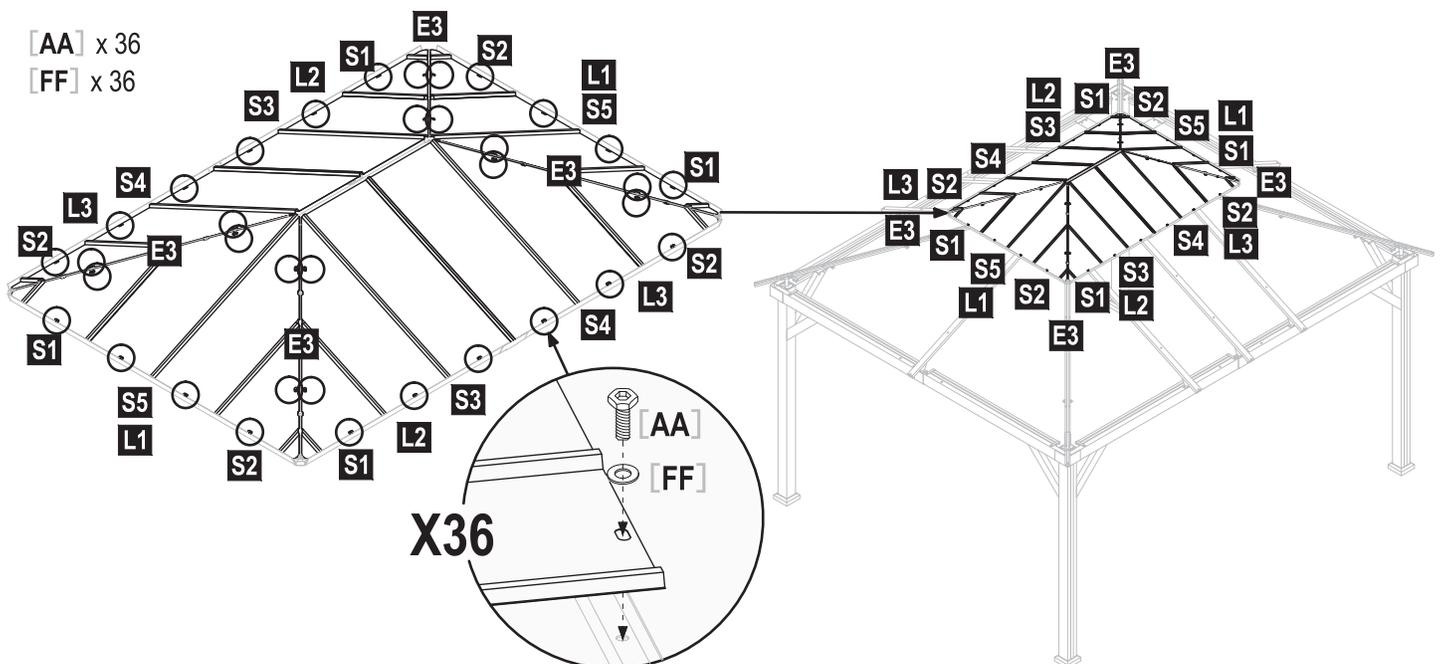**[FF]** x 36




**STEP 24** Attach a Roof Cover 2 **N2** along each corner of the roof plate from the previous step using one (1) M6 Sealant Washer **GG**, one (1) M6 Flat Washer **FF**, and one (1) M6x45 Bolt **CC** per hole.

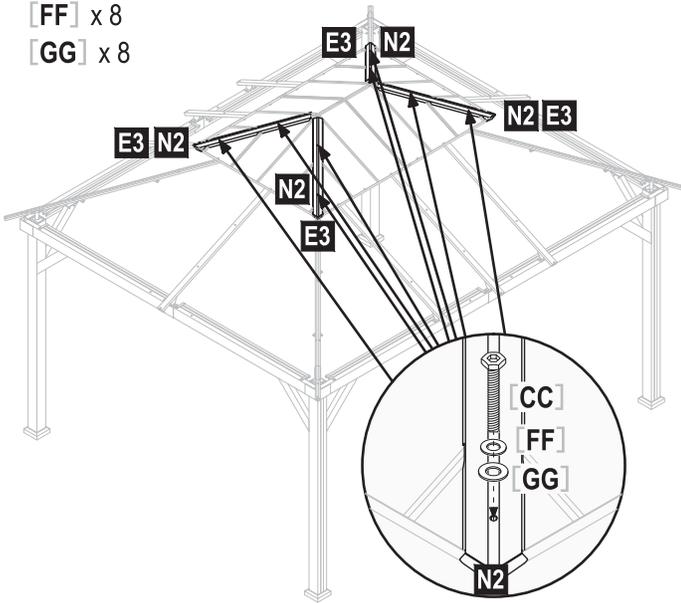- [CC]** x 8
- [FF]** x 8
- [GG]** x 8



**STEP 25** Attach Roof Cover 1 **N1** at the top of the gazebo using one (1) M6 Flat Washer **FF** and one (1) M6x20 Bolt **AA** going up from under the roof.

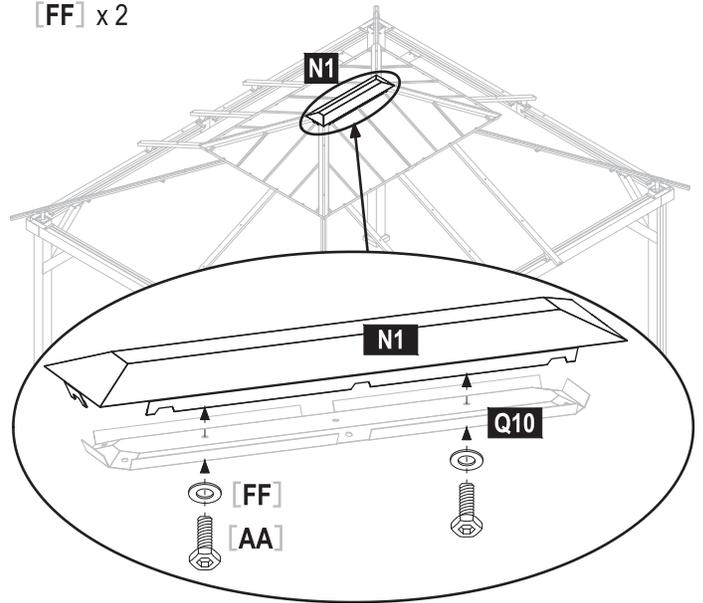- [AA]** x 2
- [FF]** x 2





**STEP 26** Slide two (2) Top Beam 5s **J5** onto the ends of a Connector 4 **Q4** with the cutout facing up. Secure with one (1) M6 Flat Washer **FF** and one (1) M6x20 Bolt **AA** per hole.

Then, slide one (1) Connector 4 **Q4** into the other end of each Top Beam 5 **J5** and secure using one (1) M6 Flat Washer **FF** and one (1) M6x20 Bolt **AA** per hole. Repeat this process until you have four (4) assemblies.

Flip over and attach each assembly to the Middle Cross Beam 1s **F1** and Middle Cross Beam 2 **F2** using one (1) M6 Flat Washer **FF** and one (1) M6x20 Bolt **AA** per hole. There should be two (2) of these assemblies attached on each long side of the gazebo.

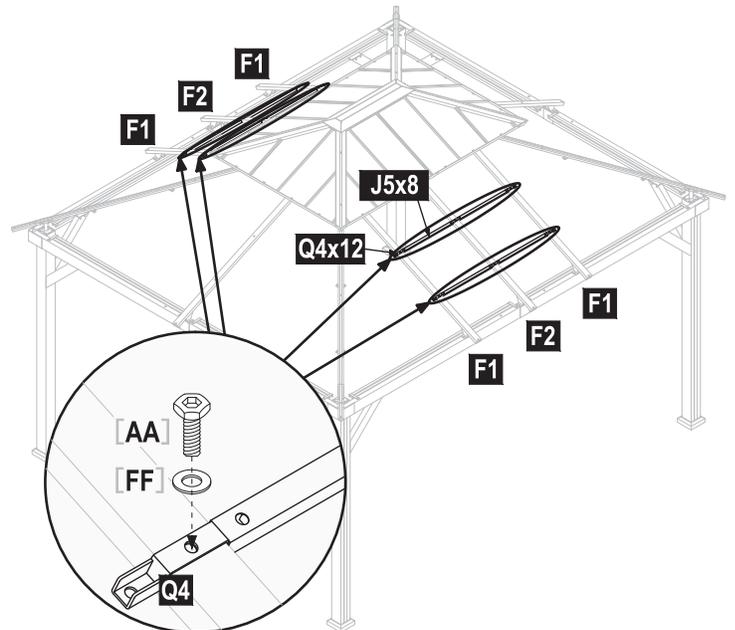
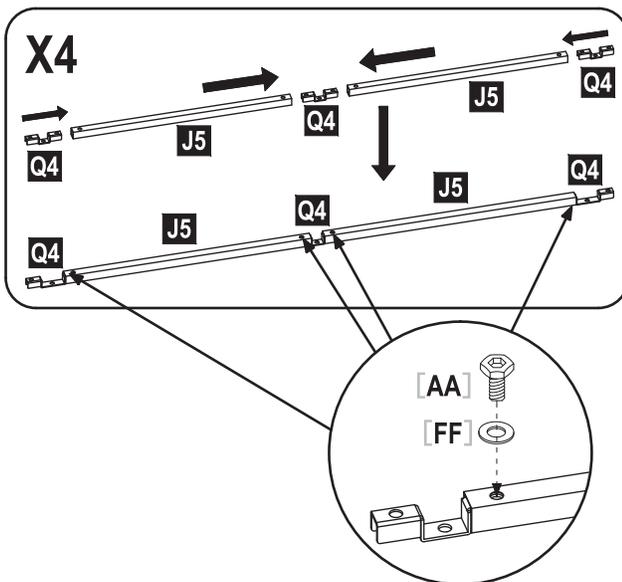
- [AA]** x 28
- [FF]** x 28



**STEP 27** Slide a Connector 4 **Q4** with the cutout facing down in between two (2) Roof Lower Border 5s **K5**. Then, add one (1) Connector 4 **Q4** to the other ends of each Roof Lower Border 5 **K5**. Repeat this process to make another assembly. Attach the assembly to the long side of the gazebo using one (1) M6 Flat Washer **FF** and one (1) M6x20 Bolt **AA** per hole.

**AA** x 6

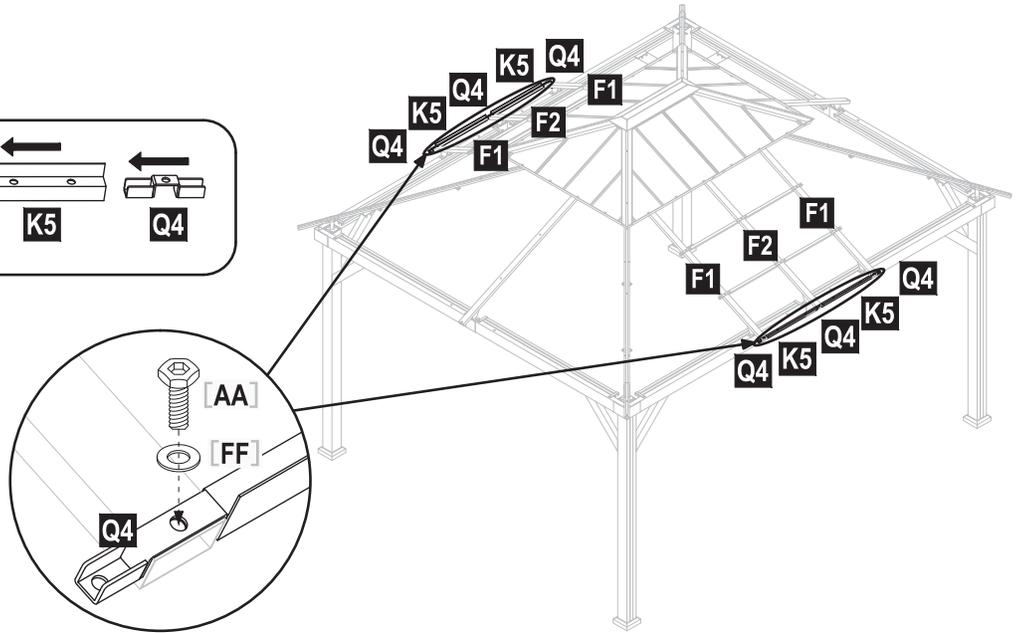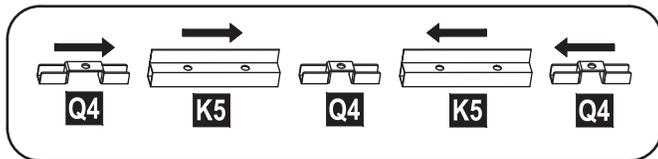**FF** x 6





**STEP 28** Attach one (1) Top Beam 1 **J1** to the ends of each Top Beam 5 **J5** assembly from step 26 using one (1) M6 Flat Washer **FF** and one (1) M6x20 Bolt **AA** per hole, connecting the other end to the Connector 5 **Q5**.


Attach one (1) Top Beam 2 **J2** to the ends of the lower Top Beam 5 **J5** Assembly from step 26 using one (1) M6 Flat Washer **FF** and one (1) M6x20 Bolt **AA** per hole.

**AA** x 16

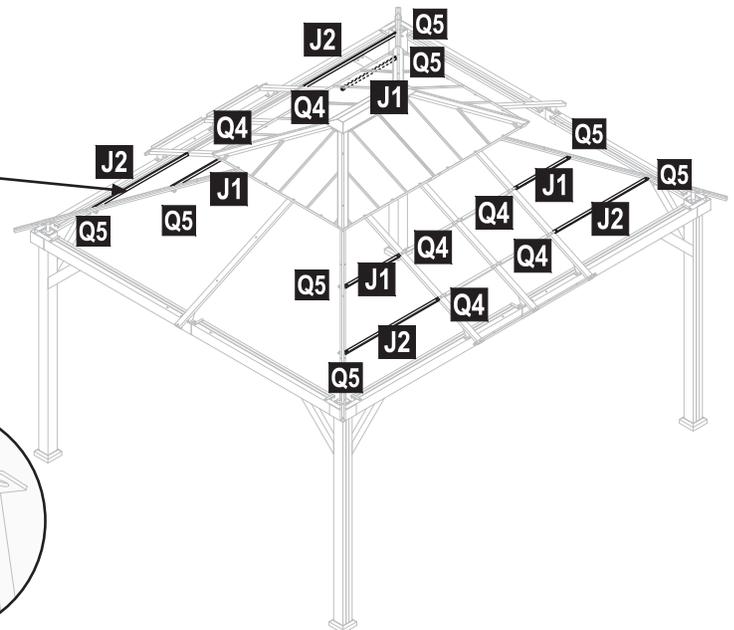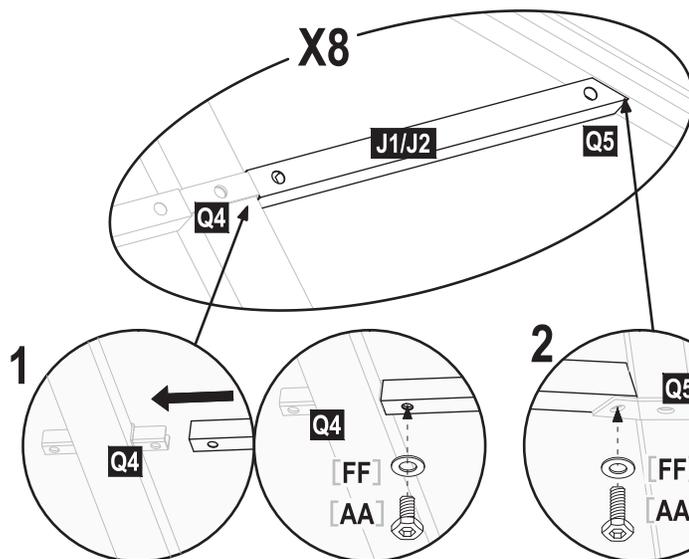**FF** x 16




**STEP 29** Slide the ends of two (2) Top Beam 3s **J3** onto the ends of a Connector 4 **Q4** with the cutout facing down. Attach Top Beam 3 **J3** assembly between the connector 5s **Q5** on the short side of the gazebo in the upper set of holes. Slide the ends of two (2) Top Beam 4s **J4** onto the ends of a Connector 4 **Q4** with the cutout facing down. Attach Top Beam 4s **J4** to the lower set of holes on the same side.

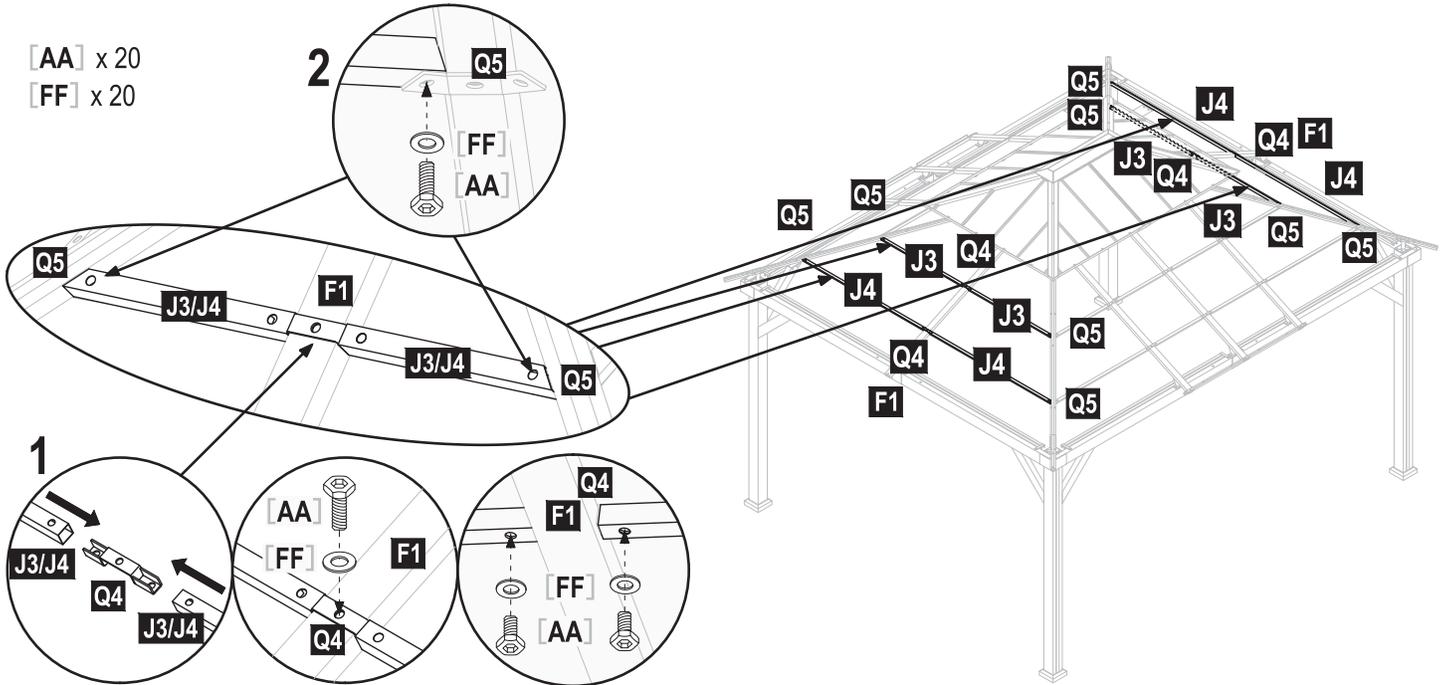

**STEP 30** Slide the ends of one (1) Roof Lower Border 1 **K1** and one (1) Roof Lower Border 2 **K2** onto the ends of a Connector 4 **Q4** with the cutout facing down. Attach Roof Lower Border assembly **K1 + Q4 + K2** between the Roof Rib 2s **E2** on the short side of the gazebo.

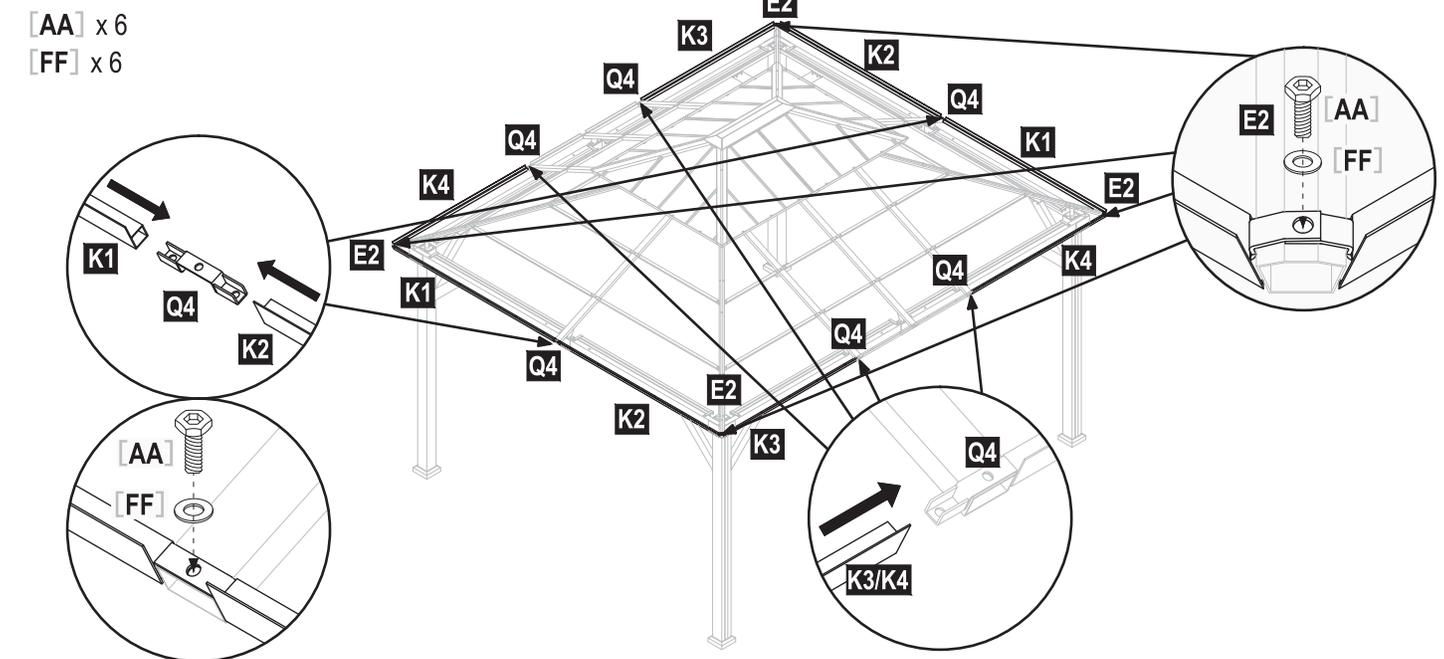
Slide the ends of one (1) Roof Lower Border 3 **K3** and one (1) Roof Lower Border 4 **K4** onto the ends of a Connector 4 **Q4** with the cutout facing down. Attach Roof Lower Border assembly **K3 + Q4 + K4** between the Roof Rib 2s **E2** on the long side of the gazebo.



**STEP 31** Slide Connector 3s **Q3** over the **Q4**s from the last step. Secure using two (2) M6 Flat Washer **[FF]** and two (2) M6x20 Bolt **[AA]** each.

**[AA]** x 16

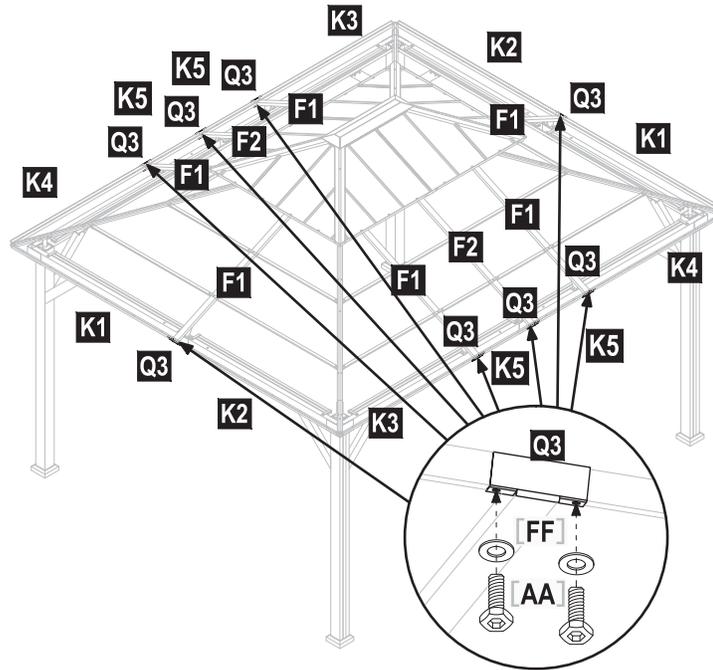**[FF]** x 16




**STEP 32** Cover the roof by attaching the Roof Top Plates **R1-7** in this order along the long side of the gazebo from left to right: **R6**, **R4**, **R2**, **R1**, **R1**, **R3**, **R5**, and **R7**. Secure along the top by adding one (1) Roof Upper Border 2 **M2** on the left, and one (1) Roof Upper Border 3 **M3** on the right using Plastic Clips **[HH]**. Along the sides and the bottom, attach using one (1) M6 Flat Washer **[FF]** and one (1) M6x20 Bolt **[AA]** per hole.

**[AA]** x 40


**[FF]** x 40

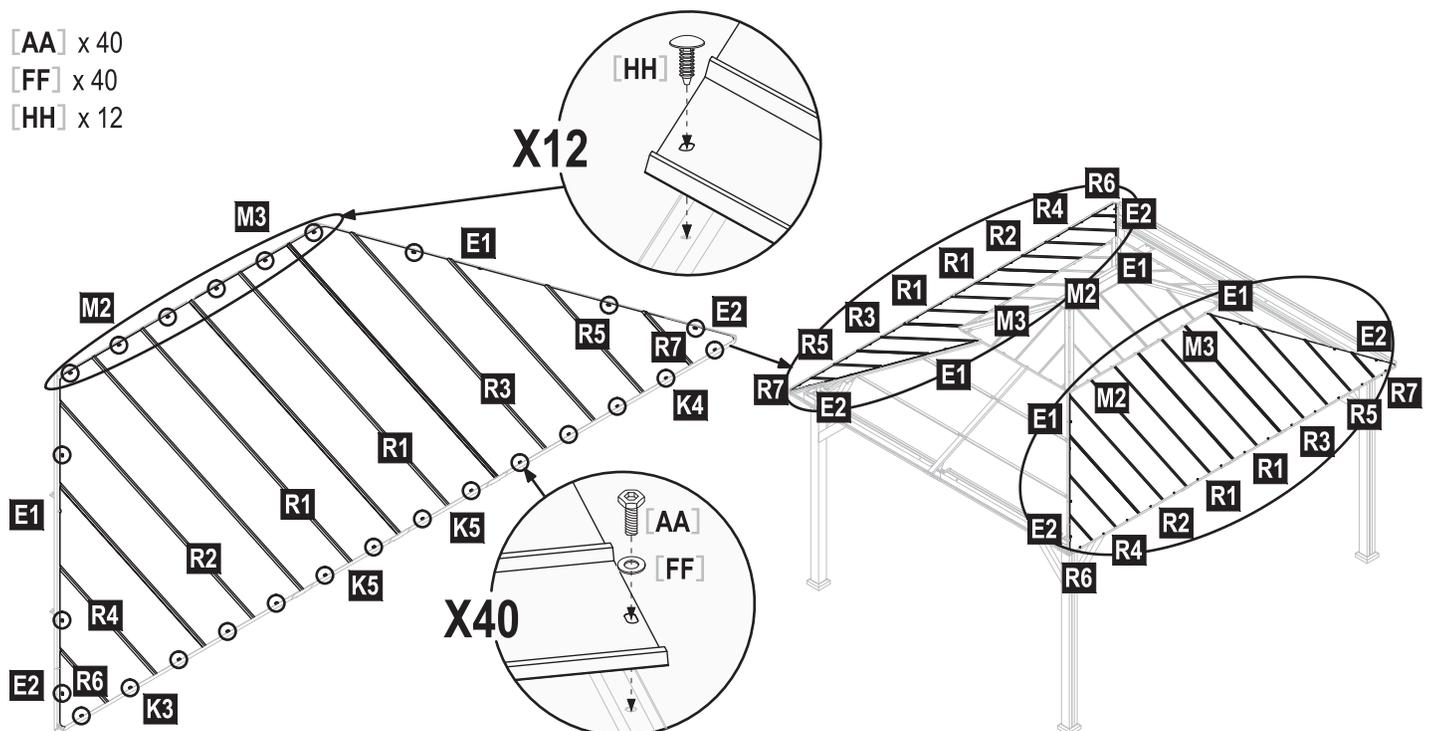**[HH]** x 12




**STEP 33** Attach the Roof Top Plates **R1-7** in this order along the short side of the gazebo from left to right: **R6**, **R4**, **R2**, **R1**, **R3**, **R5**, and **R7**. Secure along the top by adding one (1) Roof Upper Border 1 **M1** using Plastic Clips **HH**. Along the sides and the bottom, attach using one (1) M6 Flat Washer **FF** and one (1) M6x20 Bolt **AA** per hole.

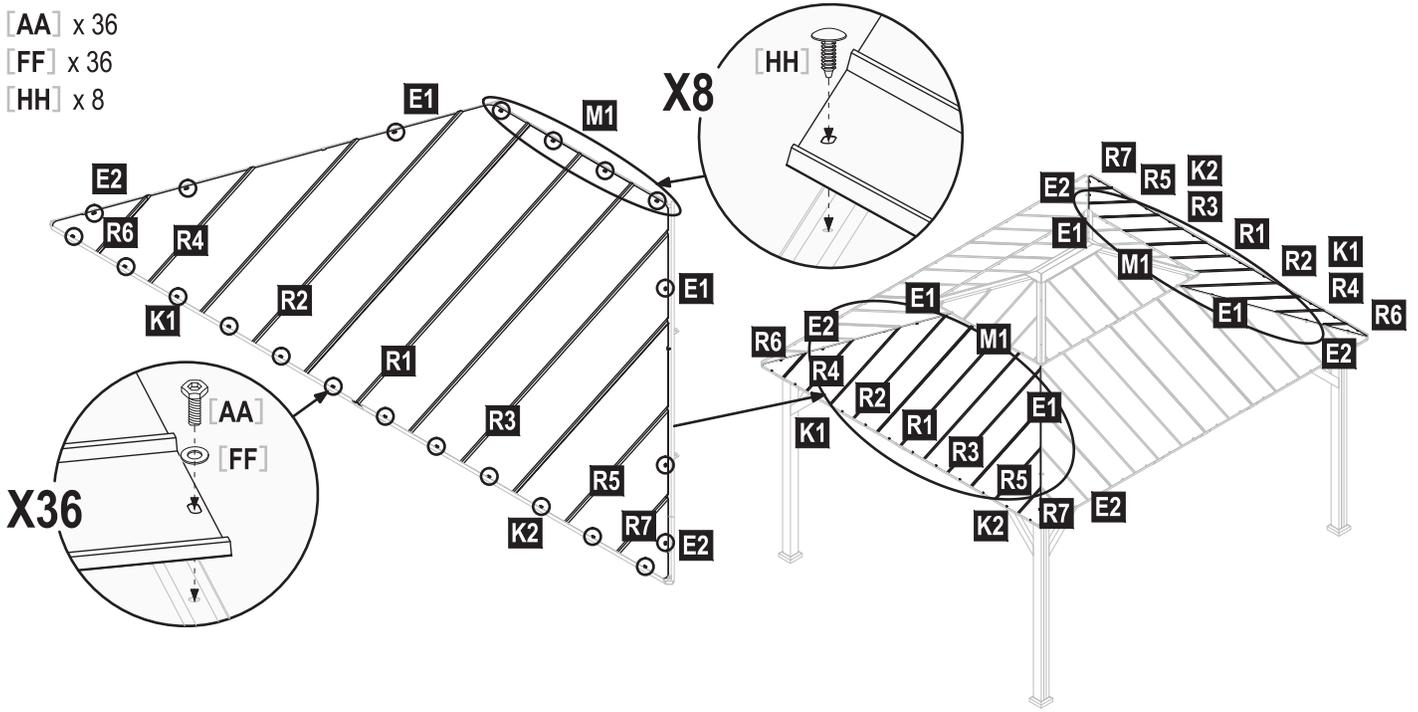- [AA]** x 36
- [FF]** x 36
- [HH]** x 8




**STEP 34** At the corners where the roof sides meet, attach a Roof Cover 3 **N3** using one (1) M6 Sealant Washer **GG**, one (1) M6 Flat Washer **FF**, and one (1) M6x45 Bolt **CC** per hole.

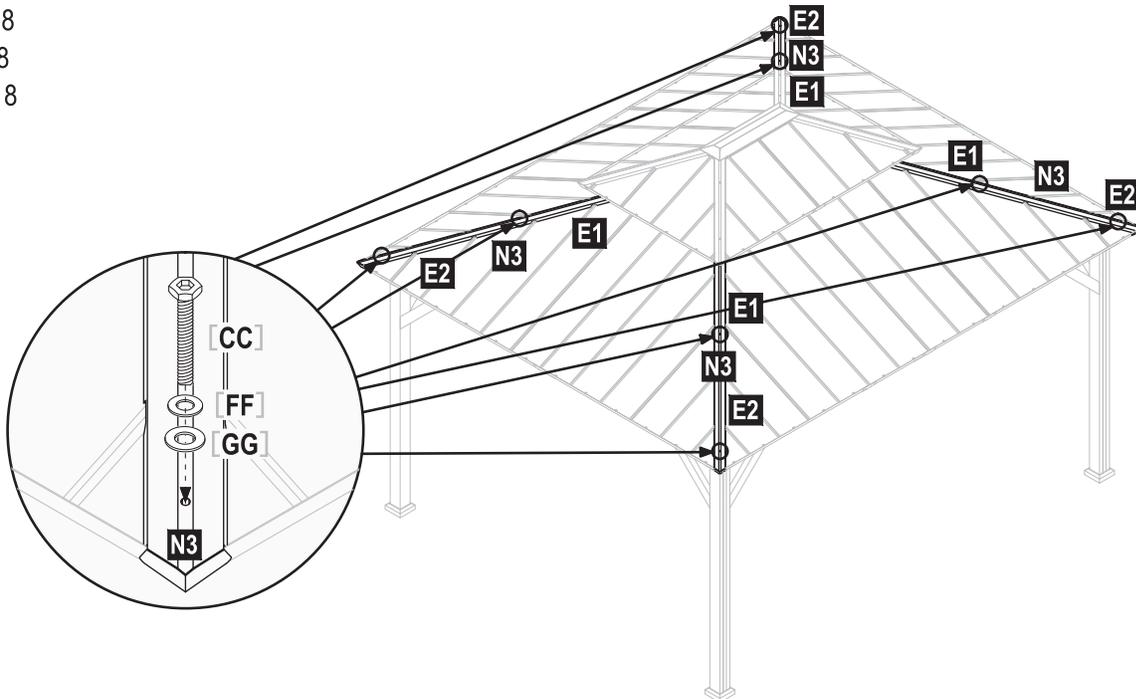- [CC]** x 8
- [FF]** x 8
- [GG]** x 8




**STEP 35** Attach the Electrical Power Cover **U** over the power outlet using four (4) M3x9 Screws **EE**.

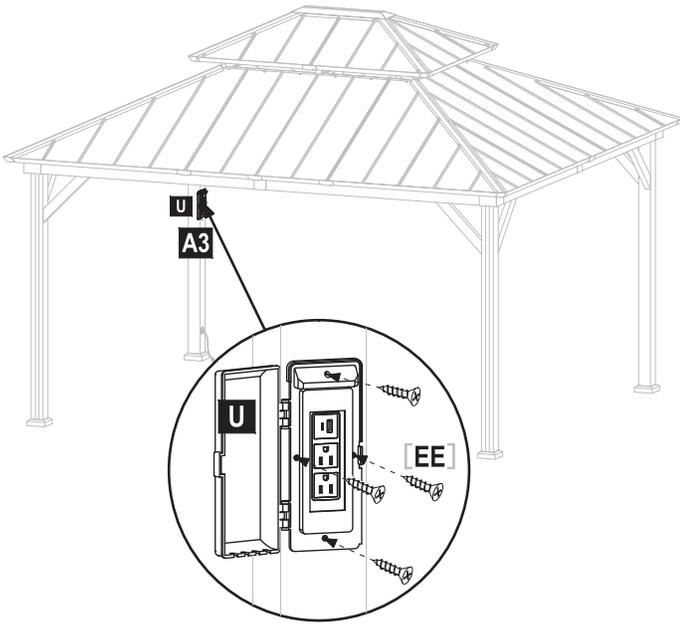**EE** x 4





**STEP 36** Slide the Foot Cover **C** up to expose the Foot Base **B**. Insert two (2) M6x60 Concrete Anchors **KK** per Foot Base **B**. Slide the Foot Cover **C** back into place.

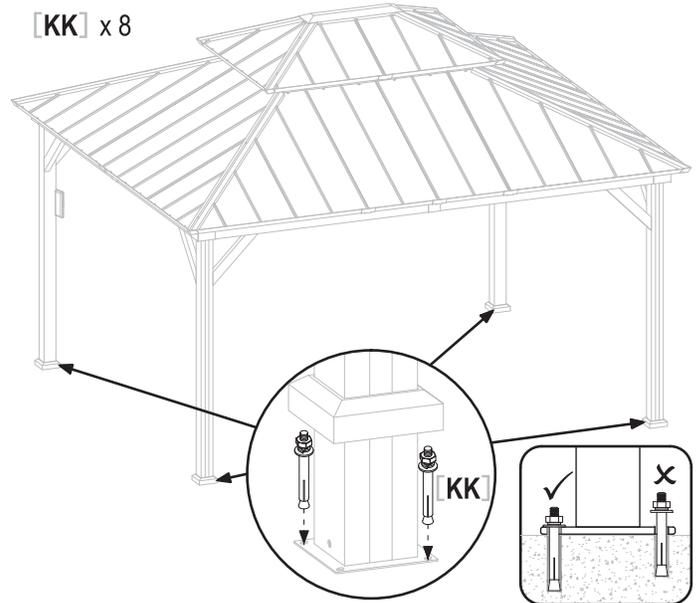**KK** x 8





**STEP 37** Attach 52 Hooks **QQ** to the straps on the Mosquito Netting **Y**, and hang the netting on the Mosquito Net Rods **H1 + H2** (the outer rod).

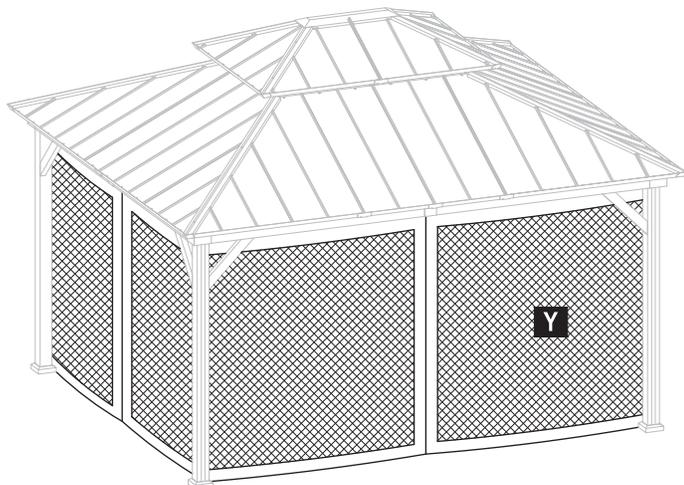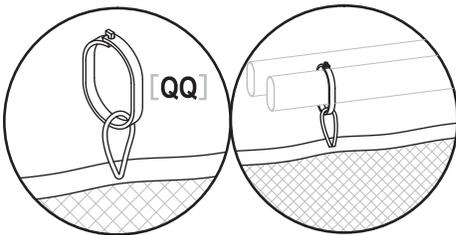**QQ** x 52





**STEP 38** Attach 52 Hooks **QQ** to the straps on the Privacy Curtain **V**, and hang the netting on the Mosquito Net Rods **H1 + H2** (the inner rod).

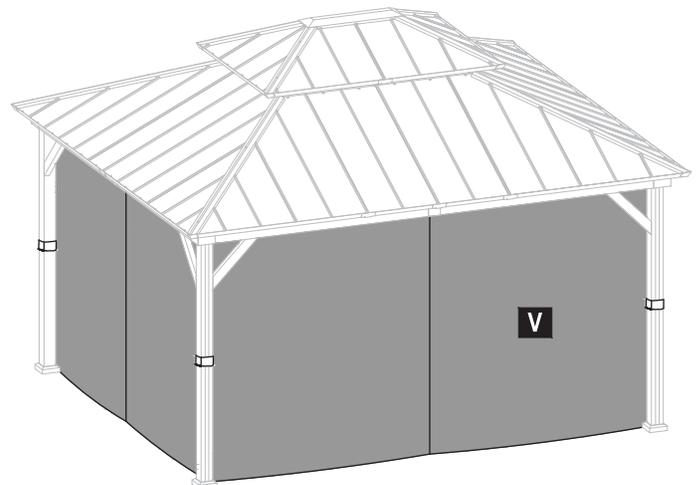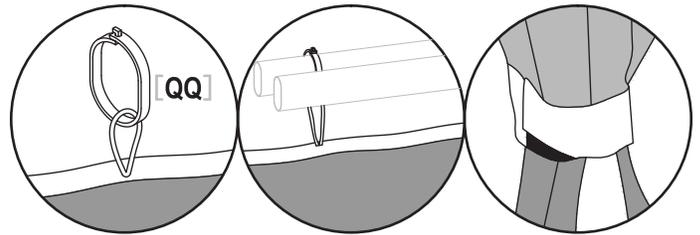**QQ** x 52



Outdoor Structure anchoring guide for anchoring gazebo to wood or concrete: If step 36, on page 18 in the assembly instructions is not properly completed, this will void the warranty.

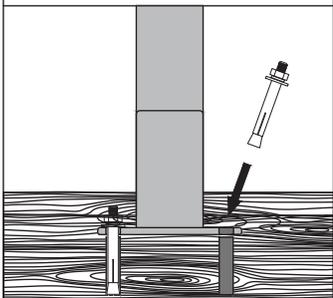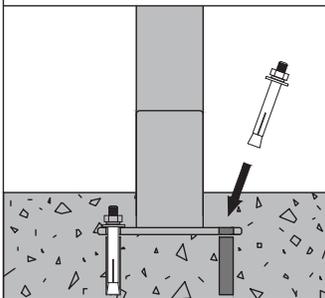**WARNING!** If your gazebo is not properly anchored, damage could occur. It is highly recommended for maximum safety that you mount and secure to wood or concrete footers. This is far better and safer than using ground stakes. The following are some examples of how to mount the structure to wood or concrete surfaces. Refer to local building codes or consider consulting a licensed contractor for assistance in the anchoring of this product.

WOOD	CONCRETE
	
<p>Anchors should be drilled into joists or reinforced blocking (not only deck boards).</p>	<p>Pre-drill holes for appropriately sized concrete anchors.</p>
 <p>Recommended Hardware: Expansion Bolt</p>	 <p>Recommended Hardware: Expansion Bolt</p>

If digging for foundation, please double check for possibility of any underground utilities such as gas, telephone, cable or sprinkler lines. Refer to your local building and city codes, ordinances, neighborhood covenants, or height restrictions regarding this type of structure for guidance on acceptable installation requirements.

**CAUTION**  
DO NOT climb or walk on roof for any reason.

- Our components are intended for privacy, decorative and ornamental use only.
- Product is NOT INTENDED for the following:
  - A safety barrier to prevent unsupervised access to pools, hot tubs, spas or ponds.
  - As load bearing support for a building, structure, heavy objects or swings.
  - Used in structures that trap wind, rain or snow that would create extra load on the product.
  - Accumulated snow must be removed from roof.
  - DO NOT climb or walk on roof for any reason.

### LIMITED WARRANTY

We warrants this product against defects in materials and workmanship for a period of one (1) year from the original date of purchase. To the extent any such defects occur, our products will send the appropriate replacement part(s) at no charge.

This warranty does not cover:

- Inspection costs or labor for replacement of any defective parts);
- Incidental or consequential damages;
- Cosmetic defects which DO NOT affect performance;
- Normal wear and tear;
- Damage due to vandalism; acts of nature, including but not limited to wind, storms, hail, floods;
- Improper assembly, installation, or use;
- Discoloration or fading of the finish as a result of exposure to chemicals, spills, pool or salt water
- Corrosion/ rust.

Your product has been designed for safety and quality.

Any modifications made to the original product could compromise its structural integrity or function, and could lead to product failure or personal injury. As such, modifying this product voids any and all warranties.

This product is warranted for RESIDENTIAL USE ONLY, and is not for commercial, contract or other non-residential purposes. Products disclaims all other representations and warranties of any kind, express or implied.

The warranty applies to the original purchaser and is non-transferable. It does not apply to purchases of display models, or when the product is sold on clearance or "as is".

We makes no warranty whatsoever in respect to accessories or parts not supplied with it. This warranty shall apply only within the boundaries of the United States of America and Canada. This warranty gives the original purchaser specific rights, and the original purchaser may also have other rights, which vary from state to state.

