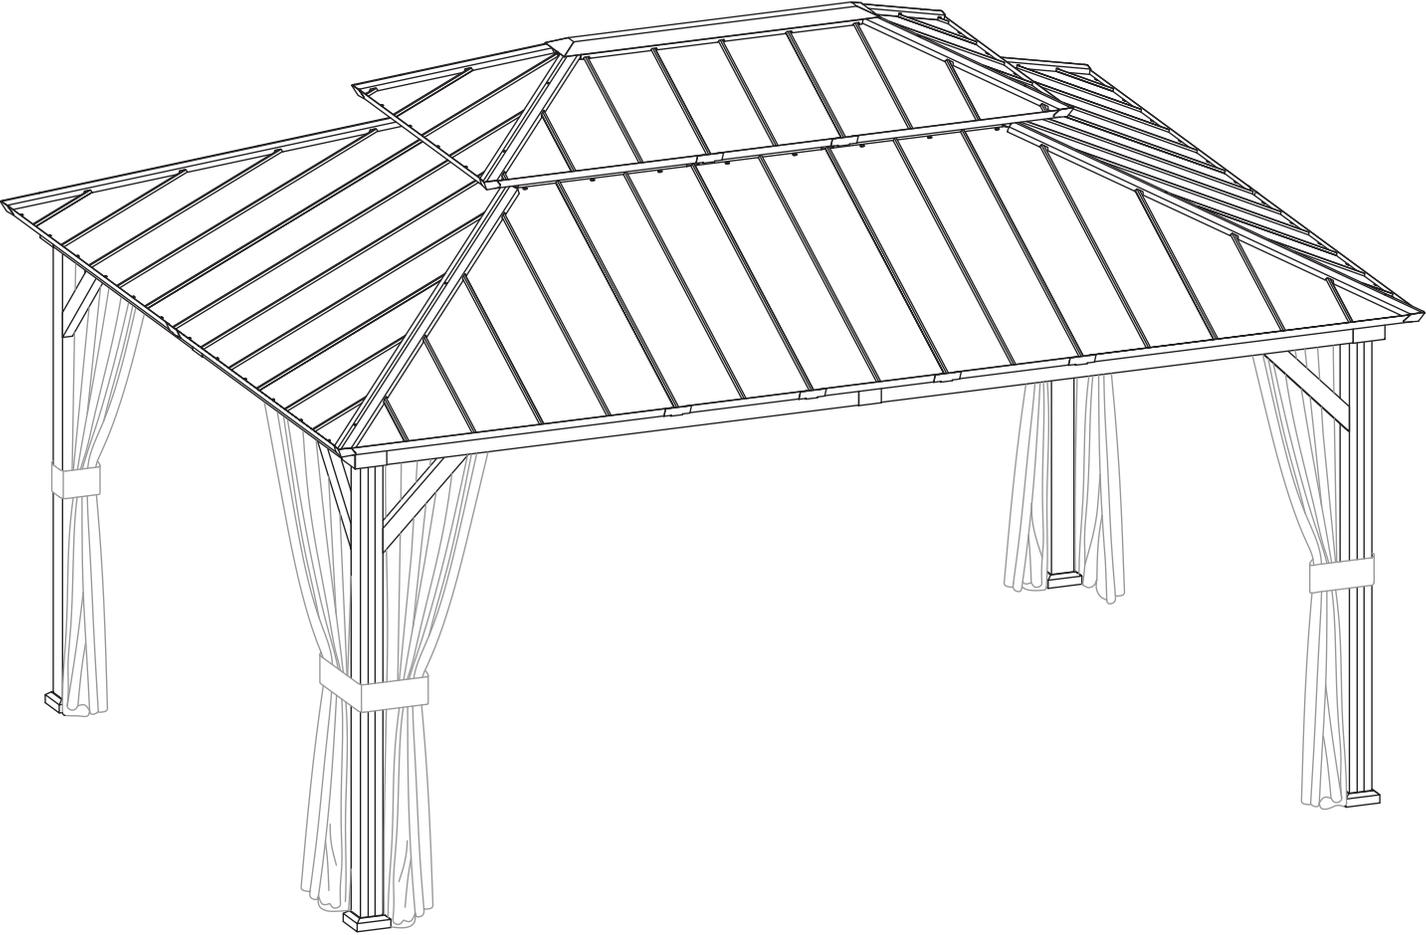


MODEL: IG10600042-1216S



OWNER'S MANUAL

12' X 16' Four Seasons Hard Top Gazebo with LED Lighting

TABLE OF CONTENTS

ASSEMBLY GUIDE.....02
USING YOUR PRODUCT.....05

June 19, 2024

QUESTIONS?

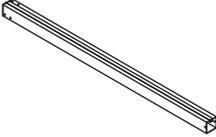
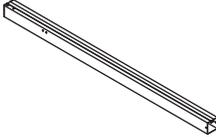
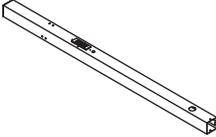
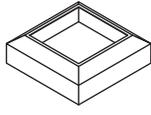
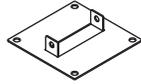
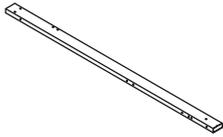
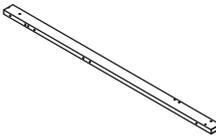
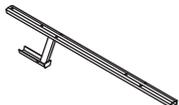
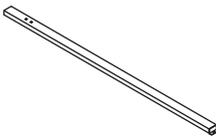
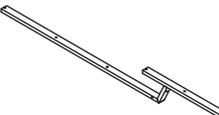
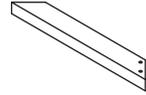
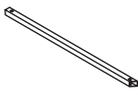
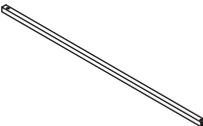
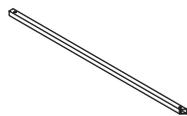
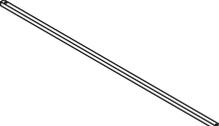
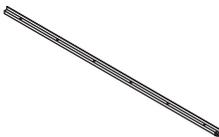
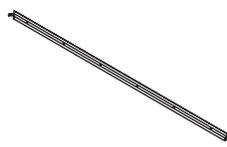
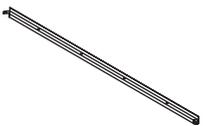
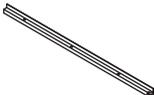
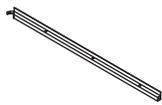
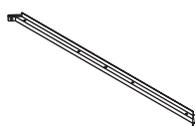
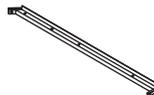
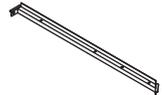
 **E-mail:** support@modernshade.org






















 **Toll Free:** 1-888-666-3070

 **Mon-Fri:** 9:00 ---17:00 PST.











ASSEMBLY GUIDE

PARTS LIST

A1 Post 1 (2 pieces) 	A2 Post 2 (1 piece) 	A3 Post 3 (1 piece) 	B Foot Cover (4 pieces) 	C Foot Base (4 pieces) 	D1 Cross Beam 1 (2 pieces) 
P0008008526	P0008008527	P0008008648	P0008008932	P0008008933	P0008008956
D2 Cross Beam 2 (2 pieces) 	D3 Cross Beam 3 (2 pieces) 	D4 Cross Beam 4 (2 pieces) 	E1 Roof Rib 1 (4 pieces) 	E2 Roof Rib 2 (4 pieces) 	E3 Roof Rib 3 (4 pieces) 
P0008008957	P0008008946	P0008008947	P0008008651	P0008008652	P0008008684
F1 Middle Cross Beam 1 (6 pieces) 	F2 Middle Cross Beam 2 (4 pieces) 	G1 Support Bracket 1 (4 pieces) 	G2 Support Bracket 2 (4 pieces) 	H1 Mosquito Net Rod 1 (4 pieces) 	H2 Mosquito Net Rod 2 (4 pieces) 
P0008008654	P0008008685	P0008008542	P0008008543	P0008008958	P0008008544
J1 Top Beam 1 (4 pieces) 	J2 Top Beam 2 (4 pieces) 	J3 Top Beam 3 (4 pieces) 	J4 Top Beam 4 (4 pieces) 	J5 Top Beam 5 (14 pieces) 	J6 Top Beam 6 (4 pieces) 
P0008008656	P0008008657	P0008008658	P0008008659	P0008008687	P0008008688
J7 Top Beam 7 (2 pieces) 	K1 Roof Lower Border 1 (2 pieces) 	K2 Roof Lower Border 2 (2 pieces) 	K3 Roof Lower Border 3 (2 pieces) 	K4 Roof Lower Border 4 (2 pieces) 	K5 Roof Lower Border 5 (8 pieces) 
P0008008689	P0008008550	P0008008551	P0008008660	P0008008661	P0008008690
L1 Roof Top Border 1 (2 pieces) 	L2 Roof Top Border 2 (2 pieces) 	L3 Roof Top Border 3 (2 pieces) 	M1 Roof Upper Border 1 (2 pieces) 	M2 Roof Upper Border 2 (2 pieces) 	M3 Roof Upper Border 3 (2 pieces) 
P0008008662	P0008008691	P0008008692	P0008008664	P0008008693	P0008008694
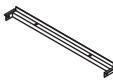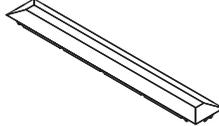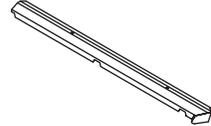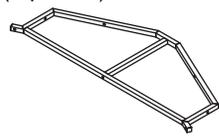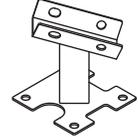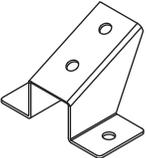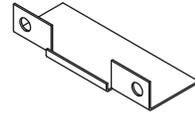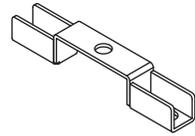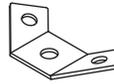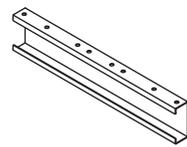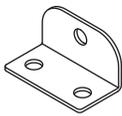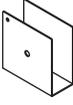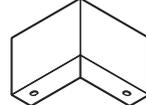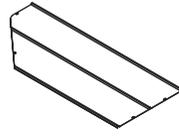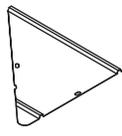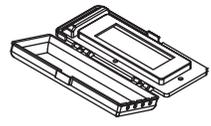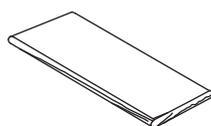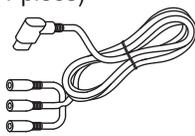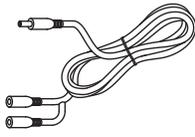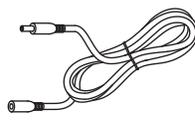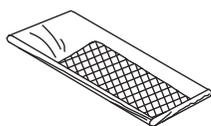
<p>M4 Roof Upper Border 4 (2 pieces)</p> 	<p>N1 Roof Cover 1 (1 piece)</p> 	<p>N2 Roof Cover 2 (4 pieces)</p> 	<p>N3 Roof Cover 3 (4 pieces)</p> 	<p>P Roof Top Support Frame (2 pieces)</p> 	<p>Q1 Connector 1 (4 pieces)</p> 
P0008008959	P0008008960	P0008008668	P0008008695	P0008008696	P0008008570
<p>Q2 Connector 2 (10 pieces)</p> 	<p>Q3 Connector 3 (14 pieces)</p> 	<p>Q4 Connector 4 (38 pieces)</p> 	<p>Q5 Connector 5 (12 pieces)</p> 	<p>Q6 Connector 6 (4 pieces)</p> 	<p>Q7 Connector 7 (8 pieces)</p> 
P0008008571	P0008008573	P0008008575	P0008008577	P0008008956	P0008008579
<p>Q8 Connector 8 (4 pieces)</p> 	<p>Q9 Connector 9 (4 pieces)</p> 	<p>Q10 Connector 10 (1 piece)</p> 	<p>R1 Roof Plate 1 (8 pieces)</p> 	<p>R2 Roof Plate 2 (4 pieces)</p> 	<p>R3 Roof Plate 3 (4 pieces)</p> 
P0008008950	P0008008951	P0008008961	P0008008670	P0008008671	P0008008672
<p>R4 Roof Plate 4 (4 pieces)</p> 	<p>R5 Roof Plate 5 (4 pieces)</p> 	<p>R6 Roof Plate 6 (4 pieces)</p> 	<p>R7 Roof Plate 7 (4 pieces)</p> 	<p>S1 Roof Top Plate 1 (2 pieces)</p> 	<p>S2 Roof Top Plate 2 (2 pieces)</p> 
P0008008673	P0008008674	P0008008675	P0008008676	P0008008962	P0008008697
<p>S3 Roof Top Plate 3 (2 pieces)</p> 	<p>S4 Roof Top Plate 4 (2 pieces)</p> 	<p>S5 Roof Top Plate 5 (4 pieces)</p> 	<p>S6 Roof Top Plate 6 (4 pieces)</p> 	<p>T Hook (1 piece)</p> 	<p>U Electrical Power Cover (1 piece)</p> 
P0008008698	P0008008699	P0008008677	P0008008678	P0008008594	P0008008595
<p>V Privacy Curtain (1 piece)</p> 	<p>X1 Wire 1 (Pre-Installed) (1 piece)</p> 	<p>X4 Wire 2 (1 piece)</p> 	<p>X7 Wire 3 (2 pieces)</p> 	<p>Y Mosquito Netting (1 piece)</p> 	
P0008008965	P0008008598	P0008008601	P0008008963	P0008008966	

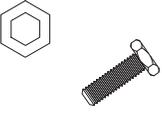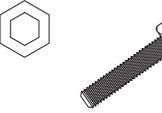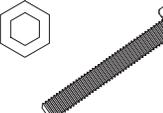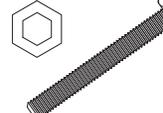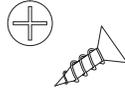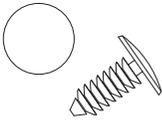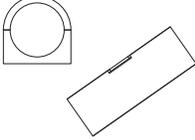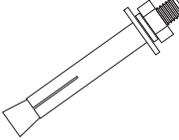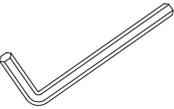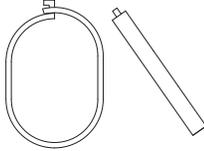HARDWARE

<p>AA Bolt M6*20 (472+23 pieces)</p> 	<p>BB Bolt M6*35 (12+1 pieces)</p> 	<p>CC Bolt M6*45 (18+1 pieces)</p> 	<p>DD Bolt M6*60 (16+1 pieces)</p> 	<p>EE Bolt M3*9 (4+1 pieces)</p> 	<p>FF M6 Flat washer (518+26 pieces)</p> 
<p>H0008008036</p>	<p>H0008008116</p>	<p>H0008008016</p>	<p>H0008008091</p>	<p>H0008008092</p>	<p>H0008008057</p>
<p>GG M6 Sealant Washer (16+1 pieces)</p> 	<p>HH Plastic Clip (24+4 pieces)</p> 	<p>JJ Wire Mountng (32+6 pieces)</p> 	<p>KK Concrete Anchor M6*60 (8 pieces)</p> 	<p>LL Wrench M6 (2 pieces)</p> 	<p>MM M6 Allen Key with Screw Driver (1 piece)</p> 
<p>H0008008060</p>	<p>H0008008093</p>	<p>H0008008094</p>	<p>H0008008095</p>	<p>H0008008011</p>	<p>H0008008132</p>
<p>NN M6 Allen Key (1 piece)</p> 	<p>QQ Rings (120+8 pieces)</p> 				
<p>H0008008133</p>	<p>H0008008113</p>				

IMPORTANT:

This instruction manual contains important information necessary for the proper assembly and safe use of the product.

Read and follow all warnings and instructions before assembling and using the product.

Follow all warnings and instructions when using the product.

Keep this manual for future reference.

Installer/Assembler: leave these instructions with the consumer.

SAFETY ALERT KEY

⚠ DANGER

Indicates a hazardous situation that, if not avoided, will result in death or serious injury.

⚠ CAUTION

Indicates a hazardous situation that, if not avoided, could result in minor or moderate injury.

⚠ WARNING

Indicates a hazardous situation that, if not avoided, could result in death or serious injury.

NOTICE

Indicates information considered important, but not hazard-related (e.g.messages related to property damage).

ASSEMBLY INSTRUCTIONS

•Please carefully unpack each of the components and hardware. check the components against the parts list and make sure there are no missing parts. lay pieces on cardboard or a soft mat to help protect the pieces from scratches.

⚠ CAUTION

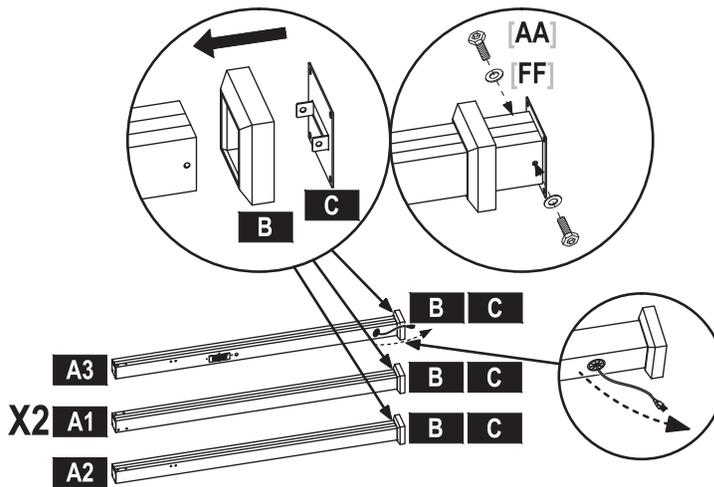
Watch for sharp edges when handling the pieces, wear gloves to avoid injury.

- For ease of assembly, it is recommended to have 3 or more people and allow enough time to completely finish the assembly. assembly can take 6-8 hours. a step-ladder is required for assembly (not included).
- Follow step by step instructions, and follow all safety warnings provided with your tools.
- DO NOT tighten screws until all the screws and washers are properly installed. tighten screws securely, do not over tighten.
- Gazebo should not be used in inclement weather and high winds.

STEP 01 Pull the electric cord out through the plug on post **A3**.


Slide Foot Cover **B** onto the bottom of Post 1 **A1**. Attach Foot Base **C** to **A1** with one (1) M6 Flat Washer **[FF]** and one (1) M6x20 Bolt **[AA]** on two sides. Slide the Foot Cover **B** down to cover the Foot Base **C**. Repeat this process for the other Post 1 **A1**, Post 2 **A2**, and Post 3 **A3**.

[AA] x 8
[FF] x 8



STEP 02 On the top, skip the first one (1) hole on each side and add one (1) M6 Flat Washer **[FF]** and one (1) M6 x 20 Bolt **[AA]** to the second hole on top of Cross Beam 2 **D2** and Cross Beam 1 **D1**.

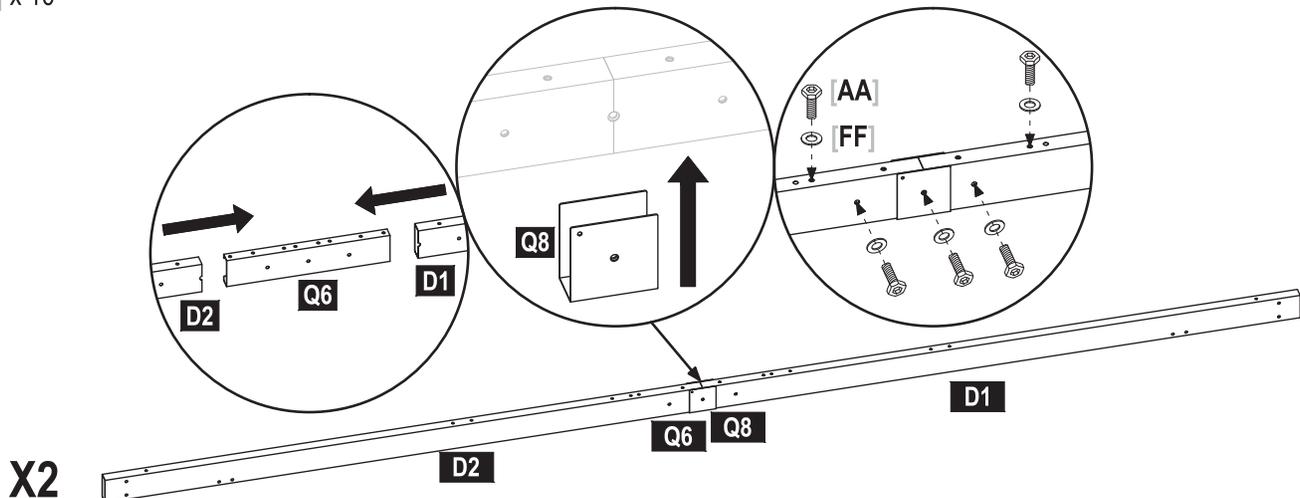
[AA] x 10
[FF] x 10



STEP 03 On the top, skip the first two (2) holes on each side and add one (1) M6 Flat Washer [FF] and one (1) M6 x 20 Bolt [AA] to the third hole on top of Cross Beam 3 [D3] and Cross Beam 4 [D4].

[AA] x 10

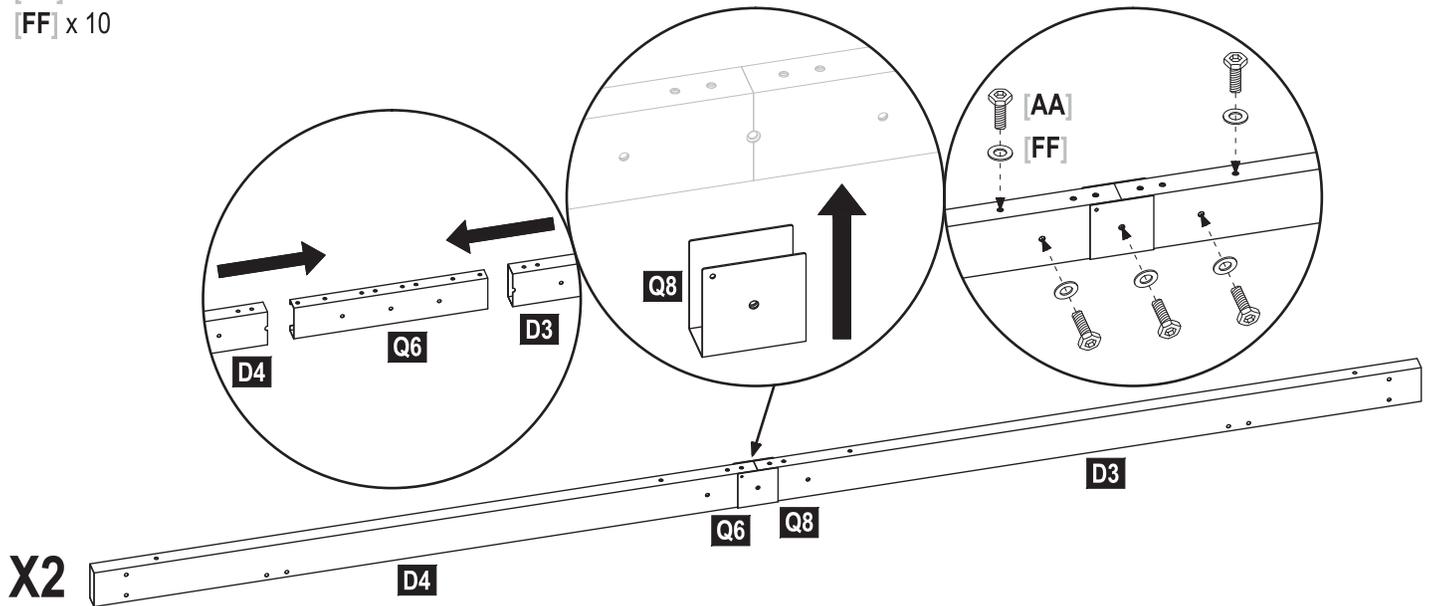[FF] x 10




STEP 04 Connect the cross beam assembly from Step 02 [D1] + [D2] to the tops of Post 1 [A1] and Post 2 [A2] using two (2) M6 Flat Washers [FF] and two (2) M6 x 20 Bolts [AA] on each end.

Connect the second cross beam assembly from Step 02 to the tops of the other Post 1 [A1] and Post 3 [A3] using two (2) M6 Flat Washers [FF] and two (2) M6 x 20 Bolts [AA] on each end.


[AA] x 8

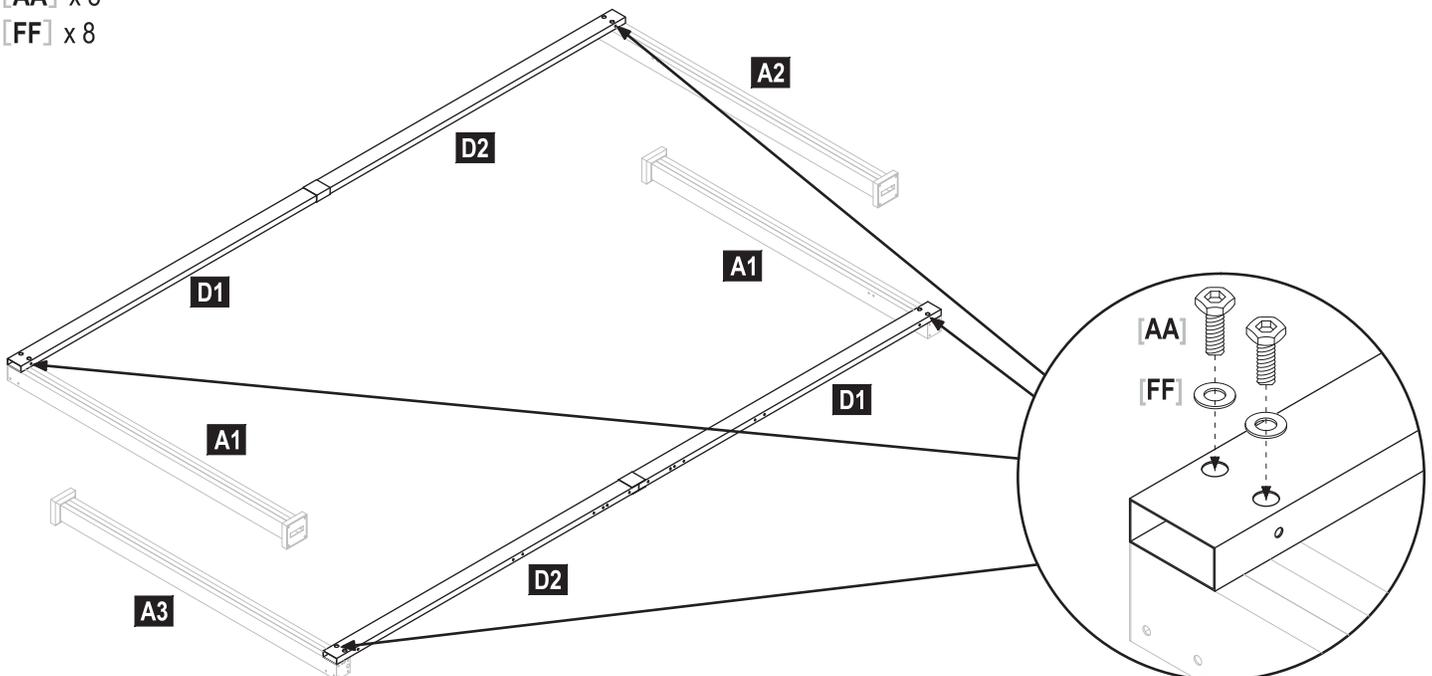[FF] x 8




STEP 05 Use four (4) M6 x 20 Bolts [AA] and four (4) M6 Flat Washers [FF] to attach one (1) cross beam assembly [D3 + D4] to posts [A1] and [A3]. Repeat with the other cross beam assembly [D3 + D4] to posts [A1] and [A2].

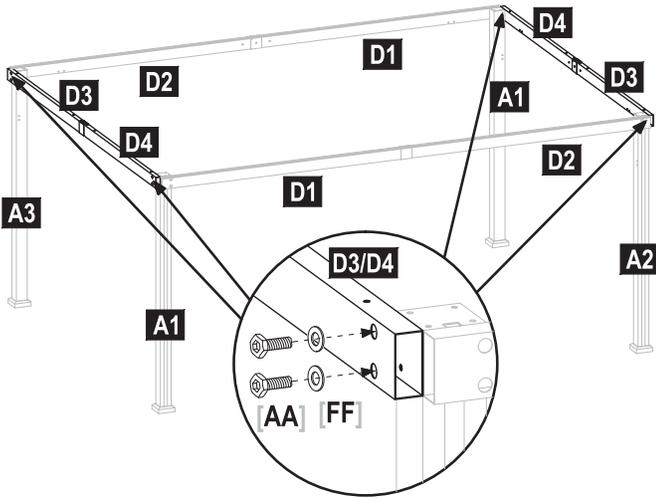- [AA] x 8
- [FF] x 8




STEP 06 Attach one (1) Connector 9 [Q9] to the four (4) corners using two (2) M6 Flat Washers [FF] and two (2) M6x20 Bolts [AA] through the bottom of Connector 9 [Q9]. Attach one (1) Connector 1 [Q1] to each of the corners with the top pointing toward the center of the gazebo. Used four (4) M6 Flat Washers [FF] and four (4) M6x20 Bolts [AA] for each connector.

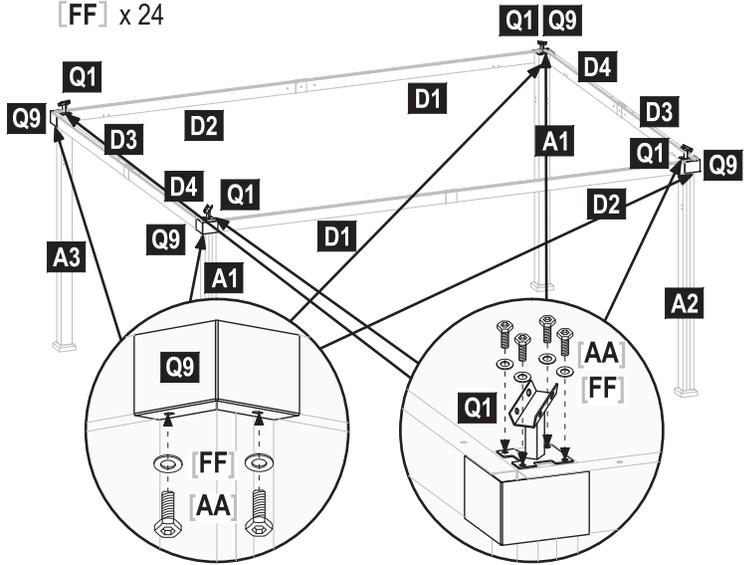- [AA] x 24
- [FF] x 24




STEP 07 Attach two (2) Connector 7 [Q7] to the sides of the posts [A1], [A2], and [A3] that face into the gazebo using four (4) M6 Flat Washers [FF] and four (4) M6x20 Bolts [AA]. Standing in front of the outside corner of the post, attach a Support Bracket 1 [G1] to the Connector 7 [Q7] on the right using one (1) M6 Flat Washer [FF] and one (1) M6x20 Bolt [AA]. Attach a Support Bracket 2 [G2] to the Connector 7 [Q7] on the left using one (1) M6 Flat Washer [FF] and one (1) M6x20 Bolt [AA]. Attach both Support Brackets to the Cross Beams above them using two (2) M6 Flat Washers [FF] and two (2) M6x60 Bolts [DD] each. Repeat this process in all four (4) corners of the gazebo.

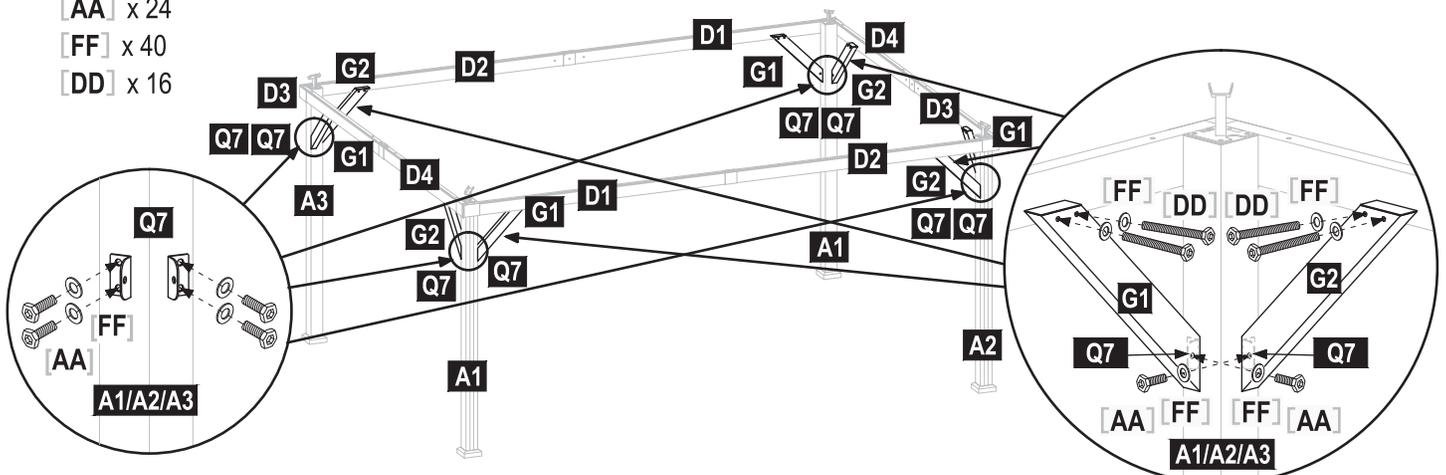- [AA] x 24
- [FF] x 40
- [DD] x 16




STEP 08 Attach Mosquito Net Rod 1 [H1] to Cross Beam 1 [D1] and Cross Beam 2 [D2] (the long side of the gazebo) using two (2) M6 Flat Washers [FF] and two (2) M6x20 Bolts [AA]. Attach Mosquito Net Rod 2 [H2] to Cross Beam 3 [D3] and Cross Beam 4 [D4] (the short side of the gazebo) using two (2) M6 Flat Washers [FF] and two (2) M6x20 Bolts [AA].

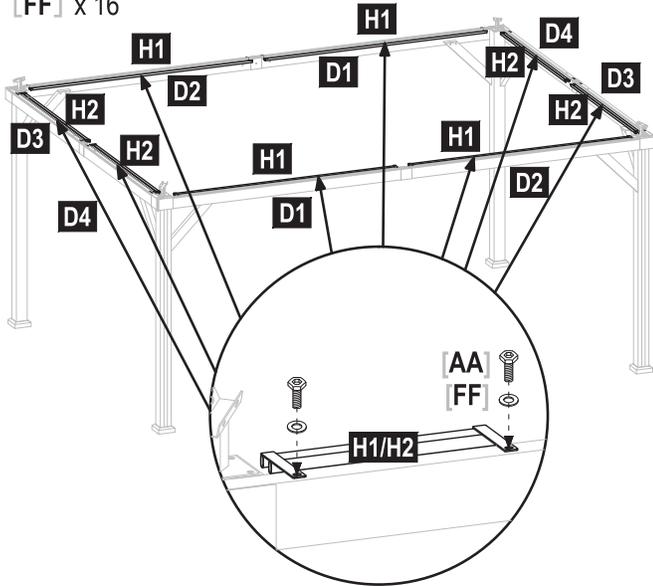- [AA] x 16
- [FF] x 16




STEP 09 Slide the raised end of Roof Rib 3 [E3] into the open end of Roof Rib 1 [E1]. Attach Connector 5 [Q5] to the holes on top of Roof Rib 1 [E1] (two (2) holes) and Roof Rib 3 [E3] (1 hole) using one (1) M6 Flat Washer [FF] and one (1) M6x20 Bolt [AA] each. Make sure all Connector 5s [Q5] are attached with the wings pointing toward Roof Rib 3 [E3]. Repeat this process until you have four (4) Roof Rib Assemblies.

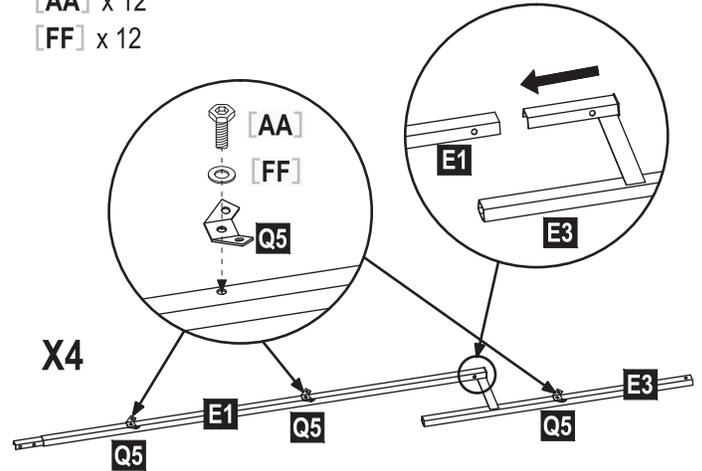- [AA] x 12
- [FF] x 12




STEP 10 Slide the other end of Roof Rib 1 [E1] into Roof Rib 2 [E2]. Place Roof Rib [E2] + [E1] into Connector 1 [Q1] and secure together using two (2) M6 Flat Washers [FF] and two (2) M6x20 Bolts [AA] on each side. Repeat this process on all four (4) corners.

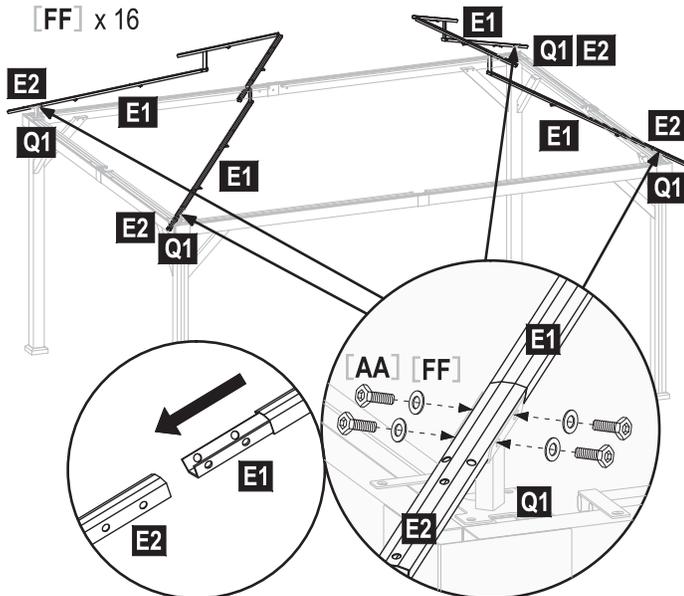- [AA] x 16
- [FF] x 16




STEP 11 Attach the tops of Roof Rib 3s [E3] together using Connector 10 [Q10] using one (1) M6 Flat Washer [FF] and one (1) M6x20 Bolt [AA] at each corner.

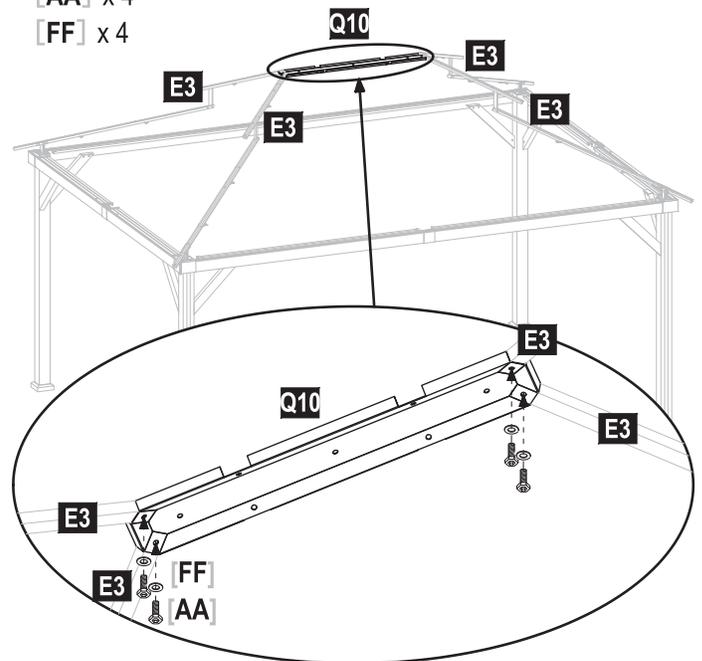
- [AA] x 4
- [FF] x 4



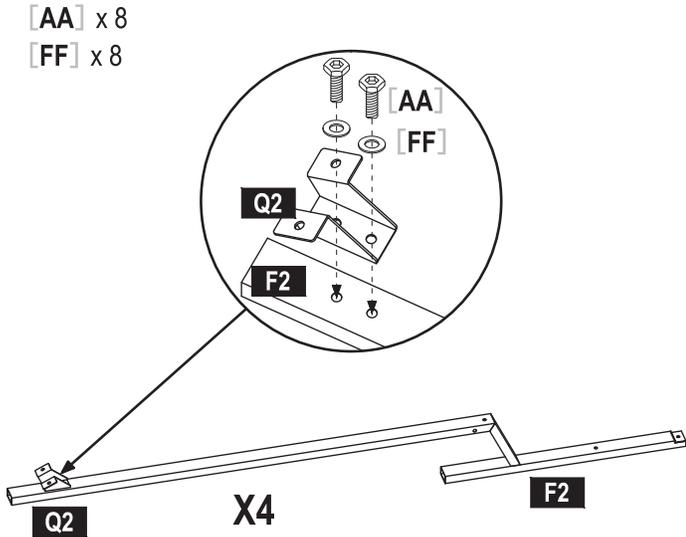
STEP 12 On the long side of Middle Cross Beam 2 **F2**, connect Connector 2 **Q2** with two (2) M6 Flat Washers **FF** and two (2) M6x20 Bolts **AA**. Repeat this process for all four (4) Middle Cross Beam 2 **F2** pieces.



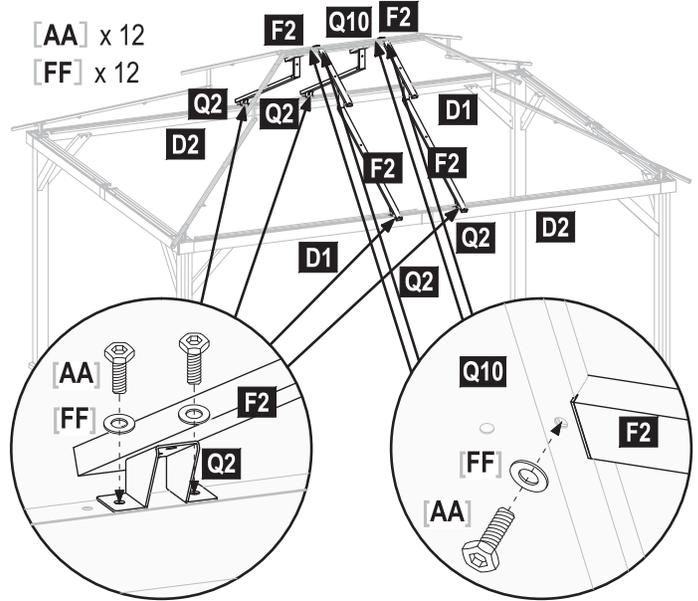
STEP 13 Flip each Middle Cross Beam 2 **F2** over and attach the Connector 2 **Q2** to the top of Cross Beam 1 **D1** and Cross Beam 2 **D2** using one (1) M6 Flat Washer **FF** and one (1) M6 x 20 Bolt **AA** in each hole. At the top, connect each Middle Cross Beam 2 **F2** to Connector **Q10** using one (1) M6 Flat Washer **FF** and one (1) M6 x 20 Bolt **AA** in each hole.



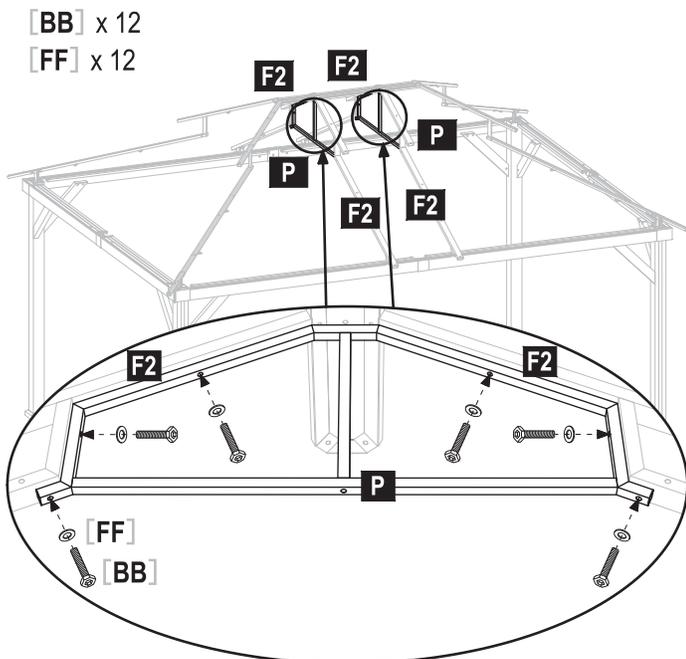
STEP 14 Attach one (1) Roof Top Support Frame **P** under each set of Middle Cross Beam 2 **F2** pieces using six (6) M6 Flat Washers **FF** and six (6) M6 x 35 Bolts **BB**.



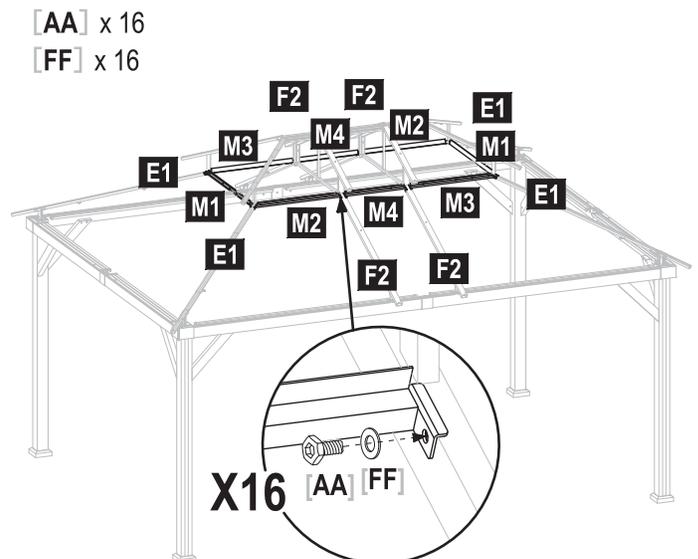
STEP 15 Connect Roof Upper Border 1 **M1** between the Roof Rib 1 **E1** pieces on the short side of the gazebo. From left to right, connect Roof Upper Border 2 **M2**, Roof Upper Border 4 **M4**, and then Roof Upper Border 3 **M3** on the long side of the gazebo. Use sixteen (16) M6 Flat Washers **FF** and sixteen (16) M6 x 20 Bolts **AA** for all of the connections.



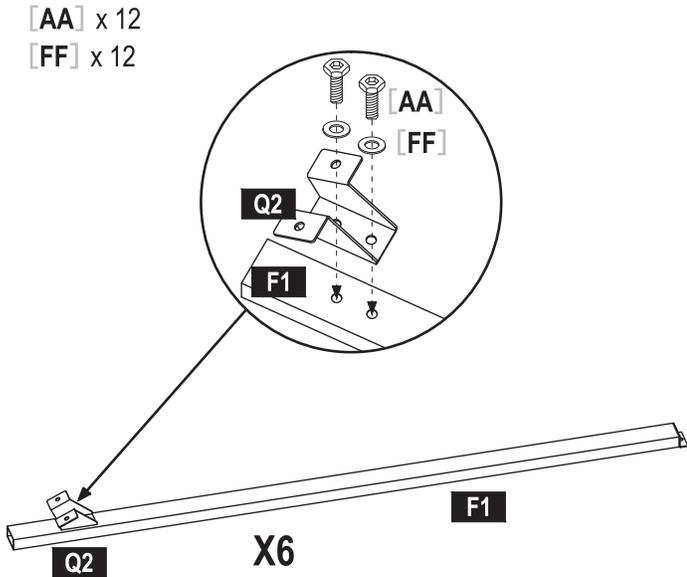
STEP 16 Locate Middle Cross Beam 1 **F1** and place it flat on the ground with the tab at one (1) end flat on the floor. On the other end, attach Connector 2 **Q2** with the ends pointing toward the short side of the bar two (2) M6 Flat Washers **FF** and using two (2) M6x20 Bolts **AA**. Repeat this step for all six Middle Cross Beam 1s **F1**.



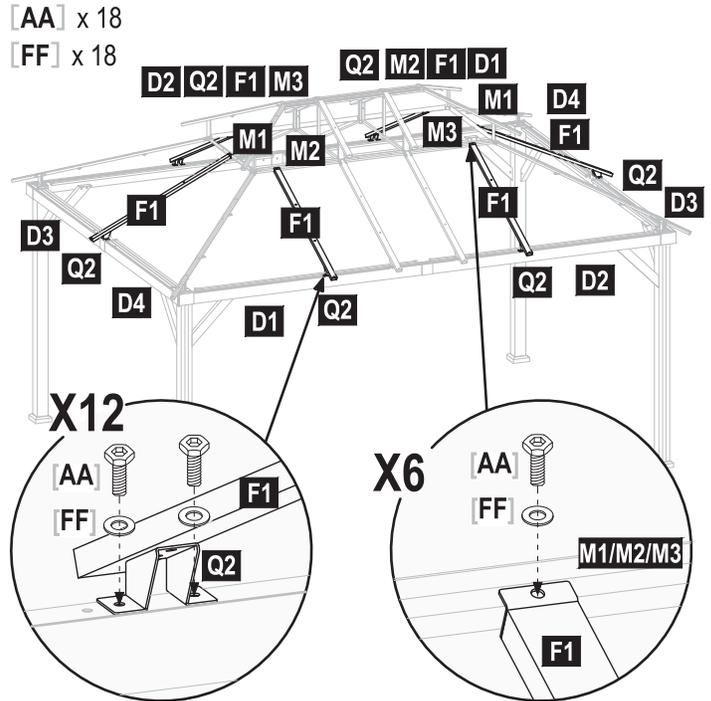
STEP 17 Attach Middle Cross Beam 1s **F1** to Roof Upper Borders **M1**, **M2**, and **M3** using one (1) M6 Flat Washer **FF** and one (1) M6x20 Bolt **AA** per hole. On the other end of each Middle Cross Beam 1 **F1**, connect the Connector 2 **Q2** to the Cross Beams **D1** - **D4**. There should be two (2) Middle Cross Beam 1s on each long side of the gazebo, and one (1) on each short side of the gazebo.



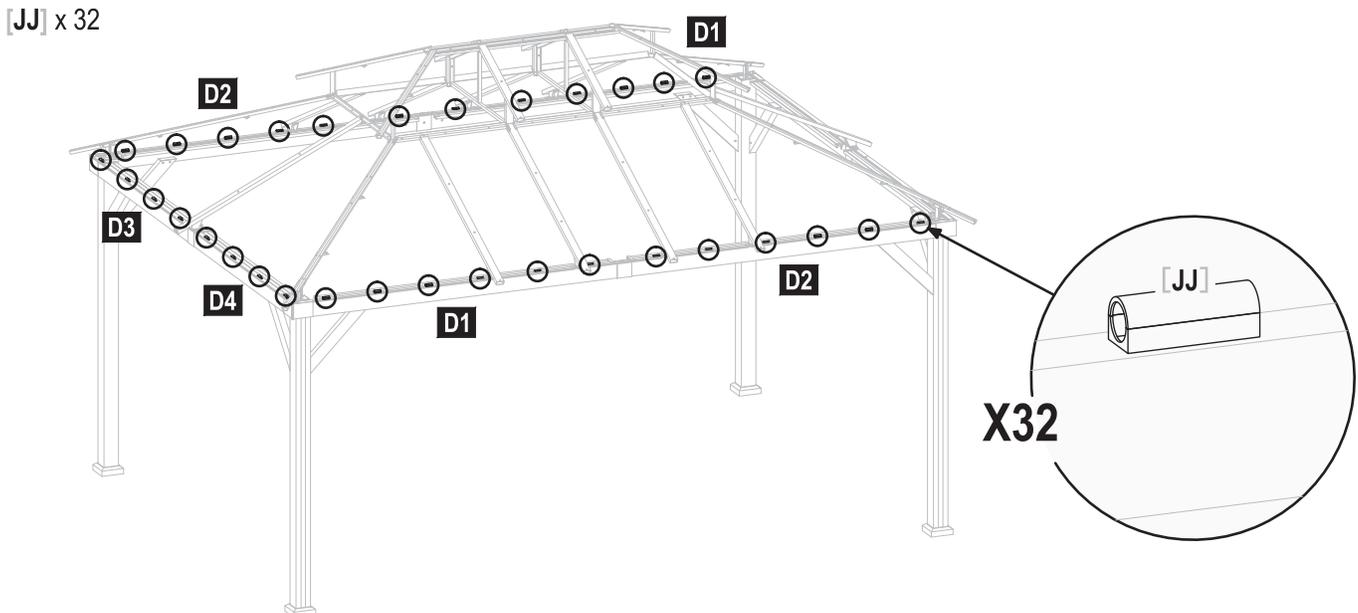
STEP 18 Attach all 32 Wire Mounting pieces on the Cross Beam 1s **D1** and Cross Beam 2s **D2** around the gazebo.



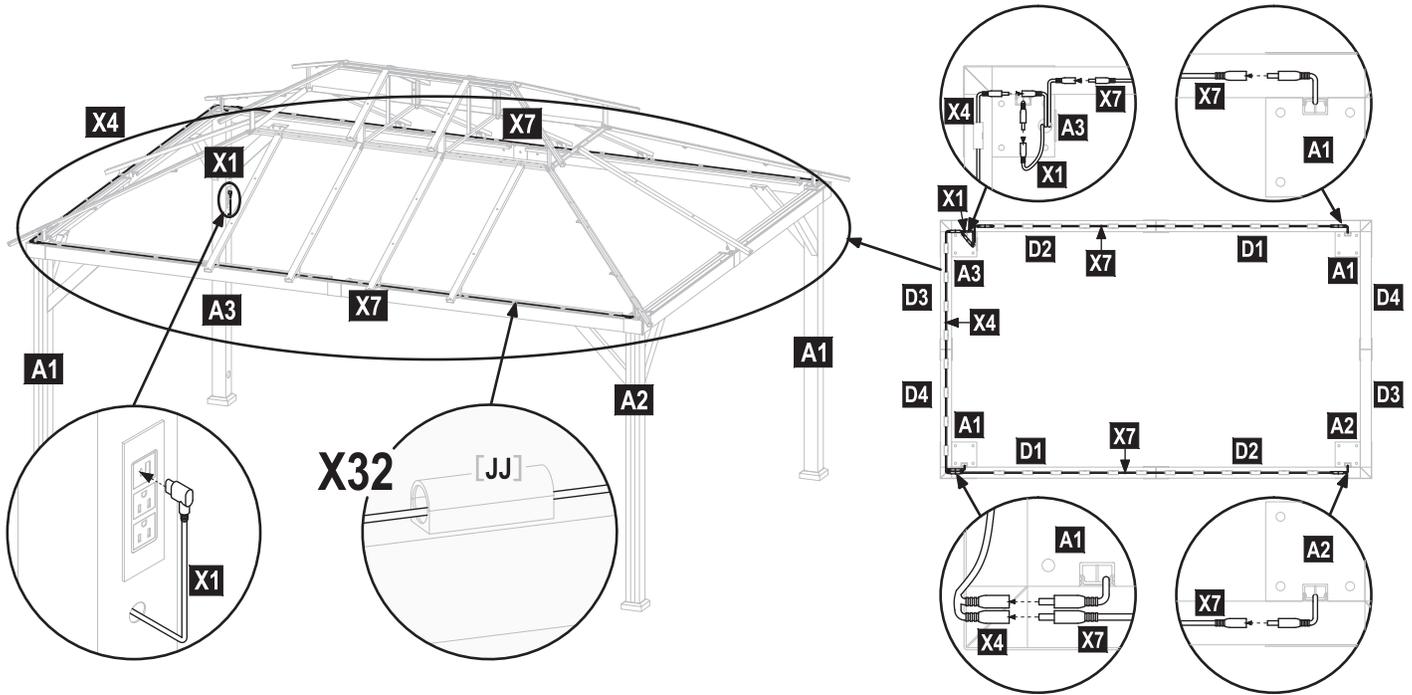STEP 19 Connect Wire 1 [X1] to the outlet in Post 3 [A3]. Connect the other end of Wire 1 [X1] to Wire 2 [X4] and Wire 3 [X7]. Run first Wire 3 [X7] through the Wire Mountings [JJ] along the long side of the gazebo and connect to the wire in Post 1 [A1]. Run Wire 2 [X4] through Wire Mountings [JJ] along the short side of the gazebo and connect to the second Wire 3 [X7]. Run the second Wire 3 [X7] through Wire Mountings [JJ] along the long side of the gazebo and connect to the wire in Post 2 [A2].



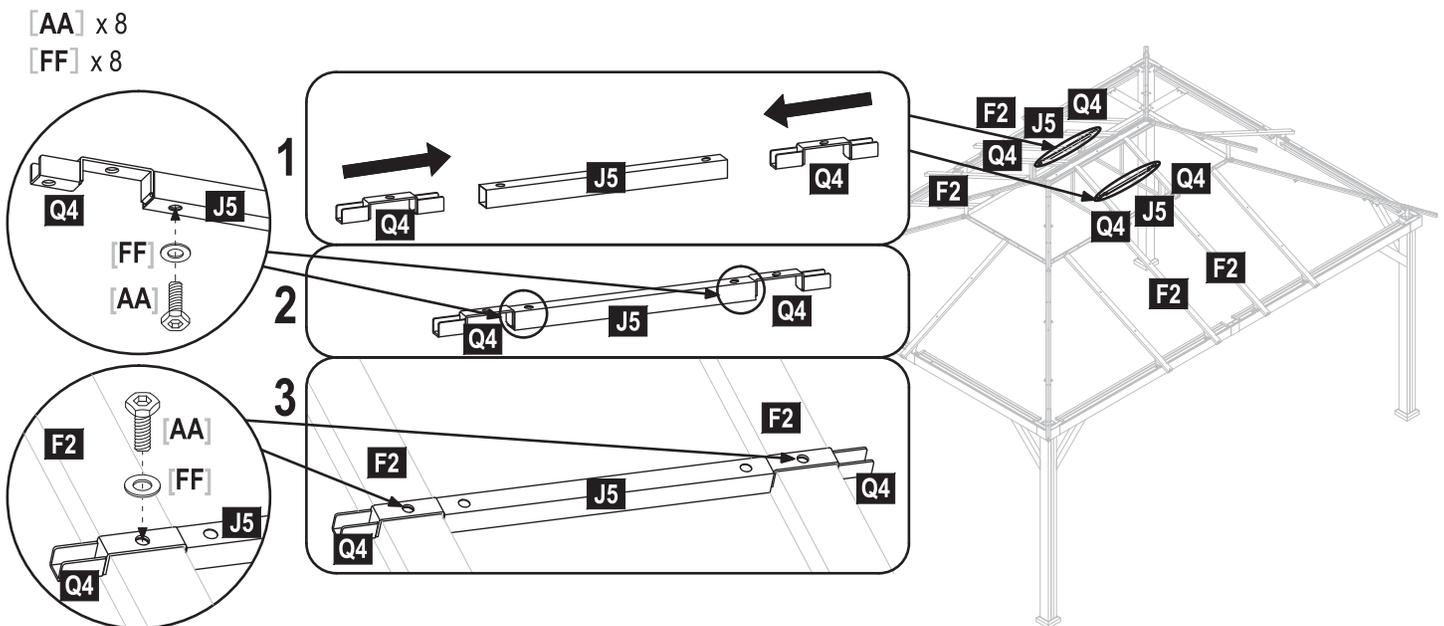
STEP 20 Insert one (1) Connector 4 [Q4] into each end of Top Beam 5 [J5] with the flat part sticking up. Attach with two (2) M6 Flat Washers [FF] and two (2) M6 x 20 Bolts [AA]. Attach combined piece between Middle Cross Beam 2s [F2] using two (2) M6 Flat Washers [FF] and two (2) M6 x 20 Bolts [AA].



STEP 21 Insert one (1) Connector 4 **Q4** into each end of Roof Lower Border 5 **K5** with the flat part sticking up. Attach combined piece between Middle Cross Beam 2s **F2** using two (2) M6 Flat Washers **[FF]** and two (2) M6 x 20 Bolts **[AA]**.

[AA] x 4

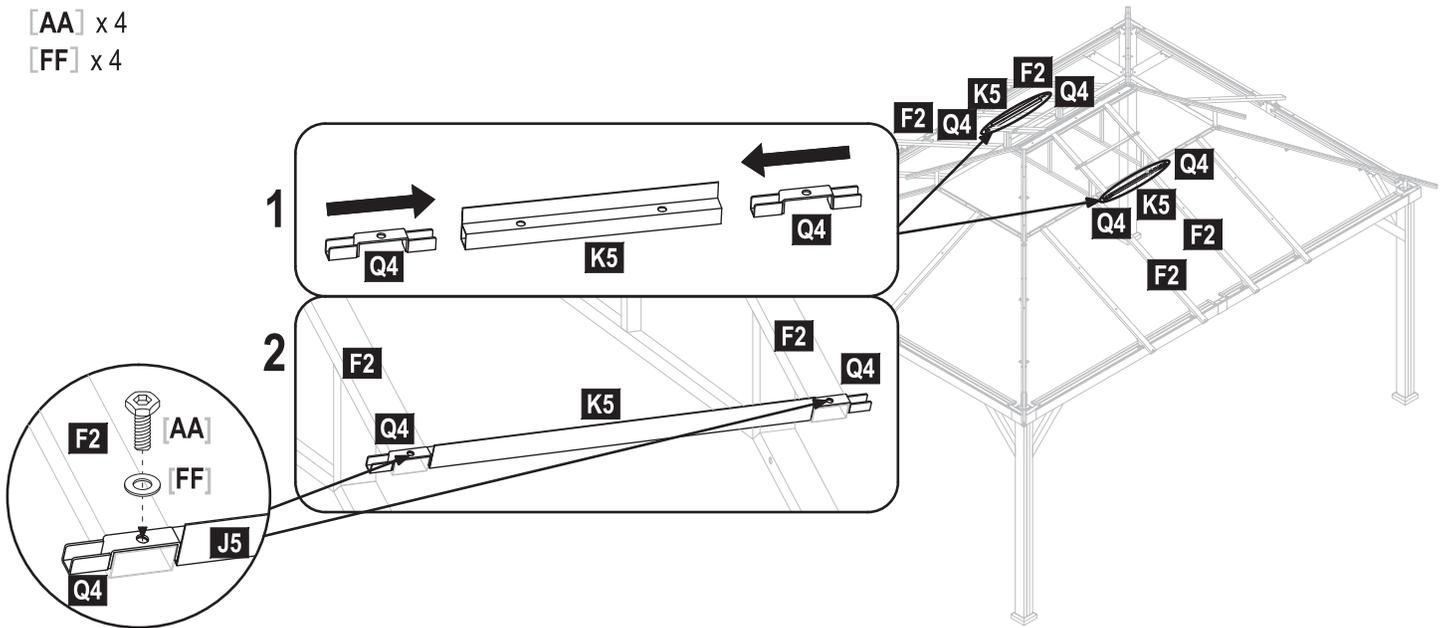
[FF] x 4



STEP 22 Slide each Top Beam 6 **J6** onto the end of the Connector 4 **Q4** attached to the Top Beam 6s **J6** from Step 20. Attach with one (1) M6 Flat Washer **[FF]** and one (1) M6 x 20 Bolt **[AA]**. Attach the other end of the Top Beam 6s **J6** Connector 5 **Q5** already attached to the gazebo using one (1) M6 Flat Washer **[FF]** and one (1) M6 x 20 Bolt **[AA]**. Then, attach Top Beam 7 **J7** between the Top Beam 6s **J6** using two (2) M6 Flat Washers **[FF]** and two (2) M6 x 20 Bolts **[AA]**.


[AA] x 12

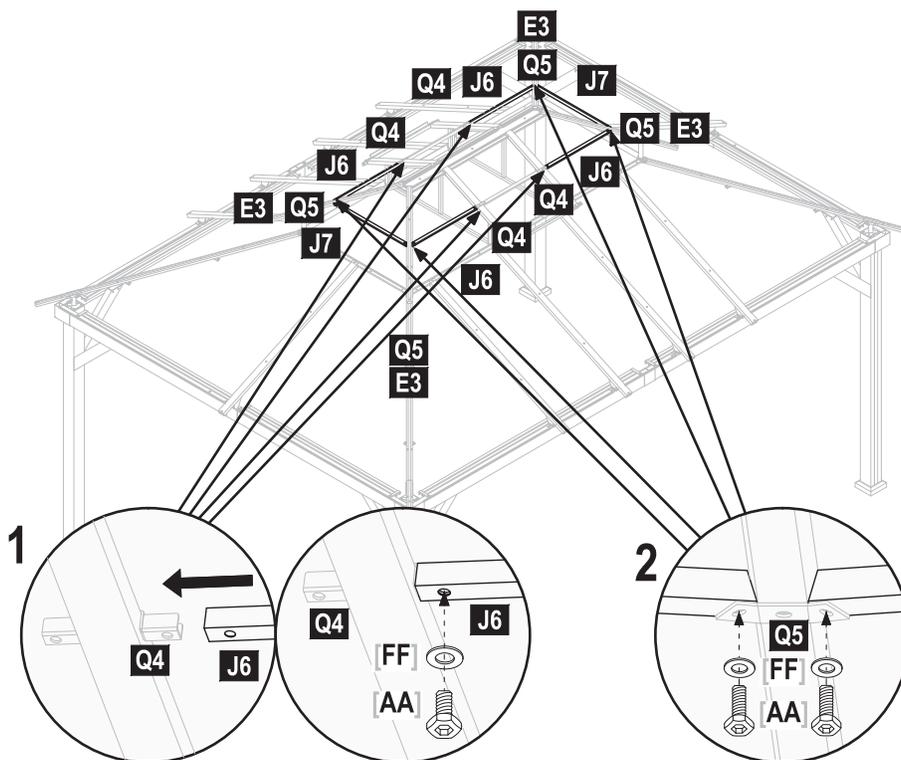[FF] x 12




STEP 23 Attach Roof Top Border 2 **L2** and Roof Top Border 3 **L3** onto the Connector 4s **Q4** on the long sides of the gazebo. Overlap ends of Top Border 1s **L1** with the other top borders at the corners and attach using one (1) M6 Flat Washer **[FF]** and one (1) M6 x 20 Bolt **[AA]** at each corner.

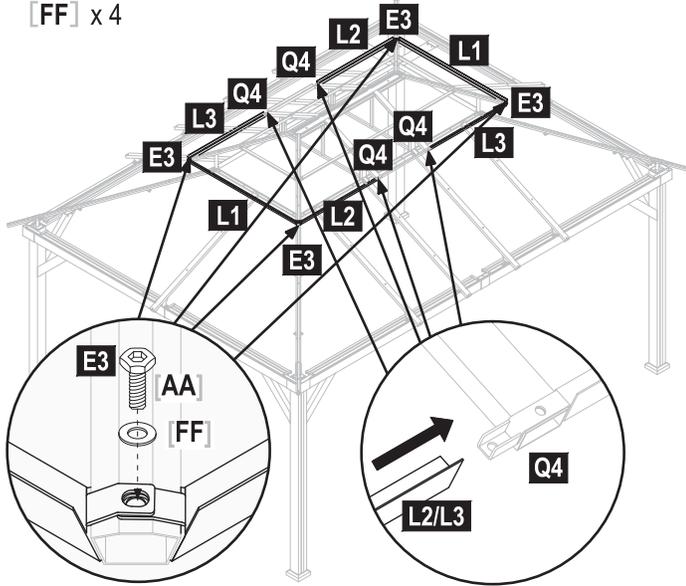[AA] x 4
[FF] x 4




STEP 24 Attach Connector 3 **Q3** over the connections at the ends of Roof Top Border 2 **L2** and Roof Top Border 3 **L3** using two (2) M6 Flat Washers **[FF]** and two (2) M6 x 20 Bolts **[AA]**.

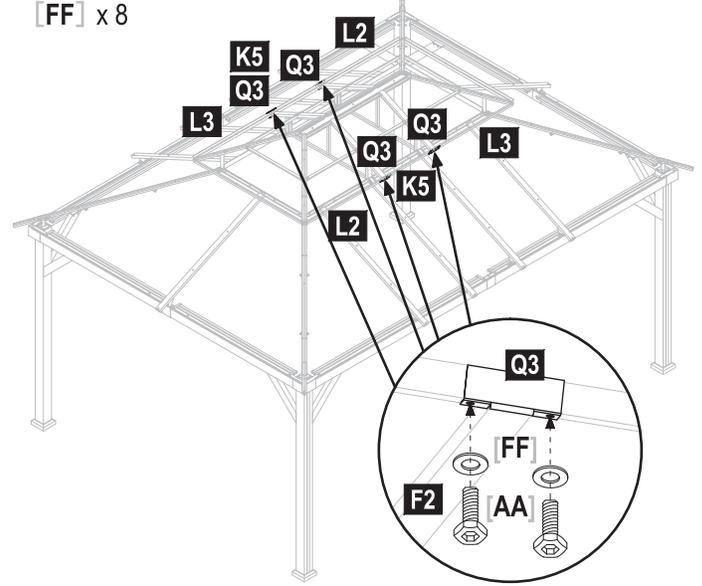[AA] x 8
[FF] x 8




STEP 25 Attach Roof Top Plates **S1 - S6** on the long side of the gazebos from left to right: **S5**, **S2**, **S1**, **S3**, and **S6**. On the short side of the gazebo from left to right: **S5**, **S4**, **S6**. Use forty (40) M6 Flat Washers **[FF]** and forty (40) M6 x 20 Bolts to make all connections.

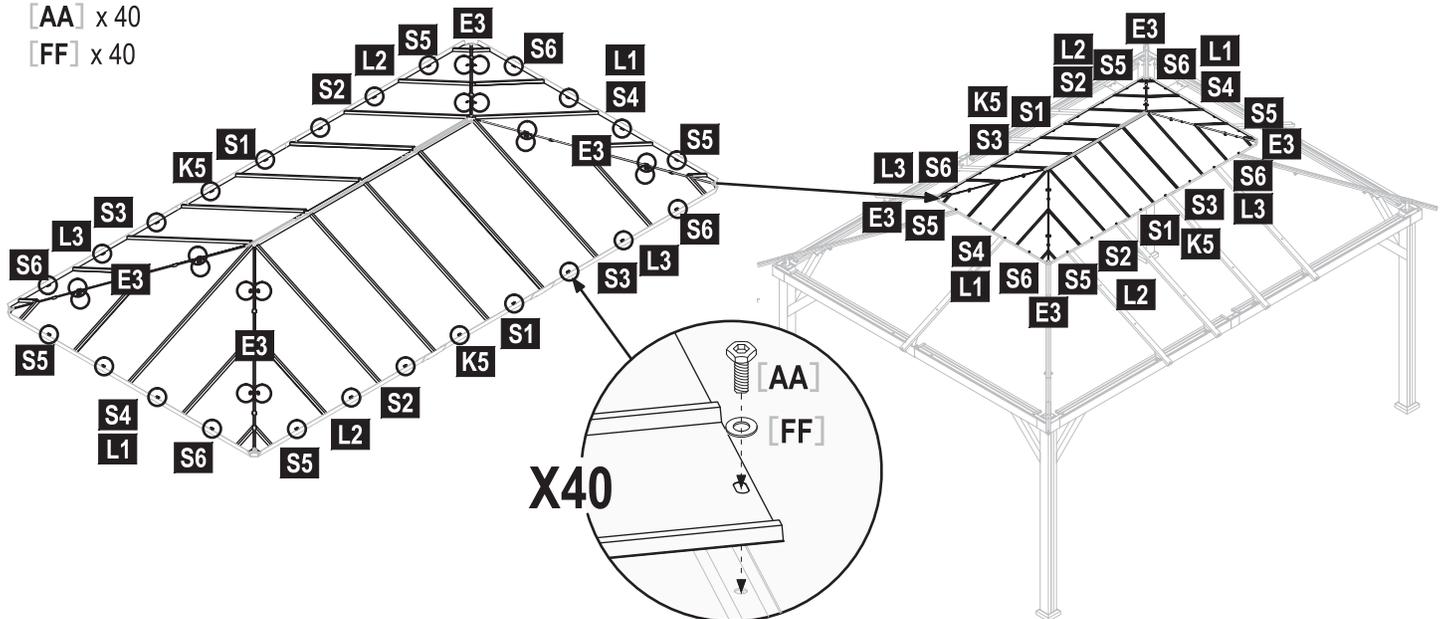[AA] x 40
[FF] x 40




STEP 26 Attach one (1) Roof Cover 3 **N3** to each Roof Rib 3 **E3** using two (2) M6 x 45 Bolts **[CC]**, two (2) M6 Flat Washers **[FF]**, and two (2) M6 Sealant Washers **[GG]**.

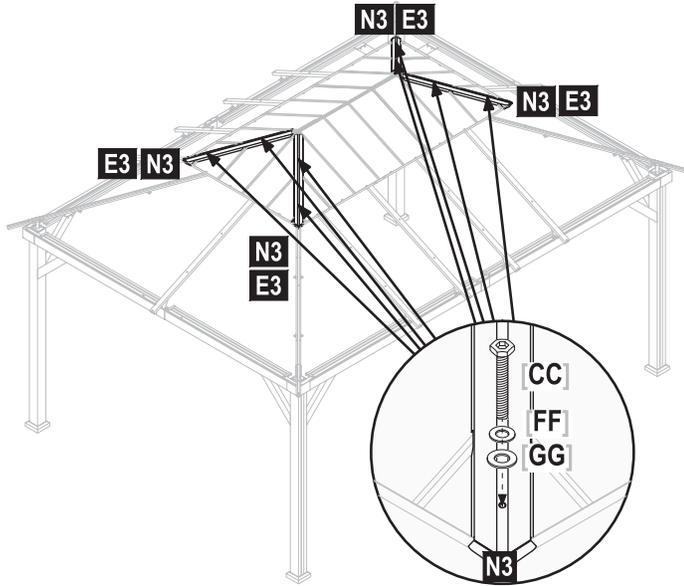- [CC]** x 8
- [FF]** x 8
- [GG]** x 8



STEP 27 Attach the Roof Cover 1 **N1** on top of the roof to Connector 10 **Q10** under the roof using two (2) M6 Flat Washers **[FF]** and two (2) M6 x 45 Bolts **[CC]**. Screw the Hook **T** into the bottom of Connector 10 **Q10**.

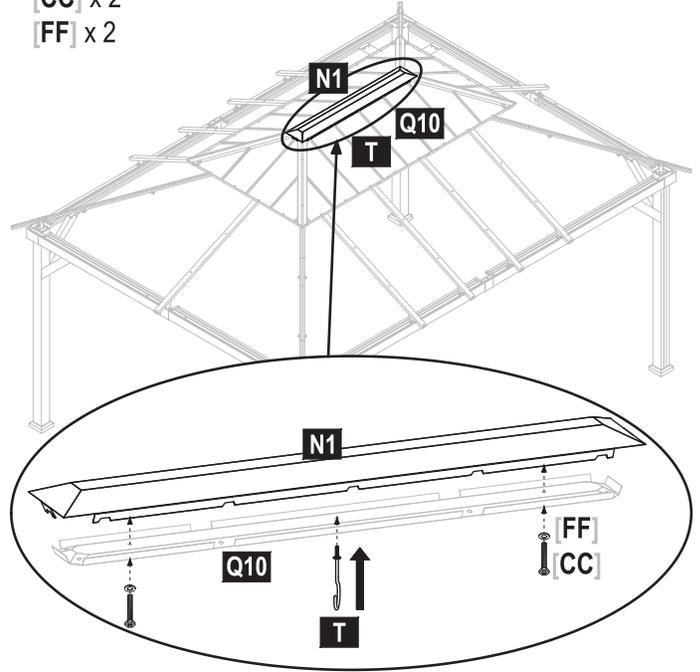
- [CC]** x 2
- [FF]** x 2



STEP 28 Assemble four (4) Connector 4s **Q4** and three (3) Top Beam 5s **J5** in this order: **Q4, J5, Q4, J5, Q4, J5, and Q4**. Attach all pieces together using six (6) M6 Flat Washers **[FF]** and six (6) M6 x 20 Bolts **[AA]**. Repeat this process to create four (4) assemblies.

Attach each assembly to the gazebo using one (1) M6 Flat Washer **[FF]** and one (1) M6 x 20 Bolt **[AA]** per hole.

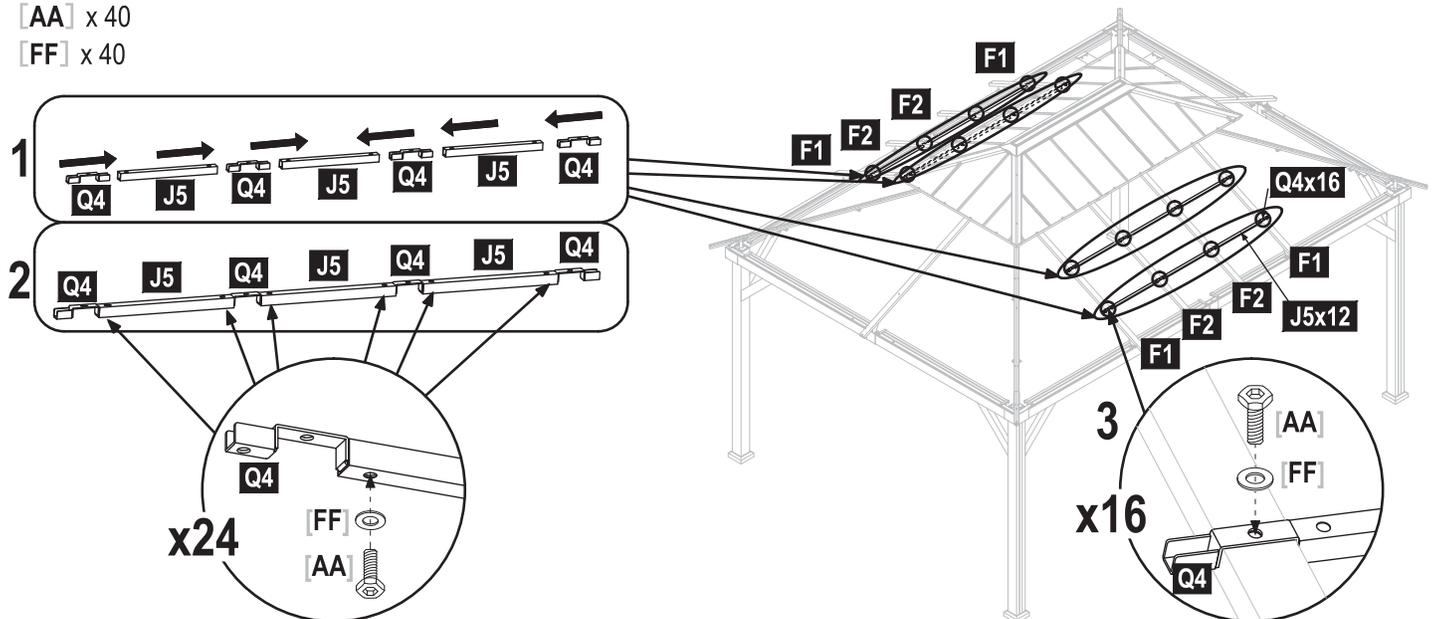- [AA]** x 40
- [FF]** x 40




STEP 29 Attach four (4) Connector 4s **Q4** and three (3) Roof Lower Border 5s **K5** in this order: **Q4**, **K5**, **Q4**, **K5**, **Q4**, **K5**, and **Q4**. Repeat to make a second assembly.

Attach both assemblies to the gazebo using one (1) M6 Flat Washer **FF** and one (1) M6 x 20 Bolt **AA** on each Connector 4 **Q4**.

[AA] x 8

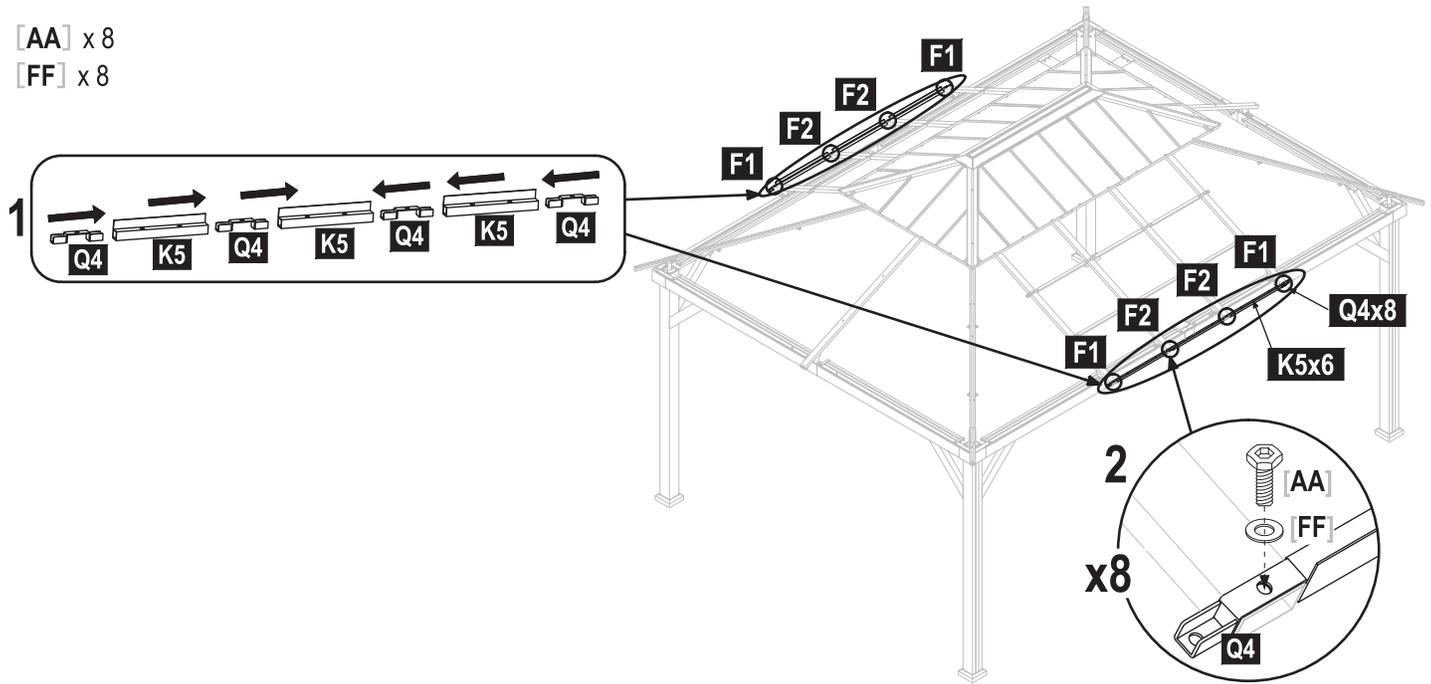[FF] x 8




STEP 30 Connect two (2) Top Beam 3s **J3** with one (1) Connector 4 **Q4** using two (2) M6 Flat Washers **FF** and two (2) M6 x 20 Bolts **AA**. Use one (1) M6 Flat Washer **FF** and one (1) M6 x 20 Bolt to attach the Connector 4 **Q4** on the assembly to Middle Cross Beam 1 **F1**. Repeat to make another assembly.

Attach to the Connector 5s **Q5** on short sides of the gazebo using two (2) M6 Flat Washers **FF** and two (2) M6 x 20 Bolts **AA**.

Attach one Top Beam 1 **J1** to the same Connector 5s **Q5** and Connector 4s **Q4** on the other side using two (2) M6 Flat Washers **FF** and two (2) M6 x 20 Bolts **AA**.

[AA] x 18

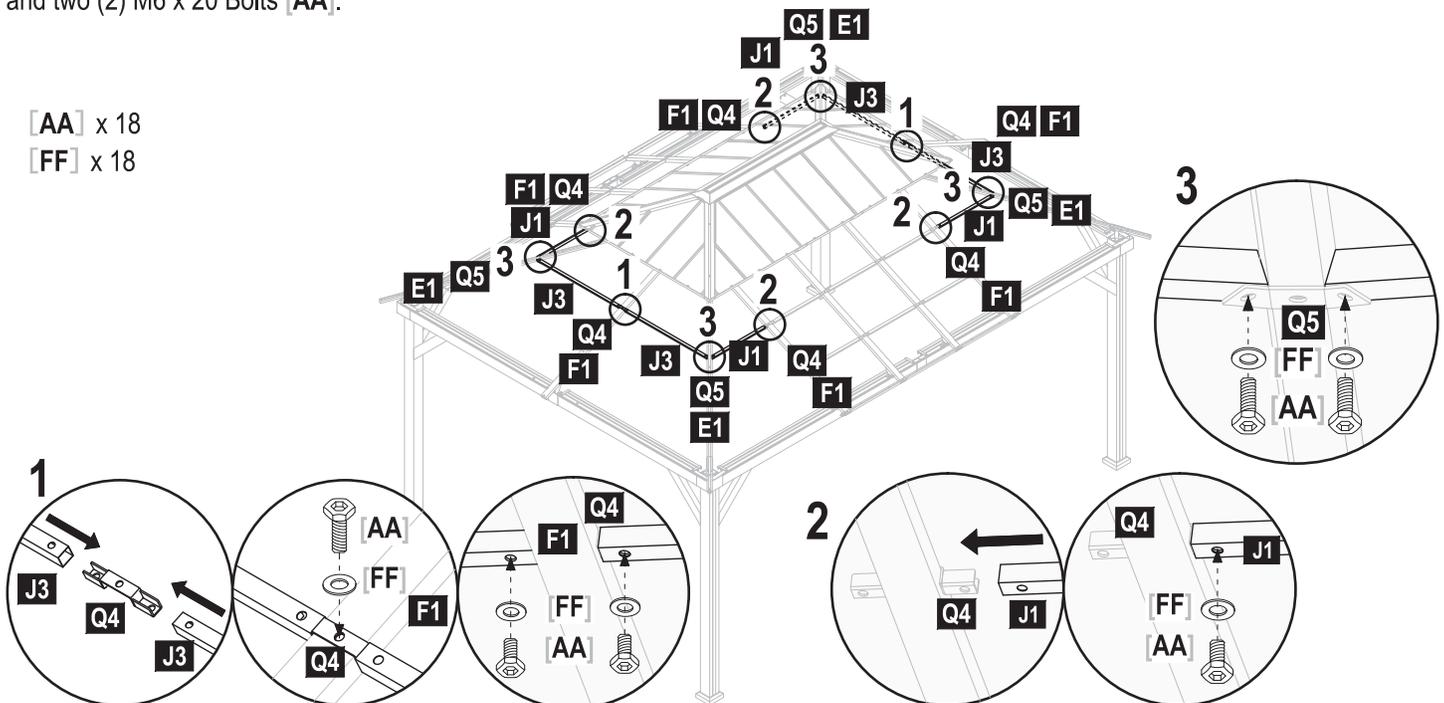
[FF] x 18



STEP 31 Connect two (2) Top Beam 4s **J4** with one (1) Connector 4 **Q4** using two (2) M6 Flat Washers **FF** and two (2) M6 x 20 Bolts **AA**. Use one (1) M6 Flat Washer **FF** and one (1) M6 x 20 Bolt to attach the Connector 4 **Q4** on the assembly to Middle Cross Beam 1 **F1**. Repeat to make another assembly. Attach to the Connector 5s **Q5** on short sides of the gazebo using two (2) M6 Flat Washers **FF** and two (2) M6 x 20 Bolts **AA**.

Attach one Top Beam 2 **J2** to the same Connector 5s **Q5** and Connector 4s **Q4** on the other side using two (2) M6 Flat Washers **FF** and two (2) M6 x 20 Bolts **AA**.

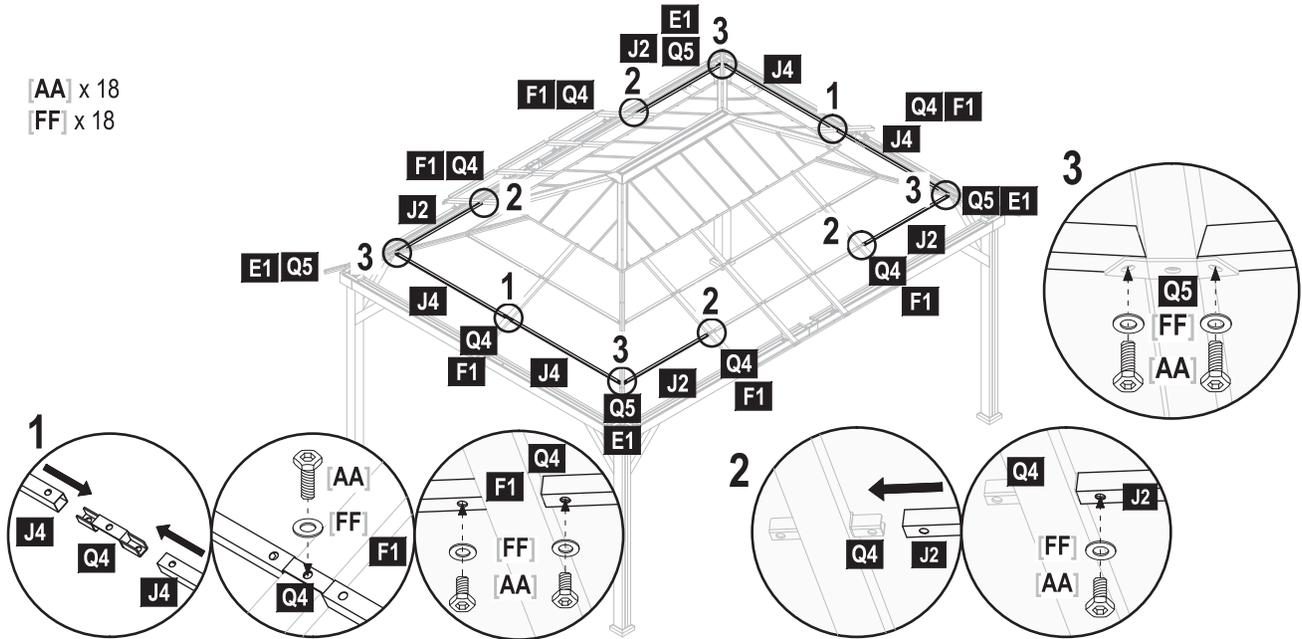AA x 18
FF x 18




STEP 32 Slide one (1) Roof Lower Border 1 **K1** and one (1) Roof Lower Border 2 **K2** onto a one (1) Connector 4 **Q4**. Attach the Connector 4 **Q4** to the Middle Cross Beam **F1** on the short side of the gazebo by using one (1) M6 Flat Washers **FF** and one (1) M6 x 20 Bolts **AA**.

Slide one (1) Roof Lower Border 3 **K3** and one (1) Roof Lower Border 4 **K4** onto the Connector 4s **Q4** on the long sides of the gazebo, overlapping at the corners.

Use one (1) M6 Flat Washers **FF** and one (1) M6 x 20 Bolts **AA** to connect overlapping pieces at each corner.

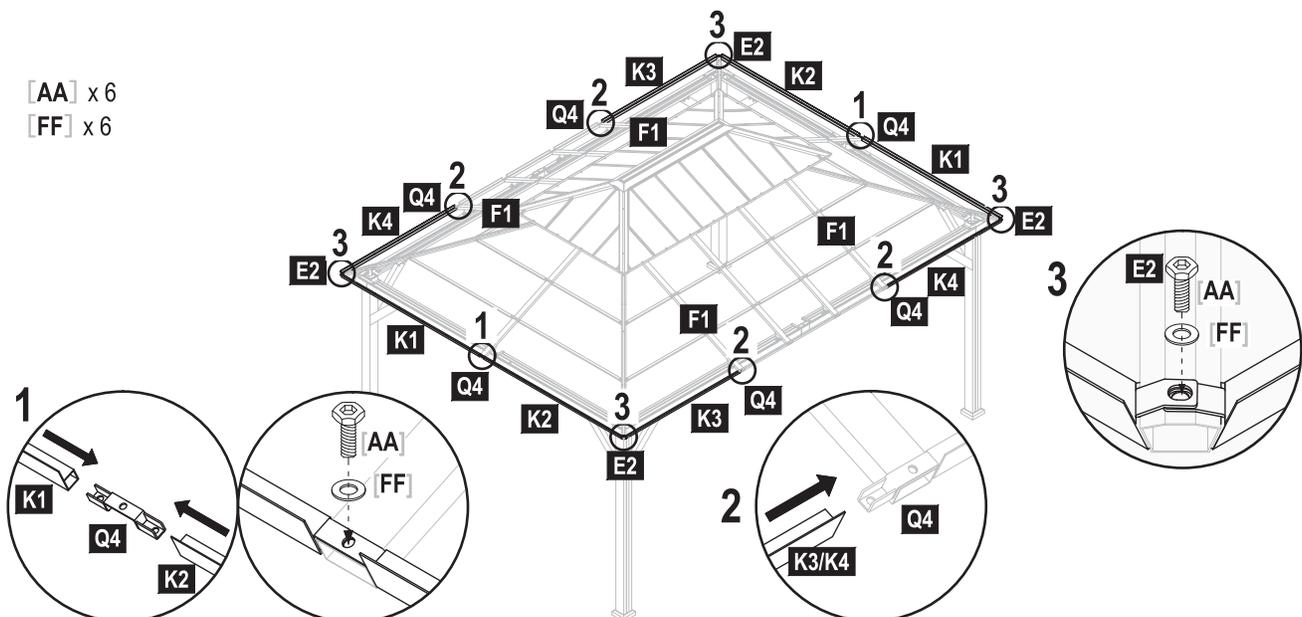
AA x 6
FF x 6



STEP 33 Attach a Connector 3 **Q3** over the connections between the Roof Lower Borders around the gazebo using two (2) M6 Flat Washers **[FF]** and two (2) M6 x 20 Bolts **[AA]** each.

[AA] x 20

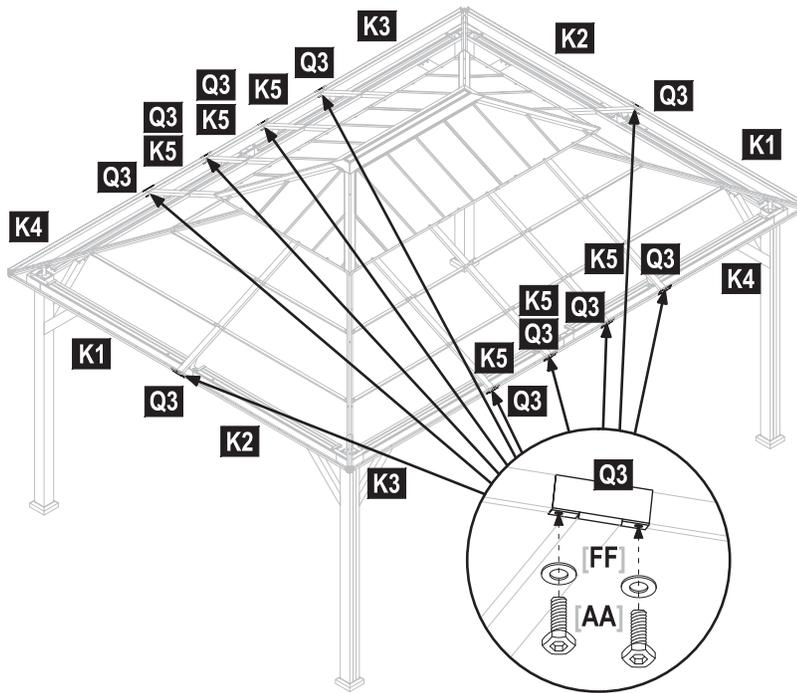[FF] x 20




STEP 34 Attach Roof Plates **R1 - R7** to the long sides of the gazebo from left to right in this order: **R6, R4, R2, R1, R1, R1, R3, R5**, and **R7**. Use forty-four (44) M6 Flat Washers **[FF]** and forty-four (44) M6 x 20 Bolts **[AA]** to make all of the connections along the bottom and sides. Use sixteen (16) Plastic Clips **[HH]** to make all of the connections on the top.

[AA] x 44


[FF] x 44

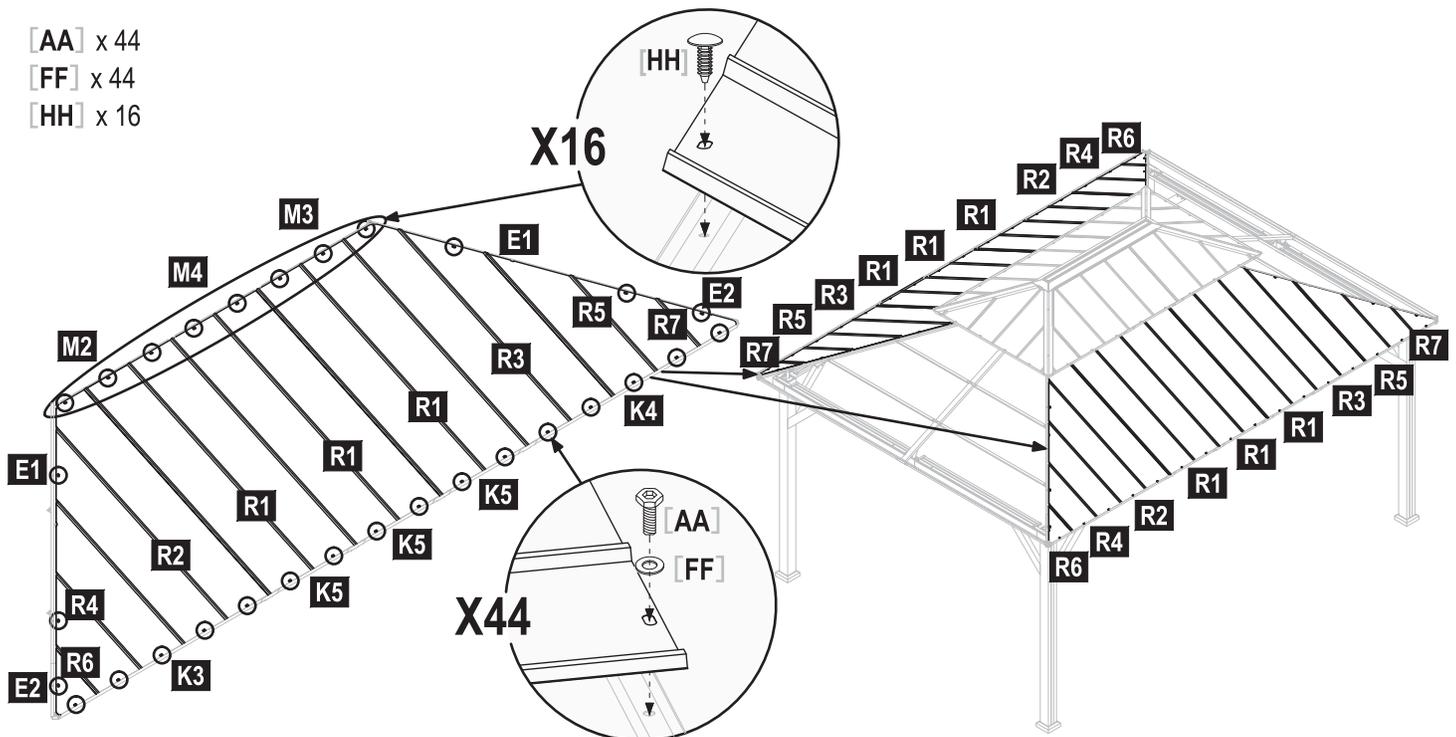[HH] x 16




STEP 35 Attach Roof Plates **R1 - R7** to the long sides of the gazebo from left to right in this order: **R6**, **R4**, **R2**, **R1**, **R3**, **R5**, and **R7**. Use thirty-six (36) M6 Flat Washers **[FF]** and thirty-six (36) M6 x 20 Bolts **[AA]** to make all of the connections along the bottom and sides. Use eight (8) Plastic Clips **[HH]** to make all of the connections on the top.

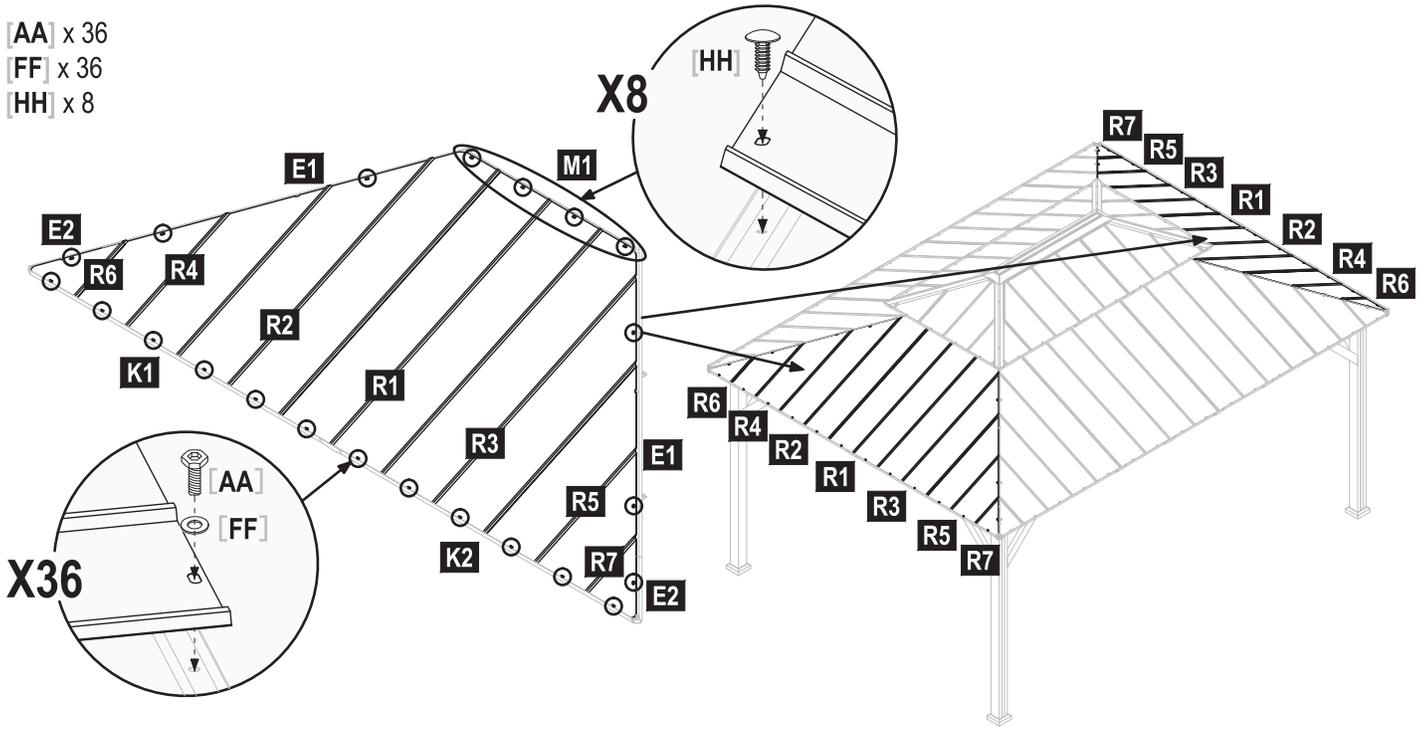- [AA]** x 36
- [FF]** x 36
- [HH]** x 8




STEP 36 Attach one (1) Roof Cover 2 **N2** over each corner of the lower roof using two (2) M6 Sealant Washers **[GG]**, two (2) M6 Flat Washers **[FF]**, and two (2) M6 x 45 Bolts **[CC]** each.

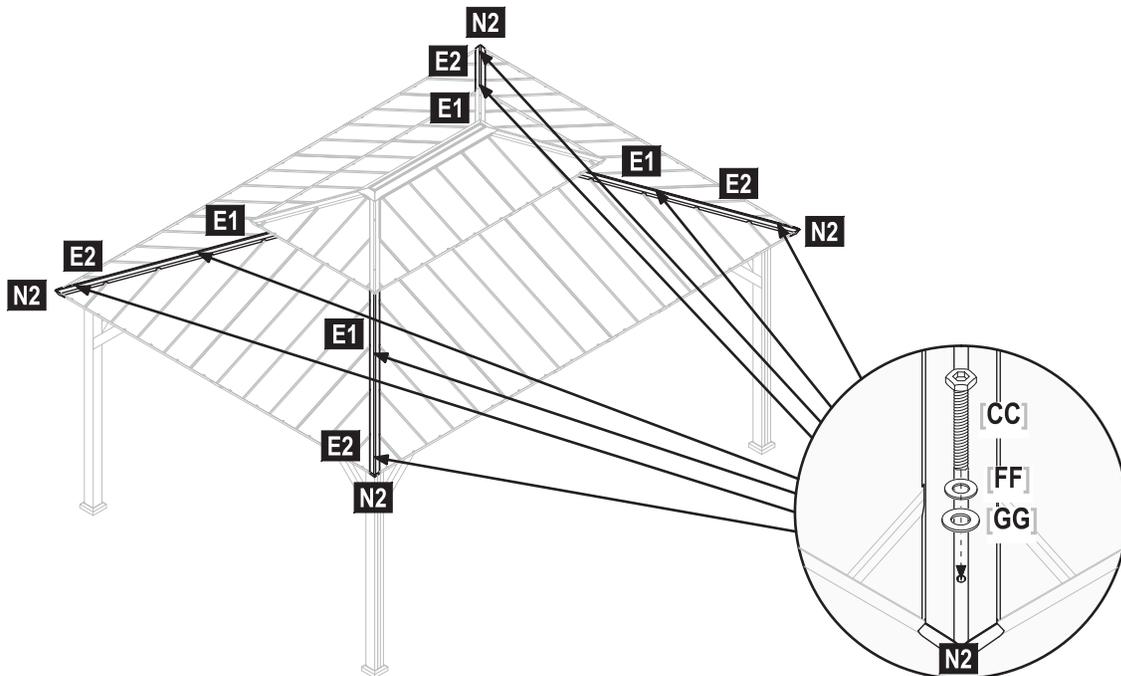- [CC]** x 8
- [FF]** x 8
- [GG]** x 8




STEP 37 Attach the Electrical Power Cover **U** over the power outlet using four (4) M3x9 Screws **EE**.

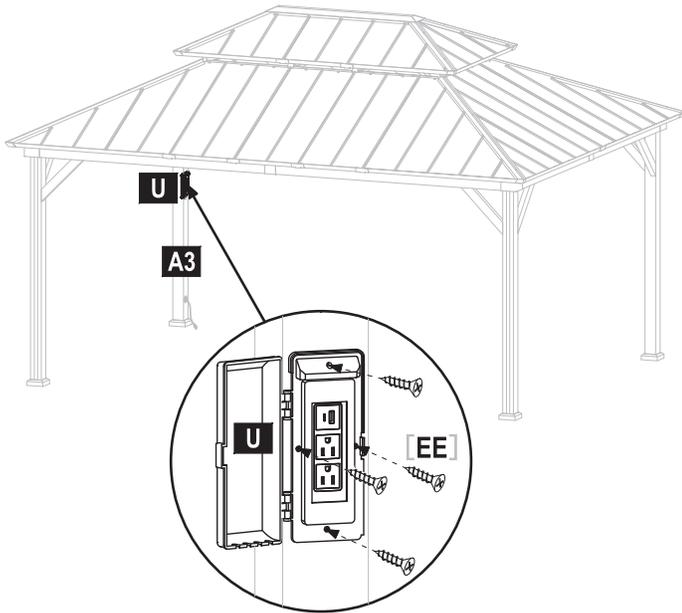EE x 4




STEP 38 Slide the Foot Cover **C** up to expose the Foot Base **B**. Insert two (2) M6x60 Concrete Anchors **KK** per Foot Base **B**. Slide the Foot Cover **C** back into place.

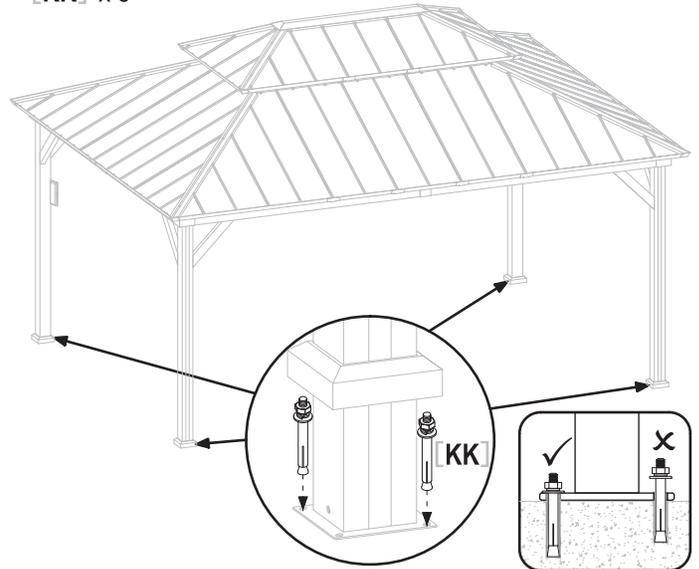KK x 8






STEP 39 Attach 60 Hooks **QQ** to the straps on the Privacy Curtain **V**, and hang the netting on the Mosquito Net Rods **H1 + H2** (the inner rod).

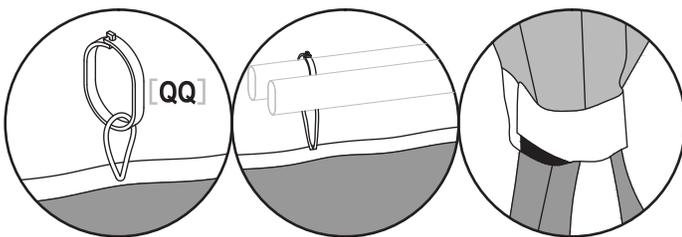QQ x 60



STEP 40 Attach 60 Hooks **QQ** to the straps on the Mosquito Netting **Y**, and hang the netting on the Mosquito Net Rods **H1 + H2** (the outer rod).

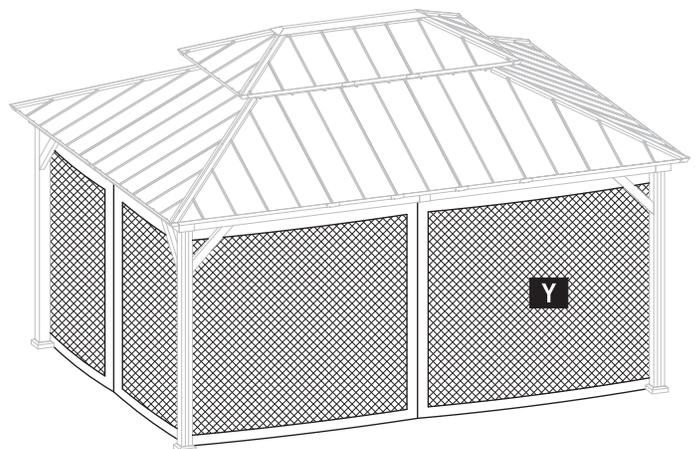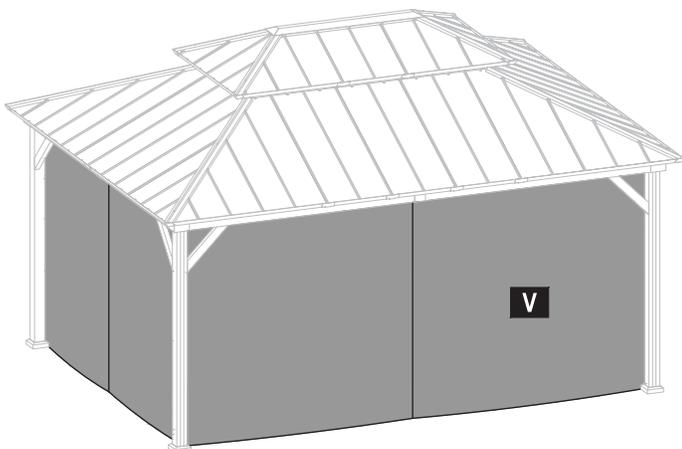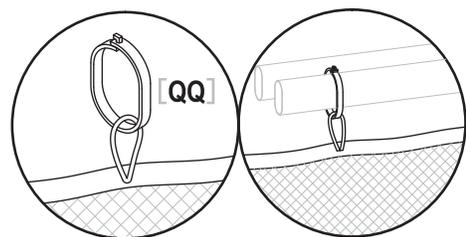QQ x 60



Outdoor Structure anchoring guide for anchoring gazebo to wood or concrete: If step 38, on page 19 in the assembly instructions is not properly completed, this will void the warranty.



WARNING! If your gazebo is not properly anchored, damage could occur. It is highly recommended for maximum safety that you mount and secure to wood or concrete footers. This is far better and safer than using ground stakes. The following are some examples of how to mount the structure to wood or concrete surfaces. Refer to local building codes or consider consulting a licensed contractor for assistance in the anchoring of this product.

WOOD	CONCRETE
<p>Anchors should be drilled into joists or reinforced blocking (not only deck boards).</p> <p>Recommended Hardware: Expansion Bolt</p>	<p>Pre-drill holes for appropriately sized concrete anchors.</p> <p>Recommended Hardware: Expansion Bolt</p>

If digging for foundation, please double check for possibility of any underground utilities such as gas, telephone, cable or sprinkler lines. Refer to your local building and city codes, ordinances, neighborhood covenants, or height restrictions regarding this type of structure for guidance on acceptable installation requirements.

⚠ CAUTION

DO NOT climb or walk on roof for any reason.

- Our components are intended for privacy, decorative and ornamental use only.
- Product is NOT INTENDED for the following:
 - A safety barrier to prevent unsupervised access to pools, hot tubs, spas or ponds.
 - As load bearing support for a building, structure, heavy objects or swings.
 - Used in structures that trap wind, rain or snow that would create extra load on the product.
 - Accumulated snow must be removed from roof.
 - DO NOT climb or walk on roof for any reason.

LIMITED WARRANTY

We warrants this product against defects in materials and workmanship for a period of one (1) year from the original date of purchase. To the extent any such defects occur, our products will send the appropriate replacement part(s) at no charge.

This warranty does not cover:

- Inspection costs or labor for replacement of any defective parts);
- Incidental or consequential damages;
- Cosmetic defects which DO NOT affect performance;
- Normal wear and tear;
- Damage due to vandalism; acts of nature, including but not limited to wind, storms, hail, floods;
- Improper assembly, installation, or use;
- Discoloration or fading of the finish as a result of exposure to chemicals, spills, pool or salt water
- Corrosion/ rust.

Your product has been designed for safety and quality.

Any modifications made to the original product could compromise its structural integrity or function, and could lead to product failure or personal injury. As such, modifying this product voids any and all warranties.

This product is warranted for RESIDENTIAL USE ONLY, and is not for commercial, contract or other non-residential purposes. Products disclaims all other representations and warranties of any kind, express or implied.

The warranty applies to the original purchaser and is non-transferable. It does not apply to purchases of display models, or when the product is sold on clearance or "as is".

We makes no warranty whatsoever in respect to accessories or parts not supplied with it. This warranty shall apply only within the boundaries of the United States of America and Canada. This warranty gives the original purchaser specific rights, and the original purchaser may also have other rights, which vary from state to state.

